

HCD-MC3AV

SERVICE MANUAL

Ver 1.1 2001.10

*US Model
Canadian Model
Australian Model*



- HCD-MC3AV is the tuner, deck, CD and amplifier section in MHC-MC3AV.

Manufactured under license from Dolby Laboratories Licensing Corporation.
“DOLBY” and the double-D symbol  and “PRO LOGIC” are trademarks of Dolby Laboratories Licensing Corporation.

CD Section	Model Name Using Similar Mechanism	HCD-F150/FR10
	CD Mechanism Type	CDM-46B1
Tape deck Section	Optical Pick-up Name	KSS-213BA/F-NP
	Model Name Using Similar Mechanism	HCD-DR8AV
	Tape Transport Mechanism Type	TCM-230AWR2/230PWR2

SPECIFICATIONS

Amplifier section

U.S.A models:

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 8 Ω loads both channels driven, from 70 – 20,000 Hz; rated 80 W per channel minimum RMS power, with no more than 0.9% total harmonic distortion from 250 mW to read output.

North American model:

Front Speaker:

Continuous RMS power output
80 + 80 W
(8 Ω at 1 kHz, 10% THD)

Total harmonic distortion
less than 0.09%
(8 Ω at 1 kHz, 40 W)

Center Speaker:

Continuous RMS power output
20 W
(8 Ω at 1 kHz, 1% THD)

Rear Speaker:

Continuous RMS power output
10 + 10 W
(16 Ω at 1 kHz, 1% THD)

Front Speaker:

DIN power output (Rated)
70 + 70 W
(8 Ω at 1 kHz, DIN)
Continuous RMS power output (Reference)
80 + 80 W
(8 Ω at 1 kHz, 10% THD)

Center Speaker:

DIN power output (Rated)
17.5 W
(8 Ω at 1 kHz, DIN)
Continuous RMS power output (Reference)
20 W
(8 Ω at 1 kHz, 10% THD)

Rear Speaker:

DIN power output (Rated)
8 + 8 W
(8 Ω at 1 kHz, DIN)
Continuous RMS power output (Reference)
10 + 10 W
(8 Ω at 1 kHz, 10% THD)

Australian model:

The following measured at AC 240 V, 60 Hz;

— Continued on next page —

MINI HI-FI COMPONENT SYSTEM

9-928-900-12

2001J1600-1

© 2001.10

Sony Corporation

Home Audio Company

Published by Sony Engineering Corporation

SONY®

The following measured at AC 220 V, 60 Hz;

Front Speaker:

DIN power output (Rated)	60 + 60 W (8 Ω at 1 kHz, DIN)
Continuous RMS power output (Reference)	70 + 70 W (8 Ω at 1 kHz, 10% THD)

Center Speaker:

DIN power output (Rated)	15 W (8 Ω at 1 kHz, DIN)
Continuous RMS power output (Reference)	17.5 watts (8 Ω at 1 kHz, 10% THD)

Rear Speaker:

DIN power output (Rated)	7 + 7 W (8 Ω at 1 kHz, DIN)
Continuous RMS power output (Reference)	8.5 + 8.5 W (8 Ω at 1 kHz, 10% THD)

Inputs

VIDEO/MD IN (phono jack):	voltage 250 mV/450 mV, impedance 47 k Ω
---------------------------	---

Outputs

VIDEO/MD OUT (phono jack):	voltage 250 mV, impedance 1 k Ω
----------------------------	---

PHONES (stereo phone jacks): accepts headphones of 8 W or more

SPEAKER:	accepts impedance of 8 to 16 Ω
REAR SPEAKER:	accepts impedance of 16 Ω
CENTER SPEAKER:	accepts impedance of 8 Ω
SUPER WOOFER:	voltage 1 V, impedance 1 k Ω

CD player section

System	Compact disc and digital audio system
Laser	Semiconductor laser (λ =780 nm) Emission duration: continuous Max. 44.6 μ W* * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.
Laser output	
Frequency response	2 Hz – 20 kHz ($\pm$ 0.5 dB)
Wavelength	780 – 790 nm
Signal-to-noise ratio	More than 90 dB
Dynamic range	More than 90 dB
CD OPTICAL DIGITAL OUT (Square optical connector jack, rear panel)	
Wave length	600 nm
Output level	–18 dBm

Tape player section

Recording system	4-track 2-channel stereo
Frequency response (DOLBY NR OFF)	40 – 13,000 Hz ($\pm$ 3 dB), using Sony TYPE I cassette 40 – 14,000 Hz ($\pm$ 3 dB), using Sony TYPE II cassette

Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range	87.5 – 108.0 MHz
Antenna	FM lead antenna
Antenna terminals	75 W unbalanced
Intermediate frequency	10.7 MHz

AM tuner section

Tuning range	530 – 1,710 kHz (with the interval set at 10 kHz) 531 – 1,710 kHz (with the interval set at 9 kHz)
Antenna	AM loop antenna
Antenna terminals	External antenna terminal
Intermediate frequency	450 kHz

General

Power requirements	
North American model:	120 V AC, 60 Hz
Australian model:	220 - 240 V AC, 50/60 Hz
Power consumption	
U.S.A models:	250 W
Canadian models:	250 VA
Australian models:	250 W
Dimensions (w/h/d)	Approx. 280 $\times$ 373 $\times$ 437 mm (11 ^{1/8} $\times$ 14 ^{3/4} $\times$ 17 ^{1/4} in)
Mass	Approx. 12 kg (26 lbs. 7 oz)
Supplied accessories:	AM loop antenna (1) Remote RM-SF250AV (1) Batteries (2) FM lead antenna (1) Speaker cords (5) Front speaker pads (8) Center speaker pads (4)

Design and specifications are subject to change without notice.


For customers in Canada (For MHC-MC3AV)

Use only the supplied SS-SR50 rear surround speaker for connection to the REAR SPEAKER connector, the supplied SS-CN50 center surround speaker for connection to the CENTER SPEAKER connector on the MHC-MC3AV.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

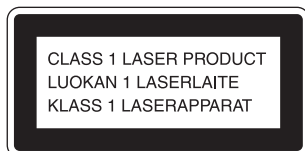

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

SAFETY CHECK-OUT


(US model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

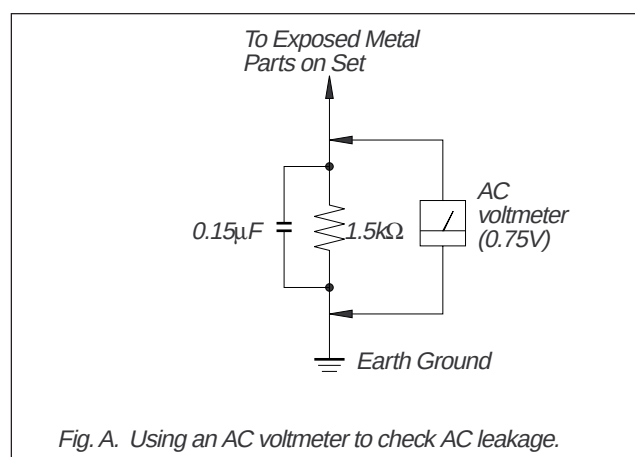

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the “S curve check” in “CD section adjustment” and check that the S curve waveform is output repeatedly.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing


- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

TABLE OF CONTENTS

1. GENERAL	
FRONT PANEL	5
REAR PANEL	6
2. DISASSEMBLY	8
3. TEST MODE	16
4. MECHANICAL ADJUSTMENTS	18
5. ELECTRICAL ADJUSTMENTS	
Deck Section	21
CD Section	25
6. DIAGRAMS	
6-1. Block Diagram CD Section	27
Block Diagram Main Section	29
Block Diagram Audio Section	31
6-2. Circuit Boards Location	33
6-3. Printed Wiring Board BD Section	35
6-4. Schematic Diagram BD Section	37
6-5. Printed Wiring Board CD Motor Section	39
6-6. Schematic Diagram CD Motor Section	41
6-7. Printed Wiring Board Audio Section	43
6-8. Schematic Diagram Audio Section	45
6-9. Printed Wiring Board Leaf SW Section	47
6-10. Schematic Diagram Leaf SW Section	49
6-11. Printed Wiring Board Main Section	51
6-12. Schematic Diagram Main (1/5) Section	53
6-13. Schematic Diagram Main (2/5) Section	55
6-14. Schematic Diagram Main (3/5) Section	57
6-15. Schematic Diagram Main (4/5) Section	59
6-16. Schematic Diagram Main (5/5) Section	61
6-17. Printed Wiring Board Panel Section	63
6-18. Schematic Diagram Panel Section	65
6-19. Printed Wiring Board Surround Amp Section	67
6-20. Schematic Diagram Surround Amp Section	69
6-21. Schematic Diagram Power Section	71
6-22. Printed Wiring Board Power Section	73
6-23. Waveforms	75
6-24. IC Pin Function Description	76
6-25. IC Block Diagrams	84
7. EXPLODED VIEWS	86
8. ELECTRICAL PARTS LIST	94

SECTION 1 GENERAL

FRONT PANEL

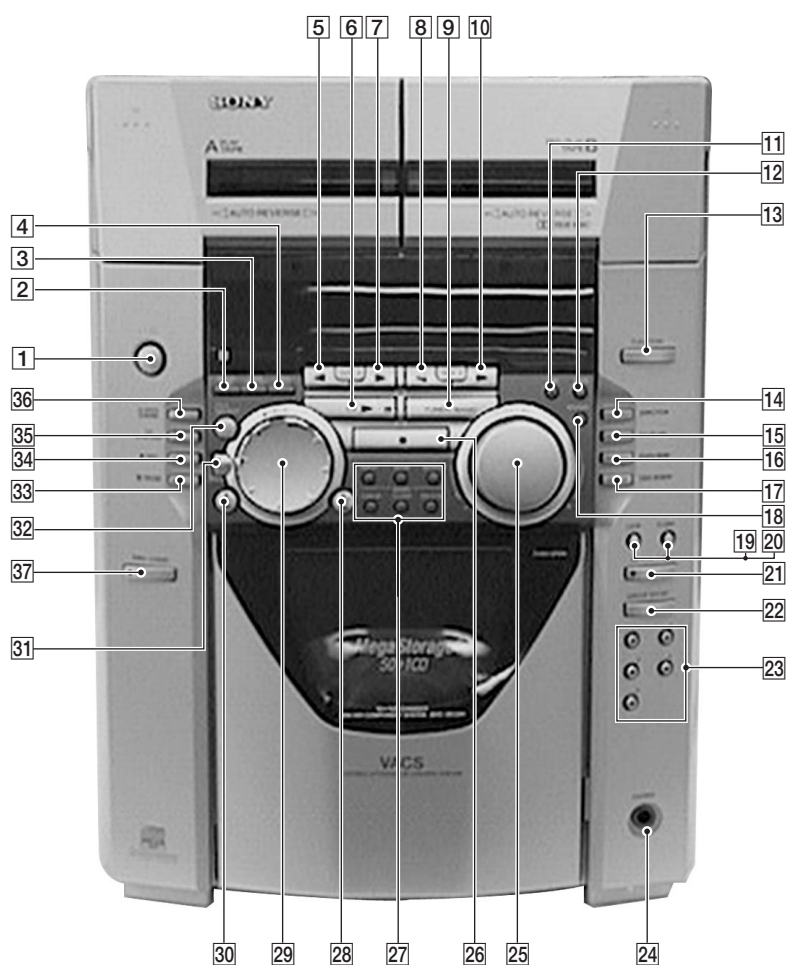

- | | |
|-------------------------------|--|
| 1 I/⏻ button | 20 FLASH button |
| 2 DISPLAY/MEMO button | 21 CD PLUS ONE button |
| 3 CLOCK TIMER SET button | 22 GROUP ENTRY button |
| 4 TIMER SELECT button | 23 Numeric buttons |
| 5 TAPE A ◀ button | 24 PHONES jack |
| 6 CD ▶ button | 25 VOLUME Knob |
| 7 TAPE A ▶ button | 26 STOP button |
| 8 TAPE B ◀ button | 27 INPUT, SCAN, SEARCH, CHECK, CLEAR, DELETE buttons |
| 9 TUNER/BAND button | 28 + ▶▶▶▶ button |
| 10 TAPE B ▶ button | 29 SELECTOR button |
| 11 SUR button | 30 ◀◀◀ - button |
| 12 DBFB button | 31 ENTER button |
| 13 FUNCTION button | 32 FILE SELECT button |
| 14 CONTINUE/DIRECTION button | 33 PAUSE button |
| 15 PROGRAM/DOLBY-NR button | 34 ● REC button |
| 16 SHUFFLE/STEREO/MONO button | 35 CD SYNCHRO button |
| 17 REPEAT/TUNER MEMORY button | 36 HI-SPEED DUBBING button |
| 18 GROOVE button | 37 PRO LOGIC button |
| 19 LOOP button | |


REAR PANEL




- 1 VIDEO/MD (AUDIO) jack
- 2 ANTENNA terminal
- 3 AC power cord
- 4 CENTER SPEAKER terminal
- 5 REAR SPEAKER terminal
- 6 FRONT SPEAKER terminal
- 7 CD DIGITAL OUT connector
- 8 SUPER WOOFER jack

Step 3: Setting the time

You must set the time before using the timer functions.

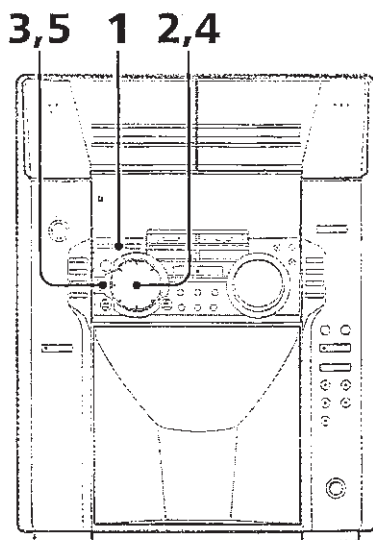


- 1** Press **CLOCK TIMER SET**.
The hour indication flashes.



- 2** Turn **SELECTOR** to set the hour.


- 3** Press **ENTER**.
The minute indication flashes.



- 4** Turn **SELECTOR** to set the minute.
- 5** Press **ENTER**.
The clock starts working.

Tips


- If you've made a mistake, start over from step 1.
- Setting the time deactivates the demo mode.
If you want to display the demo mode, press **DISPLAY/DEMO** when the power is off.
- The above explanation shows you how to set the time while the power is off. To change the time while the power is on, do the following:
 - 1 Press **CLOCK TIMER SET**.
 - 2 Turn **SELECTOR** to select "SET CLOCK".
 - 3 Press **ENTER**.
 - 4 Do steps 2 through 5 above.



Getting Started


SECTION 2 DISASSEMBLY

- This set can be disassembled in the order shown below.

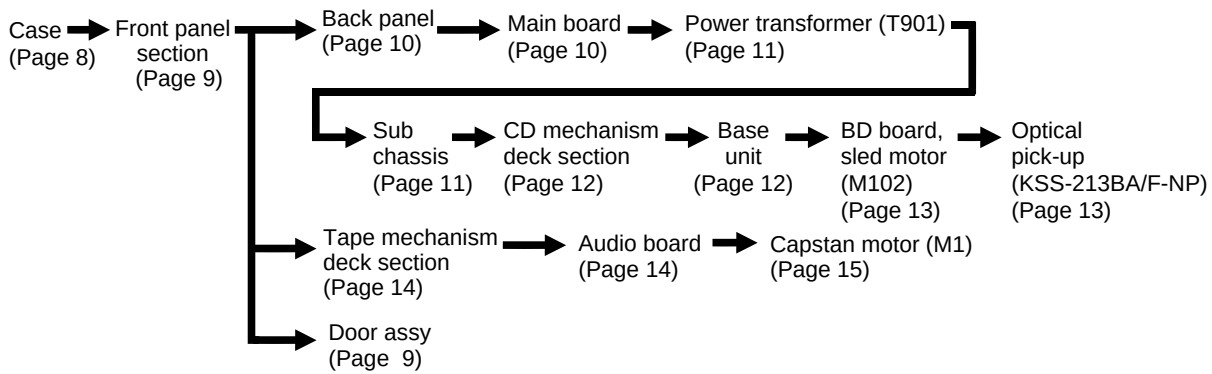


Note: Follow the disassembly procedure in the numerical order given.


2-1. CASE

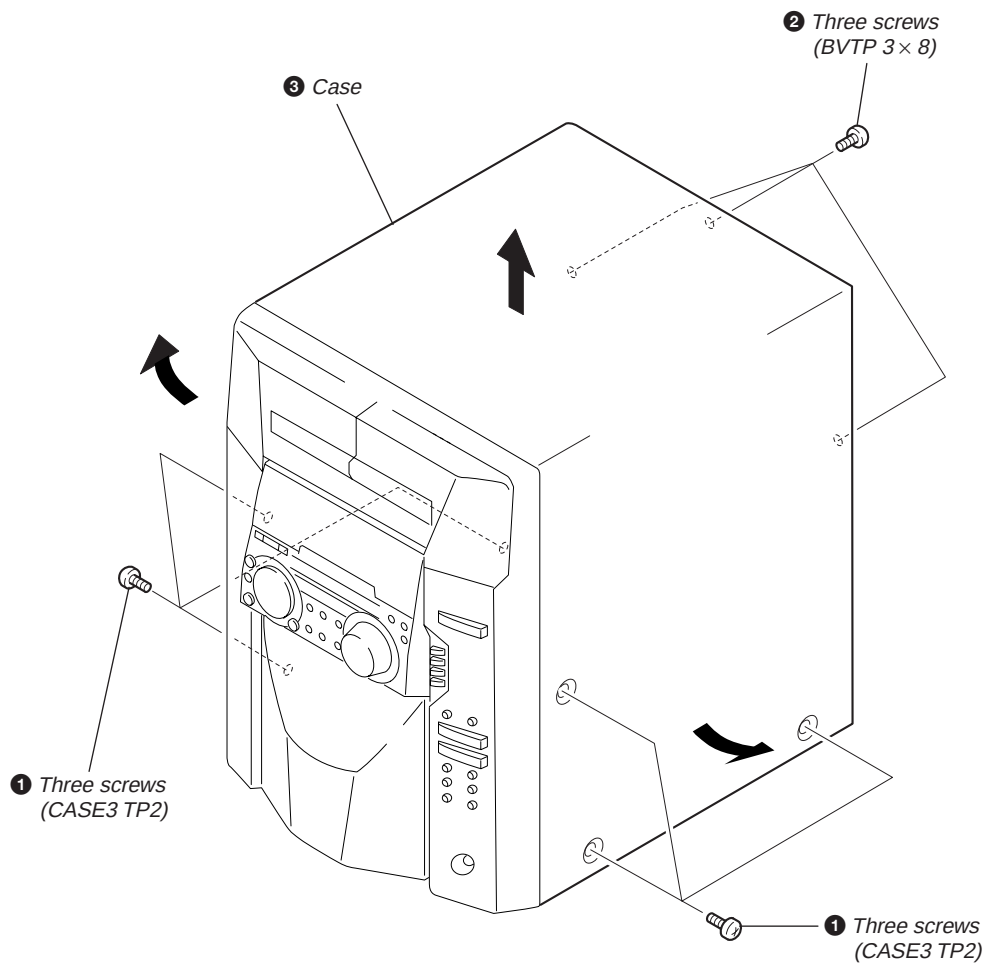


2-2. FRONT PANEL SECTION

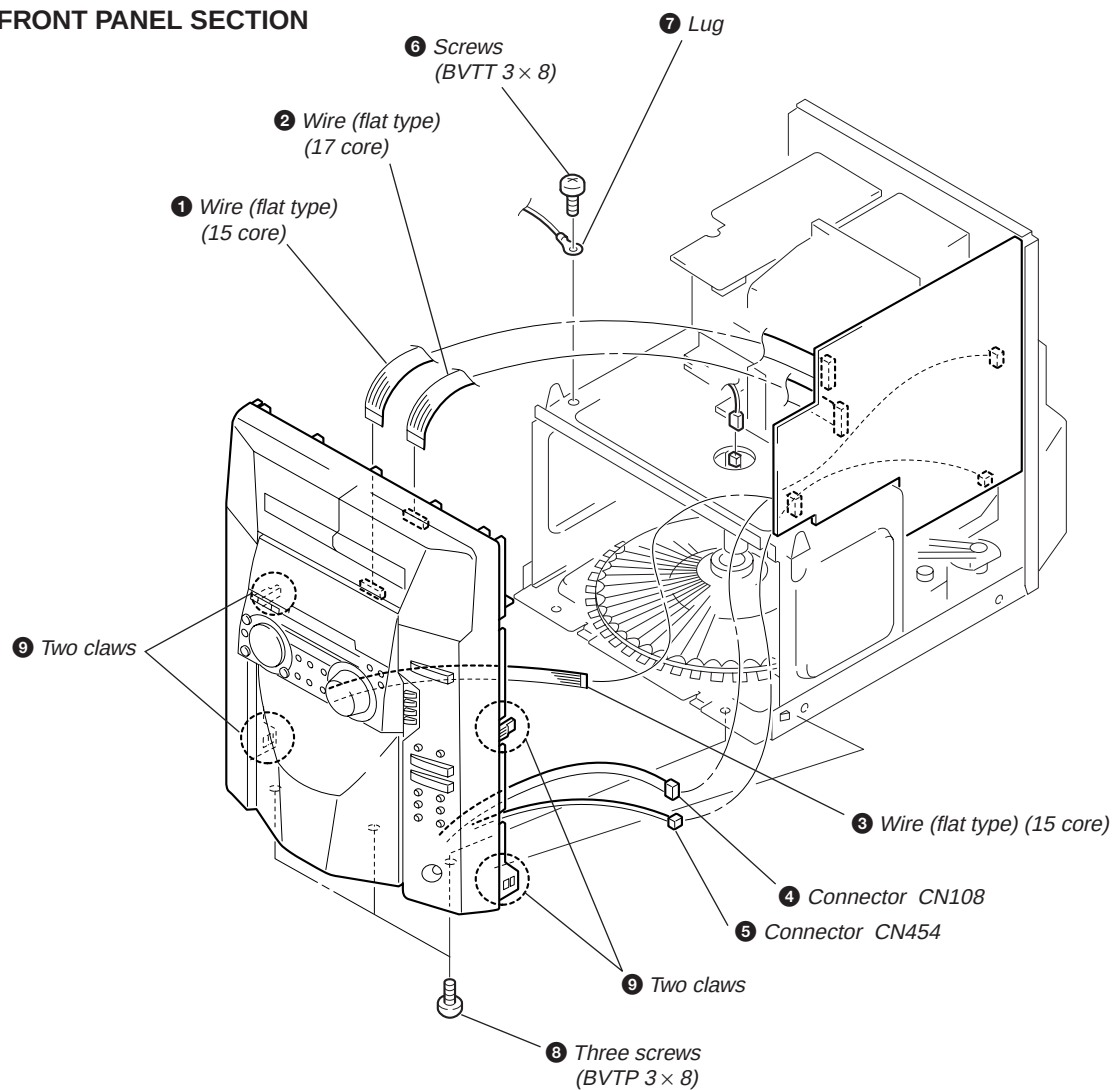


2-3. DOOR ASSY

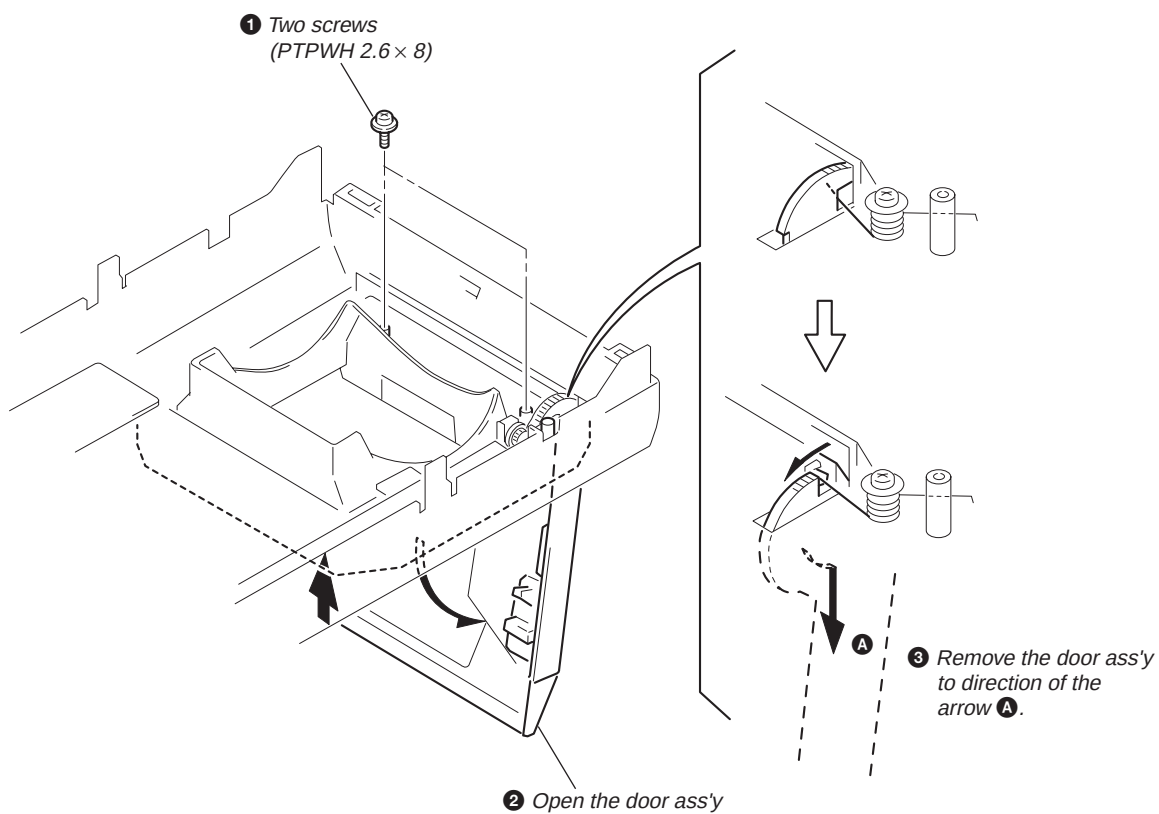


2-4. BACK PANEL

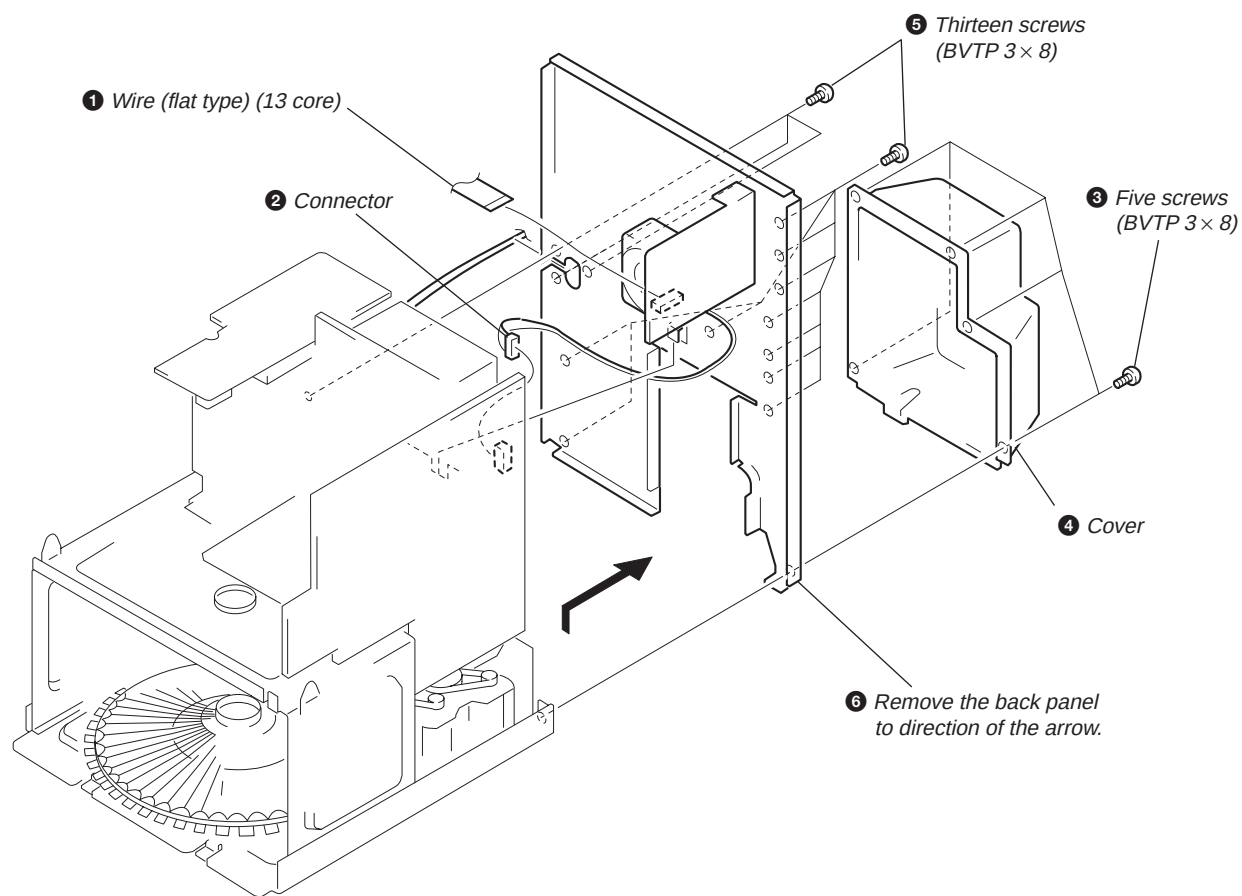


2-5. MAIN BOARD

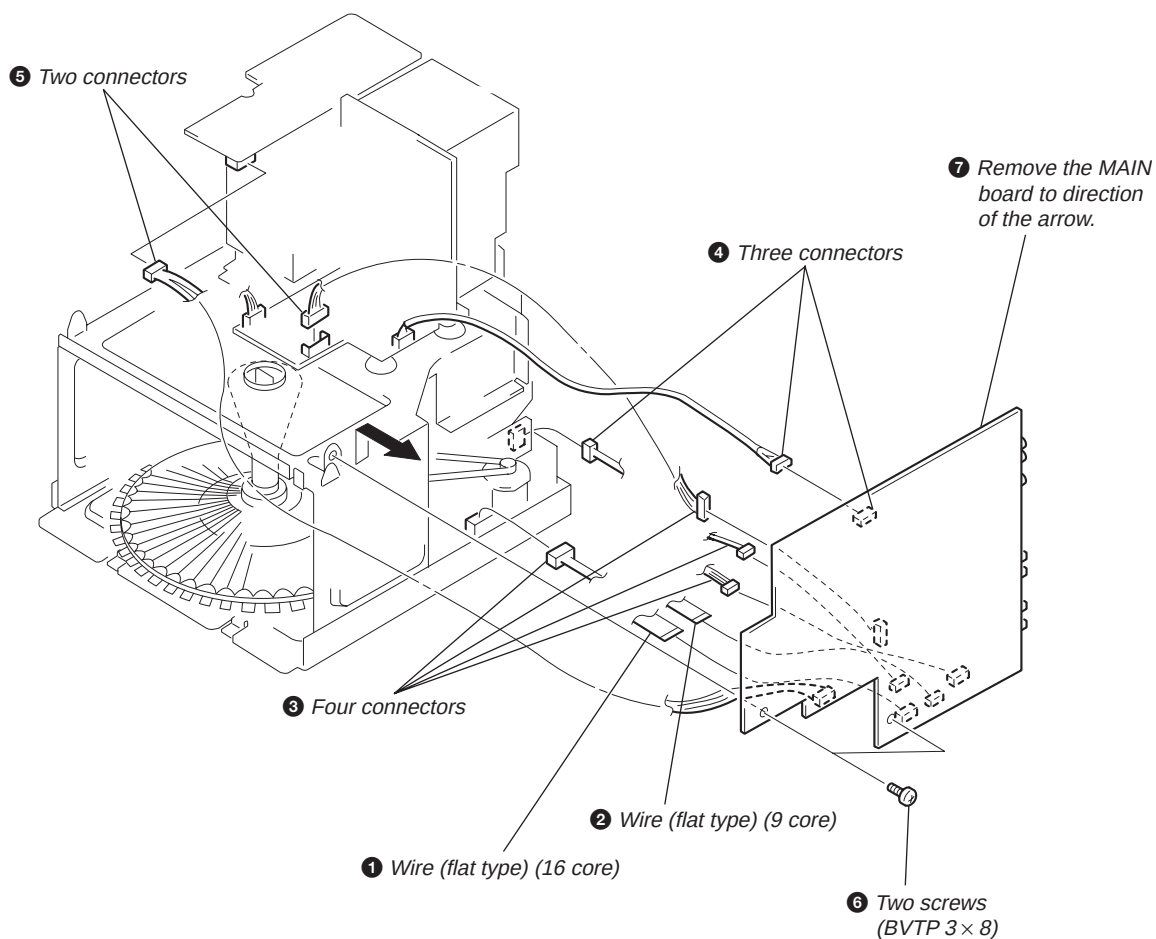


2-6. POWER TRANSFORMER (T991)

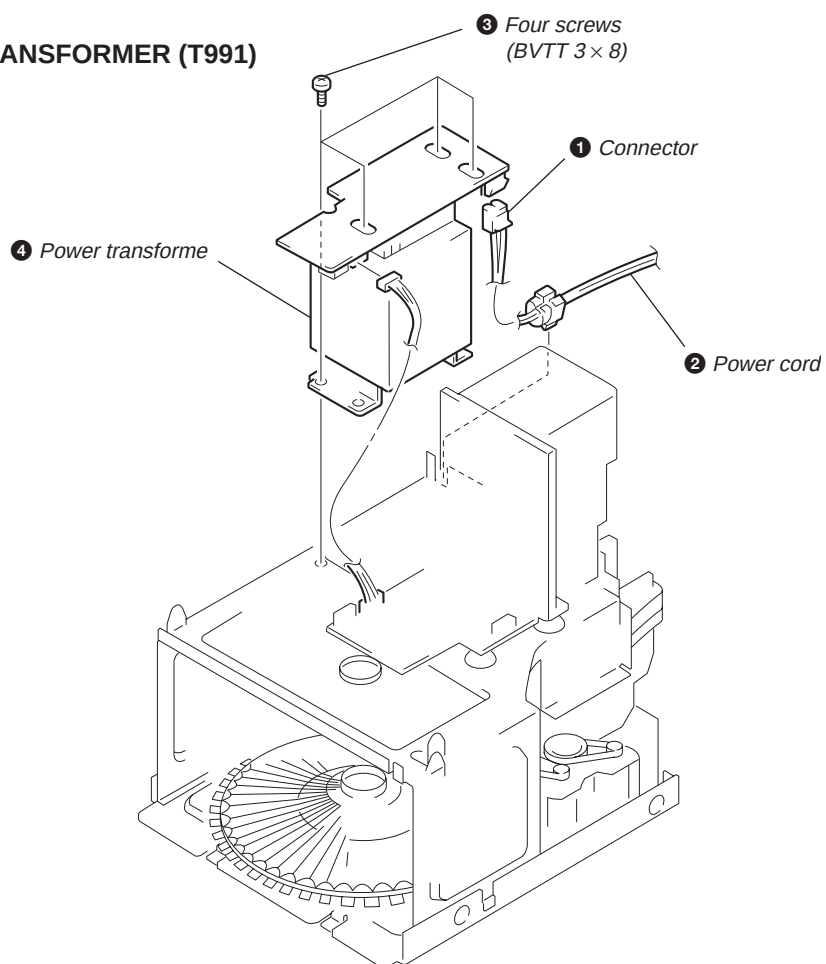


2-7. SUB CHASSIS

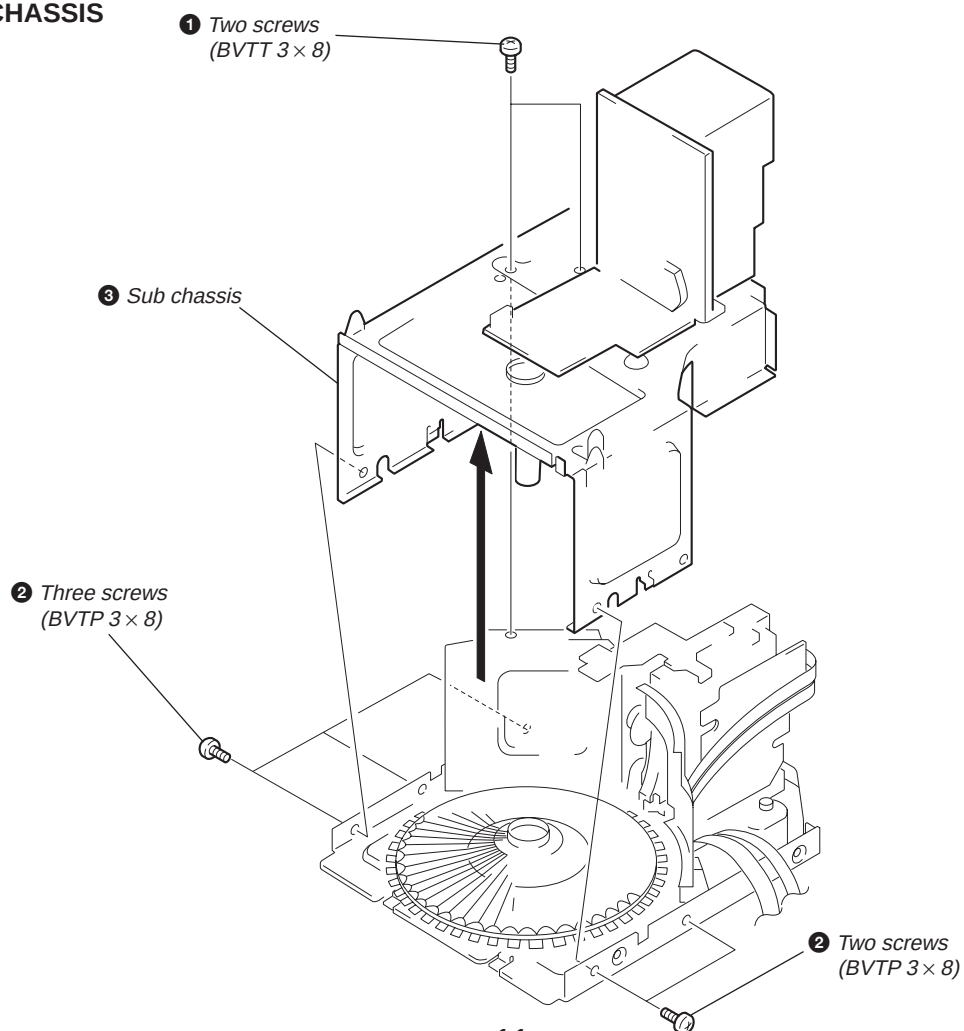


2-8. CD MECHANISM DECK SECTION

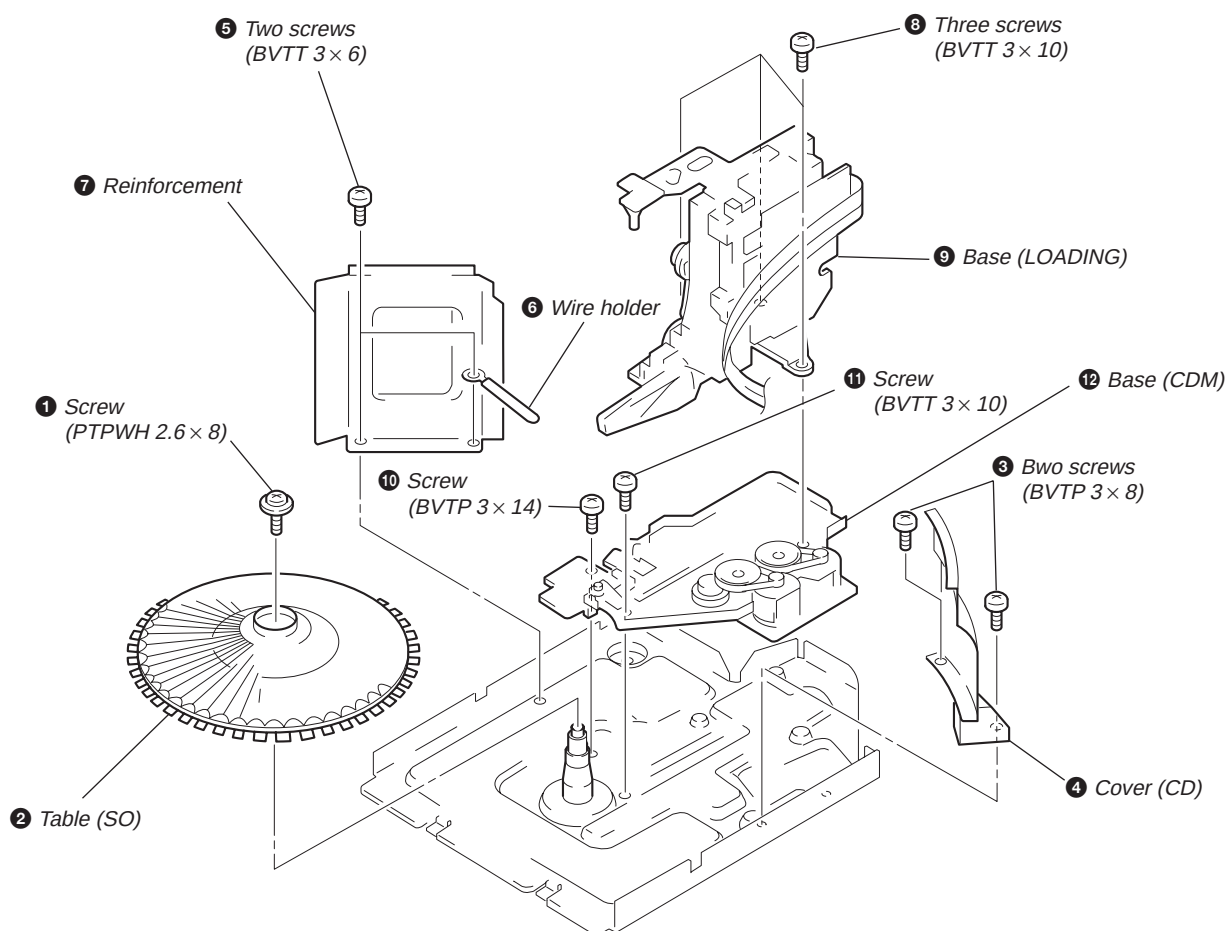


2-9. CD BASE UNIT

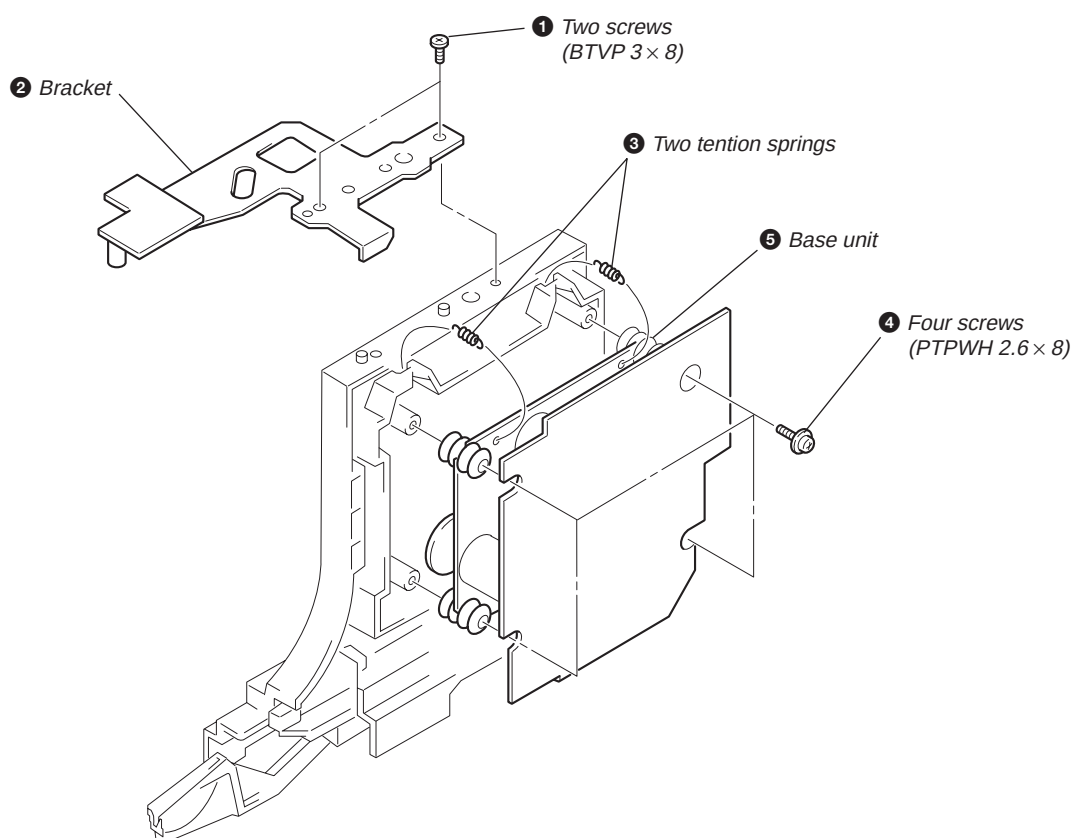


2-10. BD BOARD, SLED MOTOR (M102)

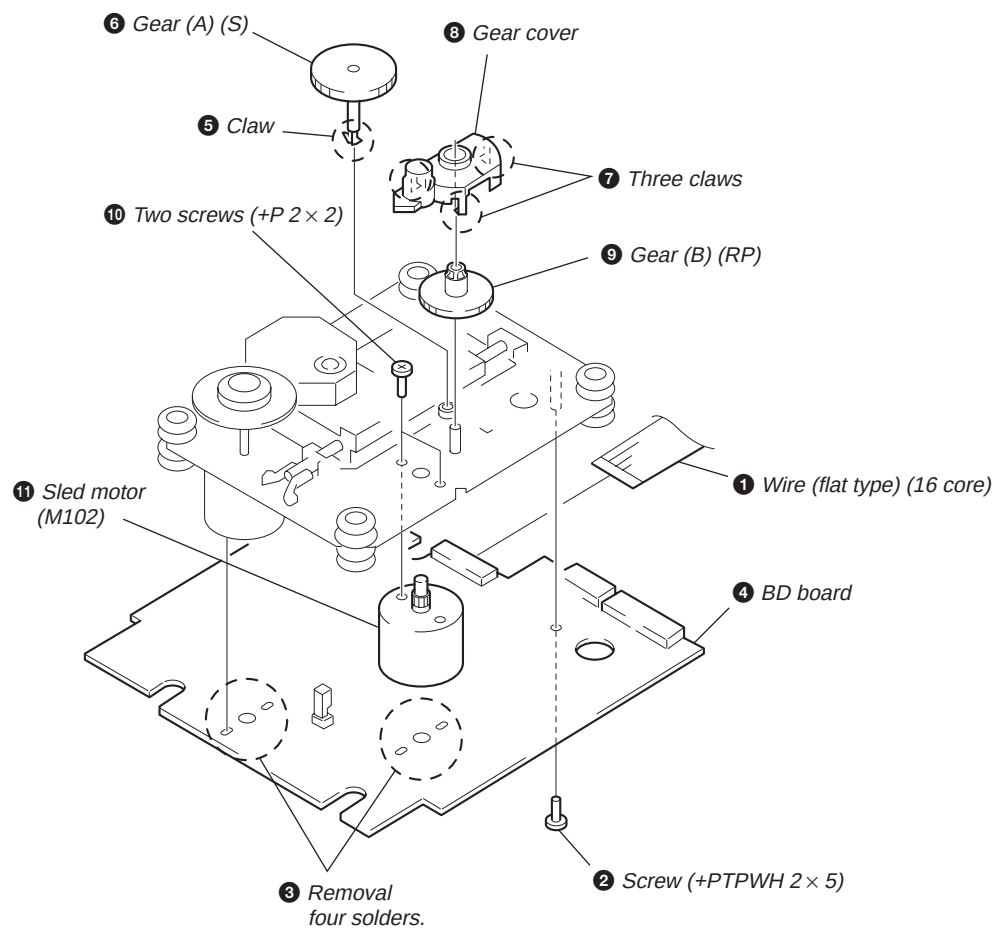


2-11. OPTICAL PICK-UP (KSS-213BA/F-NP)

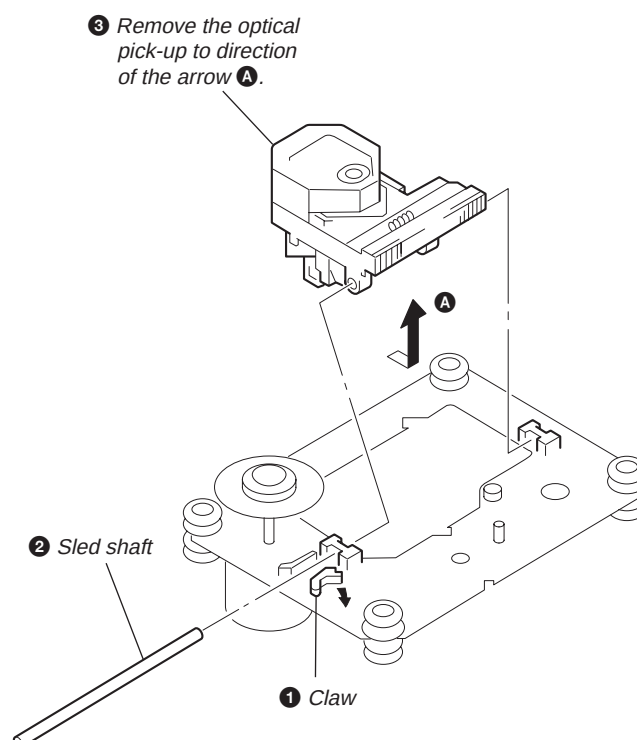


2-12. TAPE MECHANISM DECK SECTION

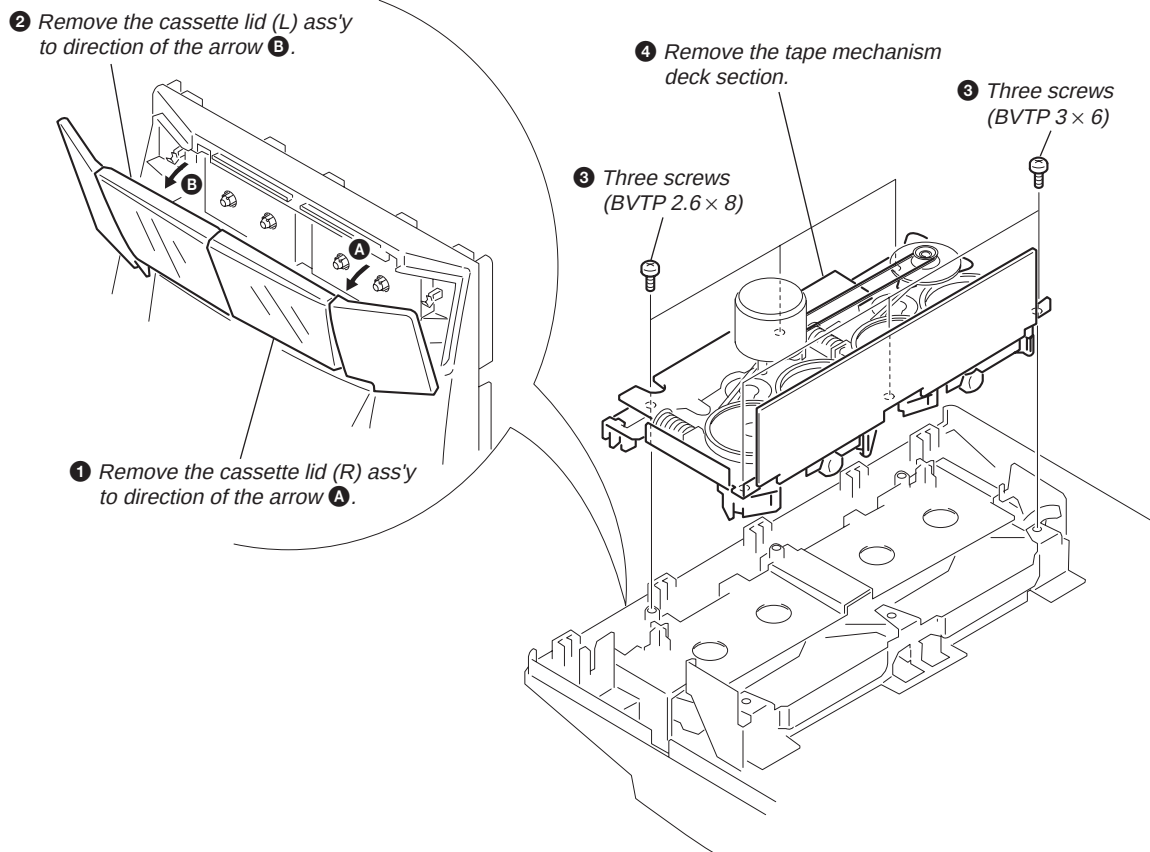


2-13. PANEL BOARD

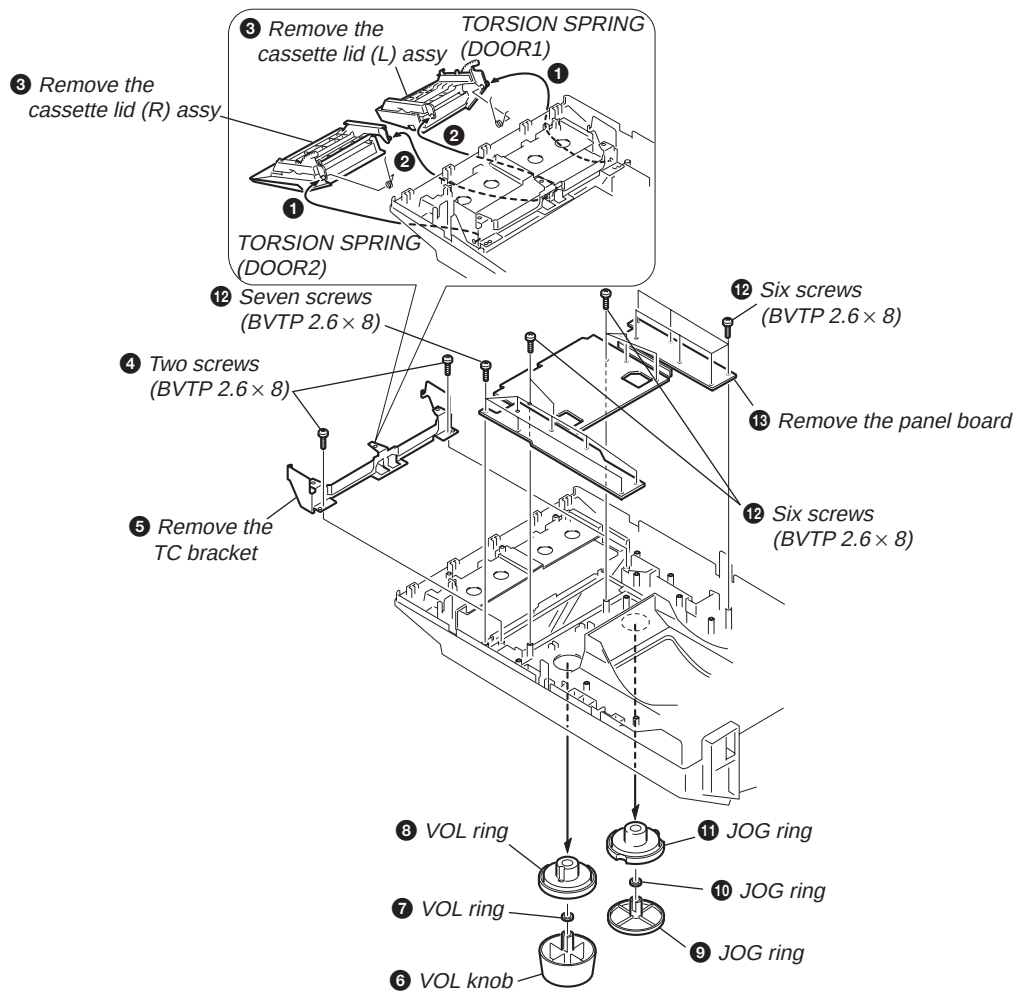

2-14. AUDIO BOARD

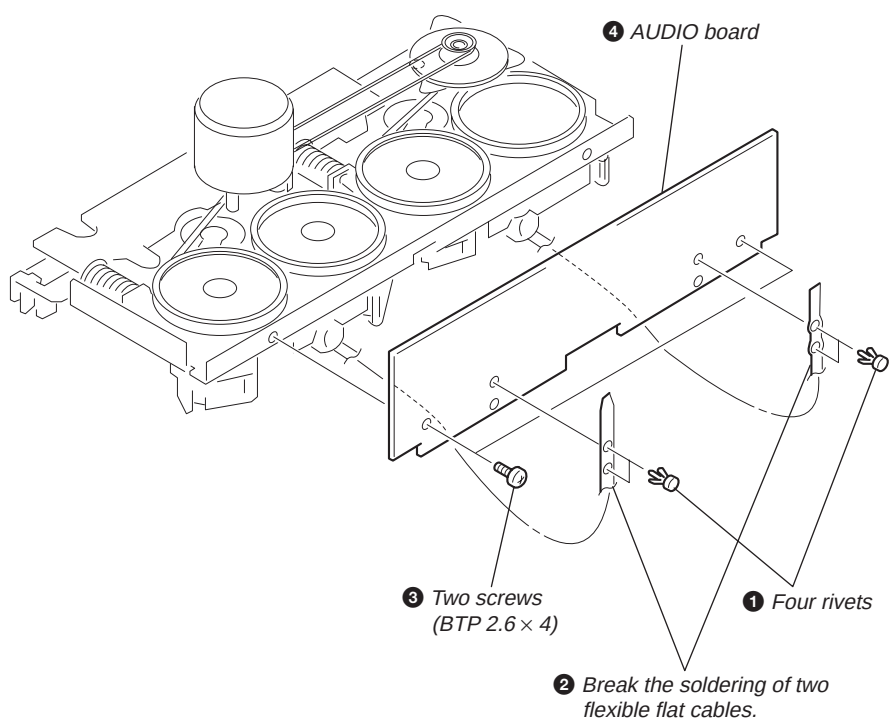

2-15. CAPSTAN MOTOR (M1)

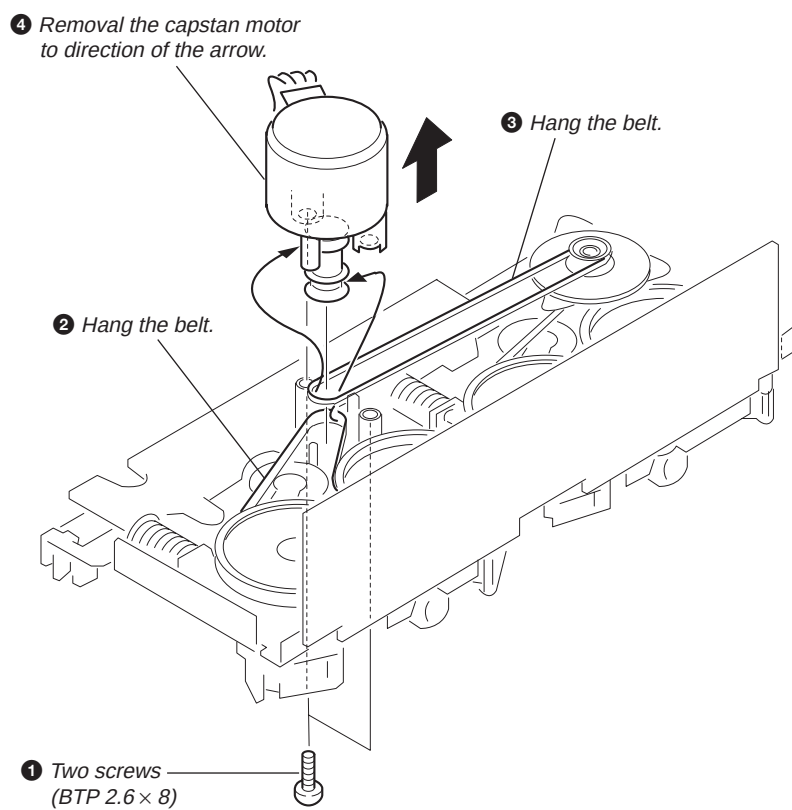

SECTION 3

TEST MODE

[MC Cold Reset]

- * The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

Procedure:

1. Press the three buttons **STOP**, **ENTER** and **FUNCTION** at the same time.
2. The fluorescent indicator tube turns off for a moment and the RAM is reset to the initial conditions.

[MC Hot Reset]

- * This mode resets the set with the preset data kept stored in the memory. This hot reset mode is performed also when the power cord is plugged in and out.

Procedure:

1. Press the three buttons **STOP**, **ENTER** and **GROUP 1** at the same time.
2. The fluorescent indicator tube turns off for a moment and the RAM is reset to the initial conditions.

[CD Initial]

- * The CD INITIAL clears all of the CD related data. Execute this mode when returning the set to the customer.

Procedure:

1. Press the three buttons **STOP**, **ENTER** and **GROUP 4** at the same time.
2. The message "STANDBY" appears on the fluorescent indicator tube and the CD related data is reset to the initial conditions.

[CD Line Test]

- * The CD Line test displays the rotating time required for one rotation by rotating the disc tray.

Procedure:

1. Press the three buttons **STOP**, **ENTER** and **GROUP 5** at the same time. The CD PLAY LED and the CD PAUSE LED flash alternately and the disc tray starts rotation.
2. The message "xx << y.y" appears on the fluorescent indicator tube. The left numbers count up the discs starting from 1 to 51. The left numbers "y.y" indicate the rotating time required for one rotation by rotating the disc tray.
3. To exit the CD LINE test mode, execute the MC Hot Reset.

[CD Memo All Clear]

- * The mode clears all contents of the CD disc memo. Execute this mode when returning the set to the customer.

Procedure:

1. Press the two buttons **MEMO INPUT** and **FLASH** at the same time.
2. The message "ALL ERASE" appears on the fluorescent indicator tube and the CD disc memo is all cleared.

[GC Test Mode]

- * This mode checks microprocessor version number, keys, fluorescent tubes, LEDs and VACS (Variable Attenuation Control System).

Procedure:

1. Press the three buttons **STOP**, **ENTER** and **GROUP 2** at the same time. The HCD-MC3AV enters the GC test mode, and all of the fluorescent tubes and LEDs turn on.
2. From this state, any one of the three modes GROUP 1, GROUP 2 and GROUP 3 can be selected. Go to step 3 to enter the GROUP 1 test mode. Go to step 5 to enter the GROUP 2 test mode. Go to step 11 to enter the GROUP 3 test mode.
3. [GROUP 1 test mode] From the state of step 2, press the **GROUP 1** button. Every pressing of the **GROUP 1** button advances the following check modes and displays in the given order. Model name display, destination display, MC version display, GC version display, DC version display, VC version display and CC version display.
4. To exit the GC test mode and to return to the STANDBY mode, press the **STOP**, **ENTER** and **GROUP 2** buttons again.
5. [GROUP 2 test mode] You can enter this mode directly from step 2. When you performed steps 3, perform steps 4, then 1 and 2 before starting the step 5.
[GROUP 2 test mode] From the GC test mode, press the **GROUP 2** button to enter the key check mode.
The display: K 1, J 0, V 0 appears.
6. The value after K indicates the number of times that the key is pressed. 1 is displayed because the **GROUP 2** button has already been pressed.
7. When other keys are pressed one after another, the key count increases up to 43. The keys which have already been pressed, are not counted.
8. The value after J indicates the number of clicks that the JOG dial is rotated. The clockwise rotation increases the count value. The counter-clockwise rotation decreases the count value.
9. The value after V also indicates amount of rotation of volume control. The clockwise rotation increases the count value. The counter-clockwise rotation decreases the count value.
10. To exit the GC test mode and to return to the STANDBY mode, press the **STOP**, **ENTER** and **GROUP 2** buttons again.
11. [GROUP 3 test mode] You can enter this mode directly from step 2. When you performed steps 3, perform steps 4, then 1 and 2 before starting the step 5.
[GROUP 3 test mode] From the GC test mode, press the **GROUP 3** button to enter the VACS attenuation check mode.
The display: VOL NORMAL appears.
12. To exit the GC test mode and to return to the STANDBY mode, press the **STOP**, **ENTER** and **GROUP 2** buttons again.

[MC Test Mode]

- * This mode checks operation of amplifier and cassette deck.

How to enter the MC test mode:

Press the three buttons of **STOP**, **ENTER** and **GROUP 3**. "EQ CHECK" display on the FL tube and the VOLUME display flash. In addition the LEDs of the JOG dial, FF and REW flash indicating the MC test mode.

Check procedure:

You can perform any of the following five steps. However, it is recommended to perform them in the following order because the skipped cannot be performed if the checks are not performed in the given order.

1. EQ Check Mode

The GEQ becomes maximum when the JOG dial is turned clockwise.

The GEQ becomes minimum when the JOG dial is turned counter-clockwise.

The GEQ comes to center when the **FILE SELECT** button is pressed.

2. VOLUME Check Mode

The maximum volume is set, and the VOLUME MAX display and the GEQ display are displayed for a moment regardless of the amount of volume rotation.

The minimum volume is set, and the VOLUME MIN display and the GEQ display are displayed for a moment regardless of the amount of volume rotation.

3. Deck Check Mode

Install a tape to the deck B. Select TAPE B with the **FUNCTION** button.

Recording starts and PAUSE is released when the REC button is pressed.

VIDEO is selected by the input FUNCTION.

Press the **STOP** button to stop recording and select TAPE B with the **FUNCTION** button.

Rewind the tape by pressing the **REW** button and stop at the recording start point. Start playback from the recording start point.

4. High Speed Check Mode-1

Install a tape to the deck A. Select TAPE A with the **FUNCTION** button.

Press the **PLAY** button then press the **HI-SPEED DUBBING** button during playback.

The normal playback is obtained during normal speed playback and the double speed playback is obtained during the double speed playback.

5. High Speed Check Mode-2

Install a tape to the deck B. Select TAPE B with the **FUNCTION** button.

Press the **REC** button. When the PAUSE is released, recording is started.

When the **HI-SPEED DUBBING** button is pressed during recording, the double speed recording is established only when the button is pressed.

[Aging Mode]

The decks A and B are operated automatically for aging purpose. When errors occur during aging, causes of errors are displayed and the aging mode is stopped.

How to enter the aging mode

1. Turn on the main power. Install a playback tape to deck A and install a blank tape to deck B.
2. Select TAPE A with the **FUNCTION** button.
3. Press the three buttons of **STOP**, **ENTER** and **GROUP ENTRY** at the same time to enter the aging mode.

How to exit the aging mode.

Turn off the main power.

1. Rewind the tapes A and B. Tapes stop at the shut-off of tape A and the aging mode advances to the next step.
The message: TAPE A AG-1 appears.
2. The tape A is played back in the FWD mode. After two minutes of the FWD playback, the aging mode advances to the next step.
The message: TAPE A AG-2 appears.
3. The tape A runs in fast forward. After two minutes of fast forward, or at the shut-off point, the tape is stopped and the aging mode advances to the next step.
The message: TAPE A AG-3 appears.
4. The tape A is played back in the RVS mode. After two minutes of the RVS playback, the aging mode advances to the next step.
The message: TAPE A AG-4 appears.

5. The tape A is rewound and stops at the shut-off. The aging mode advances to the next step.
The message: TAPE A AG-5 appears.

6. The tape B is played back in the FWD mode. After two minutes of the FWD playback, the aging mode advances to the next step.
The message: TAPE B AG-2 appears.

7. The tape B runs in fast forward. After two minutes of fast forward, or at the shut-off point, the tape is stopped and the aging mode advances to the next step.
The message: TAPE B AG-3 appears.

8. The tape B is played back in the RVS mode. After two minutes of the RVS playback, the aging mode advances to the next step.
The message: TAPE B AG-4 appears.

9. The tape B is rewound and stops at the shut-off. The aging mode advances to the next step.
The message: TAPE B AG-5 appears.

[Function Change Mode]

* Select either VIDEO or MD of the external FUNCTION input.

Procedure:

1. Turn off the power.
2. Press the two buttons **ENTER** and **POWER** at the same time. The main power is turned on and the other function of the previous function is selected and displayed. "MD" or "VIDEO"

[AM TUNER STEP 9 kHz/10 kHz Selection Mode]

* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.

Procedure:

1. Turn on the power and select TUNER using the **FUNCTION** button.
2. Select AM with the **TUNER/BAND** button and turn off the power.
3. Press the two buttons **FUNCTION** and **POWER** at the same time. The main power is turned on and the other frequency step of the previous mode is selected and displayed. "AM 9 k STEP" or "AM 10 k STEP"

SECTION 4 MECHANICAL ADJUSTMENT

• TAPE MECHANISM DECK SECTION

Precaution

1. Clean the following parts with a denatured alcohol-moistened swab:
 record/playback heads pinch rollers
 erase head rubber belts
 capstan idlers
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

• Torque Measurement

Mode	Torque meter	Meter reading
FWD	CQ-102C	31 to 71 g • cm (0.43 – 0.98 oz • inch)
FWD back tension	CQ-102C	2 to 6 g • cm (0.02 – 0.08 oz • inch)
REV	CQ-102RC	31 to 71 g • cm (0.43 – 0.98 oz • inch)
REV back tension	CQ-102RC	2 to 6 g • cm (0.02 – 0.08 oz • inch)
FF/REW	CQ-201B	71 to 143 g • cm (0.98 – 1.99 oz • inch)
FWD tension	CQ-403A	100 g or more (3.53 oz or more)
REV tension	CQ-403R	100 g or more (3.53 oz or more)


• CD MECHANISM DECK SECTION

To adjust the mechanism section, enter the mechanism section adjustment mode.


For how to enter the mechanism section adjustment mode, refer to each adjustment section.

DISC SENSOR ALIGNMENT




1. Make sure that there is no disc in the unit.
2. Connect an oscilloscope to IC401⁽⁴²⁾, IC402⁽⁴⁾ of the MAIN board.

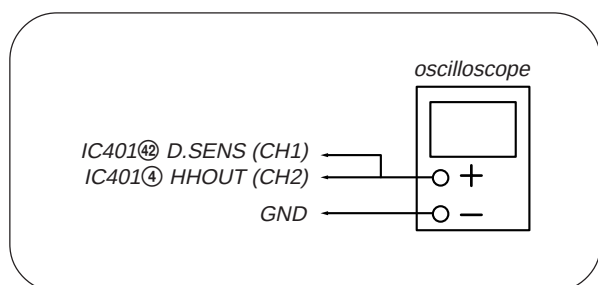

3. Turn the power switch on.
4. Press the  button, **ENTER** button and **GROUP 5** button simultaneously.

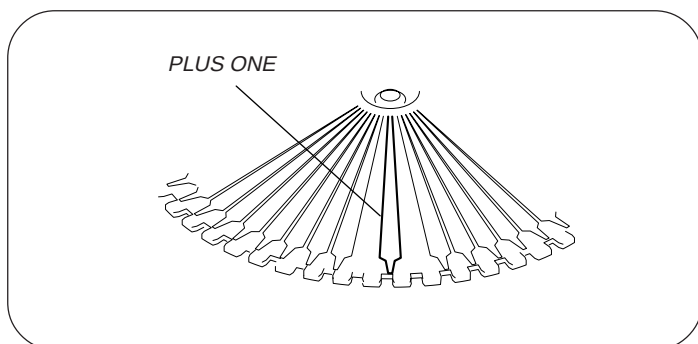



5. The disc table rotates in the clockwise direction. The disc table rotation time is displayed with "PLUS ONE" slit as a measuring point.
6. Measure the waveform of the oscilloscope when the disc table is rotating.
7. Move the holder (sensor) center so that the flat portion center at the top of the D.SENS (CH1) input waveform and the "H" center of HHOUT (CH2) coincide.

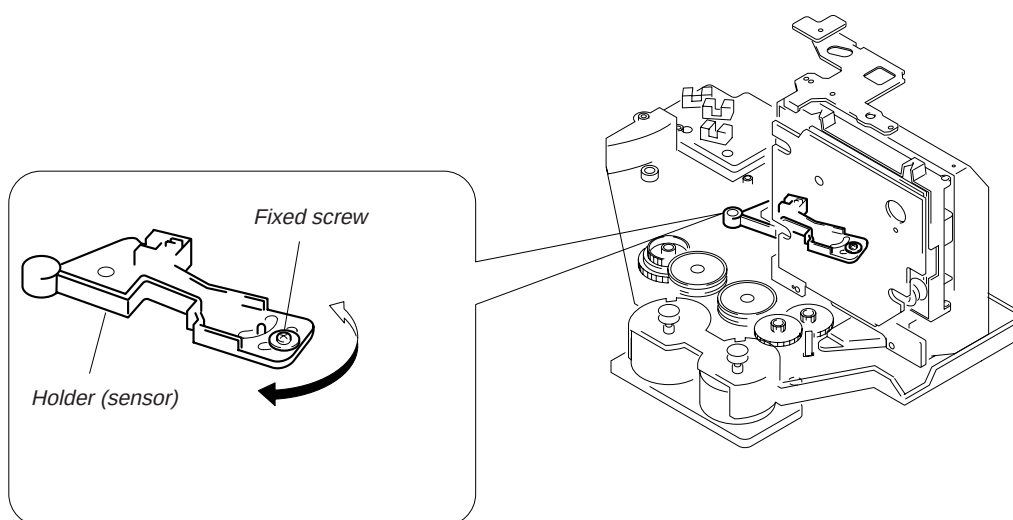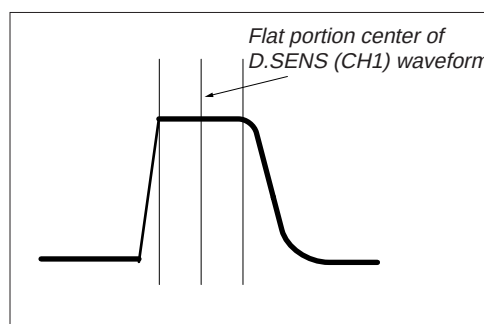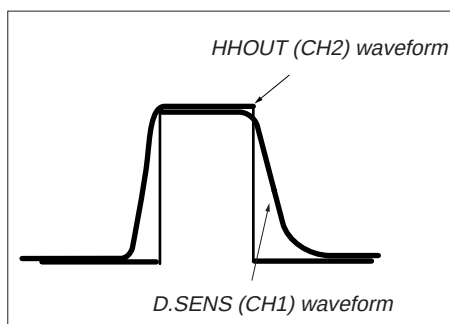

8. Tighten the fixed screw to fix the disc table, then press the **CLEAR** button.
 9. The disc table rotates in the counterclockwise direction. Measure the waveform and make sure that the flat portion center at the top of the D.SENS (CH1) input waveform and the "H" center of HHOUT (CH2) coincide.
 10. If the adjustment is not successful, press the **CLEAR** button to rotate the disc table in the clockwise direction, and perform steps 6 to 9.
- Note:** During the adjustment mode, the rotational direction is switched each time the **CLEAR** button is pressed. Pressing the **CHECK** button enters the loading mode which will be described later. Pressing the **CLEAR** button rotates the disc table again.



MAGNET ASSY ALIGNMENT

1. Check that there is no disc in the unit and then turn ON the power. Open the door, and set a disc in the PLUS ONE slit.
2. Close the door, and while pressing the  button, **ENTER** button and **GROUP 5** button simultaneously.
3. Press the **CHECK** button, and set the loading mode.
4. Press the  button and chuck the disc.
5. Adjust the magnet assembly and magnet holder so that $A = B$ as shown in the figure.

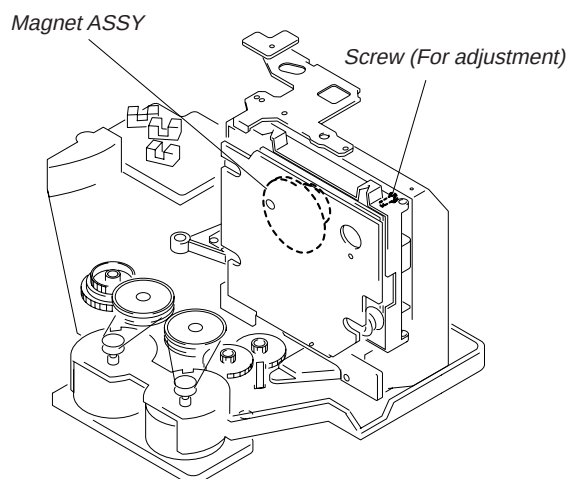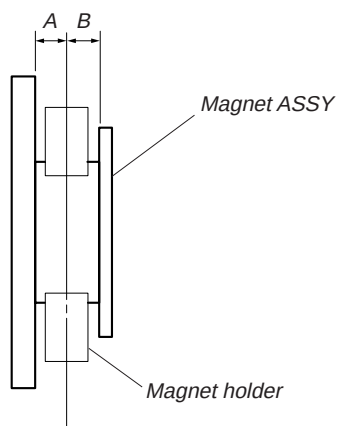

DISC HOLDER A ALIGNMENT

1. Check that there is no disc in the unit and then turn ON the power. Open the door, and set a disc in the PLUS ONE slit.
2. Close the door, and while pressing the  button, **ENTER** button and **GROUP 5** button simultaneously.
3. Press the **CHECK** button, and set the loading mode.
4. Press the  button and chuck the disc.
5. Press  or  button to stop the disc holder A slightly away from the disc.
6. Rotate and adjust the adjusting screw so that the center of the disc and that of the disc holder coincide.

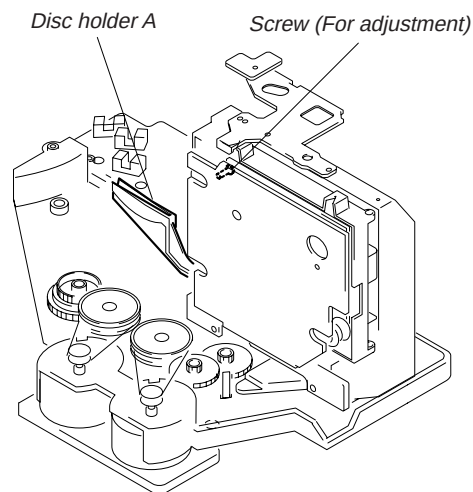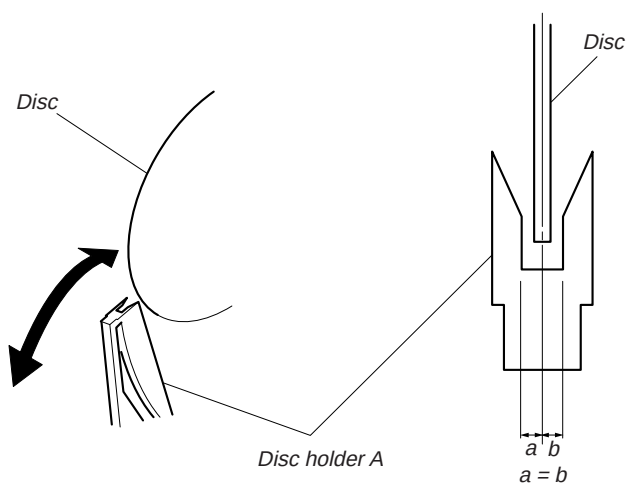

SECTION 5 ELECTRICAL ADJUSTMENTS

DECK SECTION

0 dB = 0.775 V

1. Demagnetize the record/playback head with a head demagnetizer.
2. Do not use a magnetized screwdriver for the adjustments.
3. After the adjustments, apply suitable locking compound to the parts adjust.
4. The adjustments should be performed with the rated power supply voltage unless otherwise noted.
5. The adjustments should be performed in the order given in this service manual. (As a general rule, playback circuit adjustment should be completed before performing recording circuit adjustment.)
6. The adjustments should be performed for both L-CH and R-CH.
7. Switches and controls should be set as follows unless otherwise specified.

• Test Tape

Tape	Signal	Used for
P-4-A100	10 kHz, -10 dB	Azimuth Adjustment
WS-48B	3 kHz, 0 dB	Tape Speed Adjustment
P-4-L300	315 Hz, 0 dB	Level Adjustment

Record/Playback Head Azimuth Adjustment


DECK A

DECK B


Note: Perform this adjustments for both decks

Procedure:



1. Mode: Playback

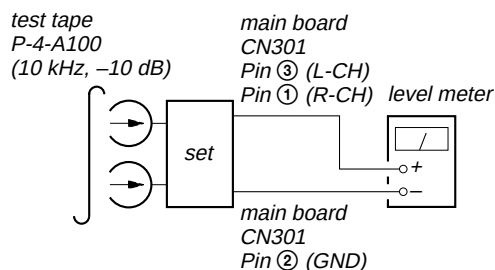

2. Turn the adjustment screw and check output peaks. If the peaks do not match for L-CH and R-CH, turn the adjustment screw so that outputs match within 1 dB of peak.

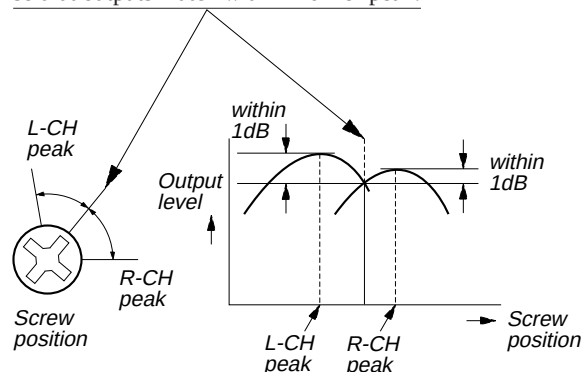

3. Mode: Playback

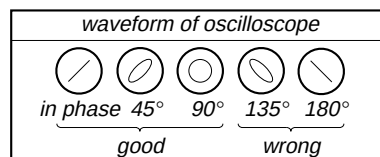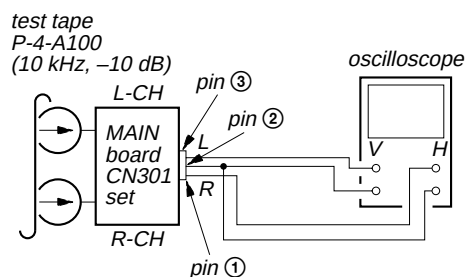

4. After the adjustments, apply suitable locking compound to the parts adjusted.

Adjustment Location: Playback Head (Deck A).

Record/Playback/Erase Head (Deck B).

Tape Speed Adjustment DECK B


Note: Start the Tape Speed adjustment as below after setting to the test mode.

In the test mode, the tape speed is high during pressing the HI-SPEED DUBBING button.

Procedure:

1. Turn the power switch on.
2. Press the ■ button, ENTER button and GROUP 3 button simultaneously.
(The "VOLUME" on the fluorescent indicator tube will blink while in the test mode.)
To exit from the test mode, press the I/O button.

Mode: Playback

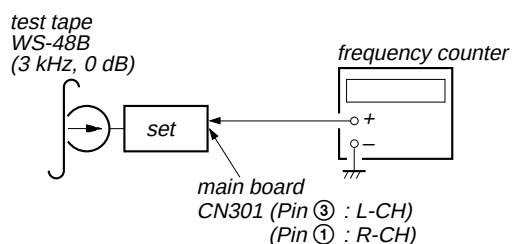

1. Insert the WS-48B into the deck B.
2. Press the ▷ button on the deck B.
3. Press the HI-SPEED DUBBING button in playback mode.
Then at HIGH speed mode.
4. Adjust RV1001 on the LEAF SW board so that frequency counter reads $6,000 \pm 180$ Hz.
5. Press the HI-SPEED DUBBING button.
Then back to NORMAL speed mode.
6. Adjust RV1002 on the LEAF SW board so that frequency counter reads $3,000 \pm 90$ Hz.

Adjustment Location: LEAF SW board

Sample Value of Wow and filter


W, RMS (JIS) within 0.3%

(test tape: WS-48B)

Playback level Adjustment DECK A DECK B

Procedure:

Mode: Playback

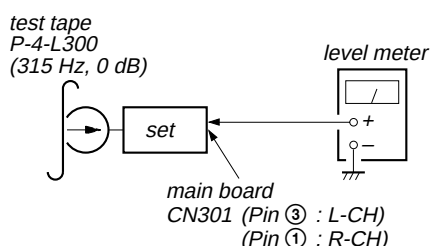

Deck A is RV311 (L-CH) and RV411 (R-CH), Deck B is RV301 (L-CH) and RV401 (R-CH) so that adjustment within adjustment level as follows.

Adjustment Level:

CN301 PB level: 301.5 to 338.3 mV (− 8.2 to − 7.2 dB) level difference between the channels: within ± 0.5 dB

Adjustment Location: AUDIO board

REC Bias Adjustment DECK B


Procedure:

INTRODUCTION


When set to the test mode performed in Tape Speed Adjustment, when the tape is rewound after recording, the "REC memory mode" which rewinds only the recorded portion and playback is set. This "REC memory mode" is convenient for performing this adjustment. During recording, the input signal FUNCTION will automatically switch to VIDEO.

(If do not operation of stopped from recording complete, after selecting DECK B with the FUNCTION button, and press ◀◀◀ button then rewind to recording start position.)

1. Press FUNCTION button to select VIDEO. (This step is not necessary if the above test mode has already been set.)
2. Insert a tape into deck B.
3. After press ● REC button, press || PAUSE button, then recording start.
4. Mode: Record

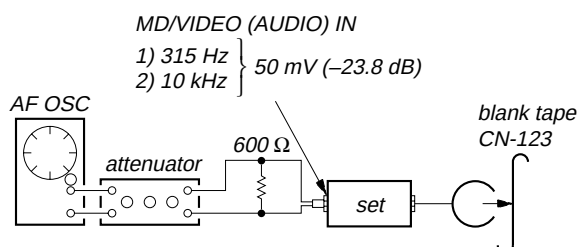

5. Mode: Playback

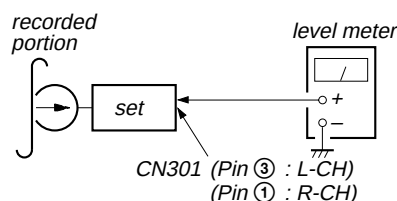

6. Confirm playback the signal recorded in step 3 become adjustable level as follows.
If these levels do not adjustable level, adjustment the RV341 (L-CH) and RV441 (R-CH) on the AUDIO board to repeat steps 4 and 5.

Adjustable level: Playback output of 315 Hz to playback output of 10 kHz: ± 1.0 dB

Adjustment Location: AUDIO board

REC Level Adjustment DECK B

Procedure:


INTRODUCTION

When set to the test mode performed in Tape Speed Adjustment, when the tape is rewound after recording, the "REC memory mode" which rewinds only the recorded portion and playback is set. This "REC memory mode" is convenient for performing this adjustment. During recording, the input signal FUNCTION will automatically switch to VIDEO.


(If do not operation of stopped from recording complete, after selecting DECK B with the FUNCTION button, and press ◀◀◀ button then rewind to recording start position.)

1. Press FUNCTION button to select VIDEO. (This step is not necessary if the above test mode has already been set.)
2. Insert a tape into deck B.
3. After press ● REC button, press || PAUSE button, then recording start.

4. Mode: Record

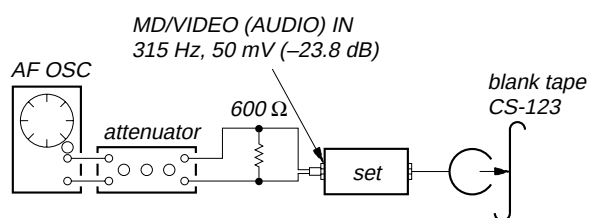

5. Mode: Playback

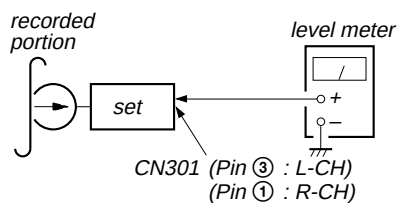

6. Confirm playback the signal recorded in step 3 become adjustable level as follows.


If these levels do not adjustable level, adjustment the RV301 (L-CH) and RV351 (R-CH) on the MAIN board to repeat steps 4 and 5.

Adjustable level:


CN301 PB level: 47.2 to 53.0 mV (−24.3 to −23.3 dB)

Adjustment Location: MAIN board


[MAIN BOARD] (Component Side)

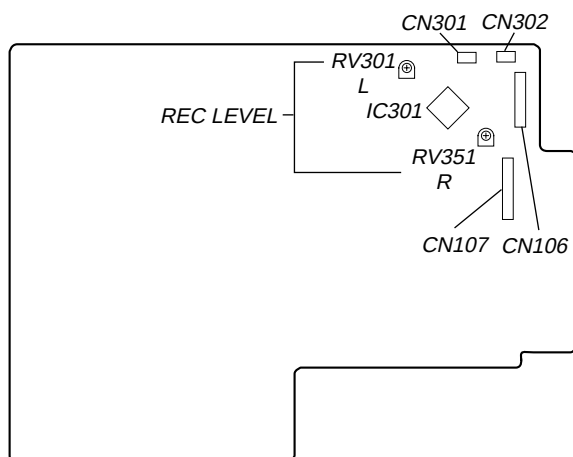

[AUDIO BOARD] (Component Side)

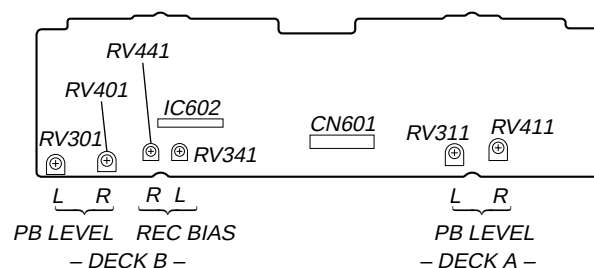


[LEAF SW BOARD] (Component Side)

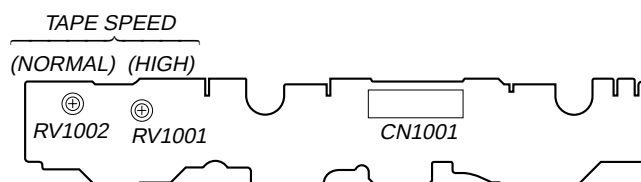

CD SECTION

Note :

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10 MW impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

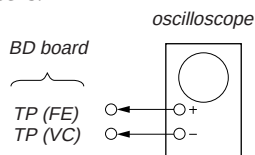


S Curve Check

Procedure :

1. Press the **I/O** button to turn ON the power .
2. Open the front cover, and press the **CD PLUS ONE** button.
3. Set the disc (YEDS-18) into the "PLUS ONE" slit.
4. Close the front cover, and chuck the disc.
5. Press the **I/O** button to turn OFF the power.
6. Connect the oscilloscope to TP (FE) of the BD board.
7. Connect TP (ADJ) of the MAIN board and connect TP (GND) with a lead wire.
8. Press the **I/O** button to turn ON the power.
9. The first track will be played back automatically. When the **CHECK** button is pressed, "S JI" will be displayed on the fluorescent indicator tube, and focus search will be repeated.
10. Check the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 1.8 ± 0.6 Vp-p.

S-curve waveform

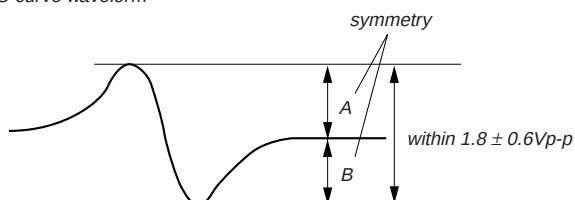


11. Turn OFF the power, and remove the lead wire connected at step 7.

Note :

- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
- Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

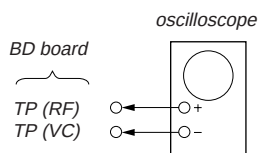


Procedure :

1. Press the **I/O** button to turn ON the power.
2. Open the front cover, and press the **CD PLUS ONE** button.
3. Set the disc (YEDS-18) into the "PLUS ONE" slit.
4. Close the front cover, and chuck the disc.
5. Press the **I/O** button to turn OFF the power.
6. Connect the oscilloscope to TP (RF) of the BD board.
7. Connect TP (ADJ) of the MAIN board and connect TP (GND) with a lead wire.
8. Press the **I/O** button to turn ON the power.
9. Playback the fifth track of the disc.

10. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.
11. Turn OFF the power, and remove the lead wire connected at step 7.


Note : A clear RF signal waveform means that the shape "◇" can be clearly distinguished at the center of the waveform.

RF signal waveform

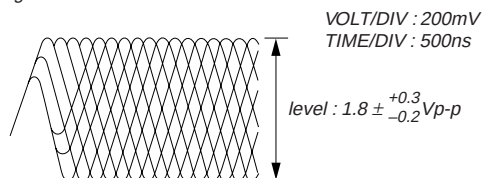

E-F Balance (Traverse) Check


The procedure for this checking method differs for when a general remote control unit is used and not used.

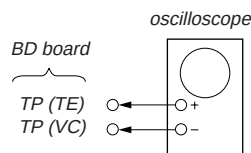

When a general remote commander is used:


1. Press the **I/O** button to turn ON the power.
2. Open the front cover, and press the **CD PLUS ONE** button.
3. Set the disc (YEDS-18) into the "PLUS ONE" slit.
4. Close the front cover, and chuck the disc.
5. Press the **I/O** button to turn OFF the power.
6. Connect the oscilloscope to TP (TE) of the BD board.
7. Connect TP (ADJ) of the MAIN board and connect TP (GND) with a lead wire.
8. Press the **I/O** button to turn ON the power.
9. Playback the fifth track of the disc.
10. Press the **3** button on the remote commander. (The tracking servo and the sledding servo are turned OFF.)
11. Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform. Confirm the following :
 $A/B \times 100 = \text{less than } \pm 10\%$

Traverse waveform

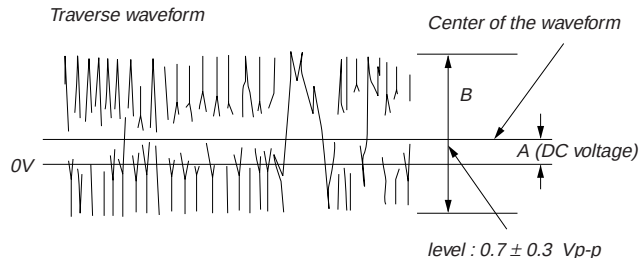


12. Press the **8** button on the remote control unit. (The tracking servo and sledding servo are turned ON.) Confirm the C (DC voltage) is almost equal to the A (DC voltage) is step 11.

Traverse waveform

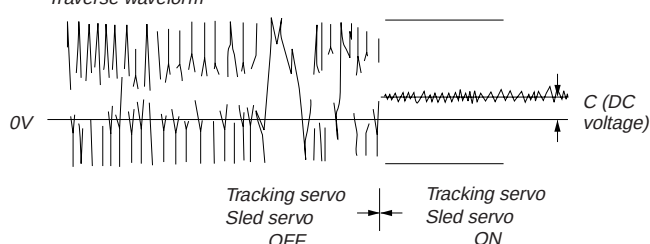


13. Turn OFF the power, and remove the lead wire connected at step 7.

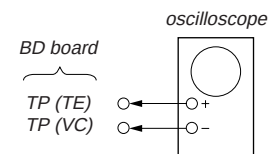

When a general remote commander is not used:


1. Solder lead wires to TP (DVDD) and TP (TOFF) on the BD board severally.
2. Connect the oscilloscope to TP (TE) of the BD board.
3. Press the **POWER** button to turn ON the power.
4. Open the front cover, and press the **CD PLUS ONE** button.
5. Set the disc (YEDS-18) into the "PLUS ONE" slit.
6. Close the front cover, and chuck the disc.
7. Playback the fifth track of the disc.
8. Short-circuit the lead wire connected at step 1. (The tracking servo is turned OFF)
9. Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform.
Confirm the following :
 $A/B \times 100 = \text{less than } \pm 10\%$

Traverse waveform

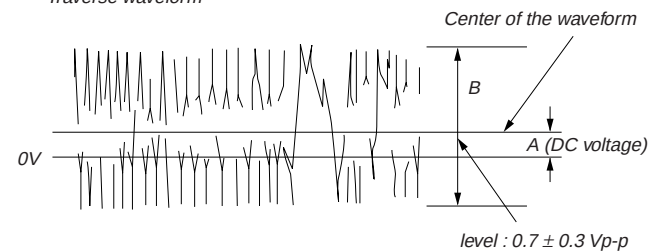

10. Disconnect the lead wire short-circuited at step 8. (The tracking servo is turned ON.) Confirm the C (DC voltage) is almost equal to the A (DC voltage) is step 8.

Traverse waveform

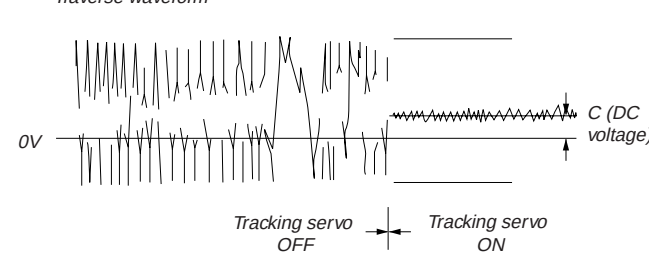


11. Turn OFF the power, and remove the lead wire connected at step 1.

RF PLL Free-run Frequency Check

Procedure :


1. Connect the frequency counter to TP (PLCK) of the BD board.

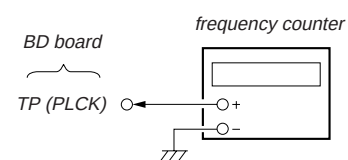


2. Press the **POWER** button to turn ON the power.
3. Open the front cover, and press the **CD PLUS ONE** button.
4. Set the disc (YEDS-18) into the "PLUS ONE" slit.
5. Close the front cover, and chuck the disc.
6. Playback the fifth track of the disc.
7. Confirm that reading on frequency counter is 4.3218 MHz $\pm$ 30 kHz.

Adjustment Location :

[BD BOARD] — CONDUCTOR SIDE —

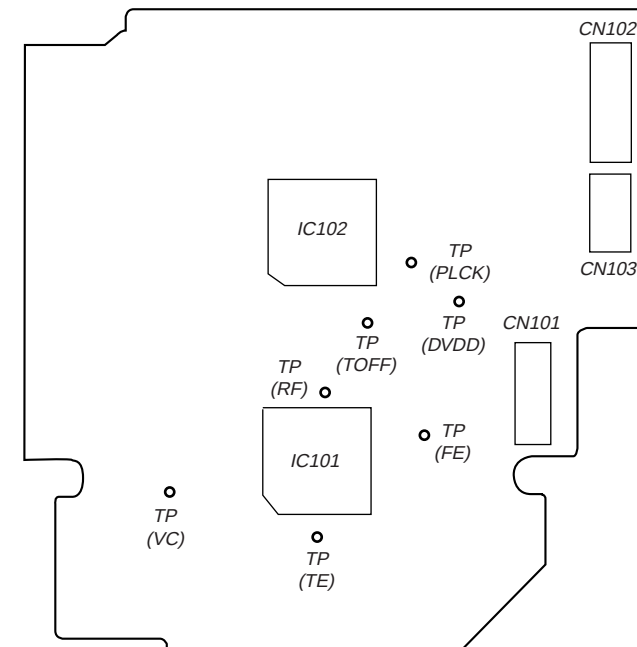


[MAIN BOARD] — COMPONENT SIDE —

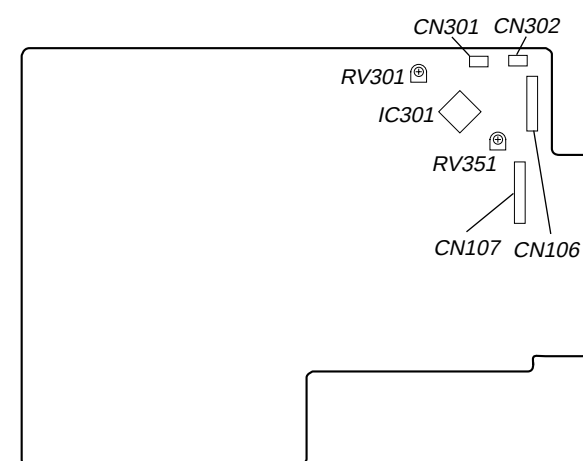


SECTION 6
DIAGRAMS

6-1. BLOCK DIAGRAM CD SECTION

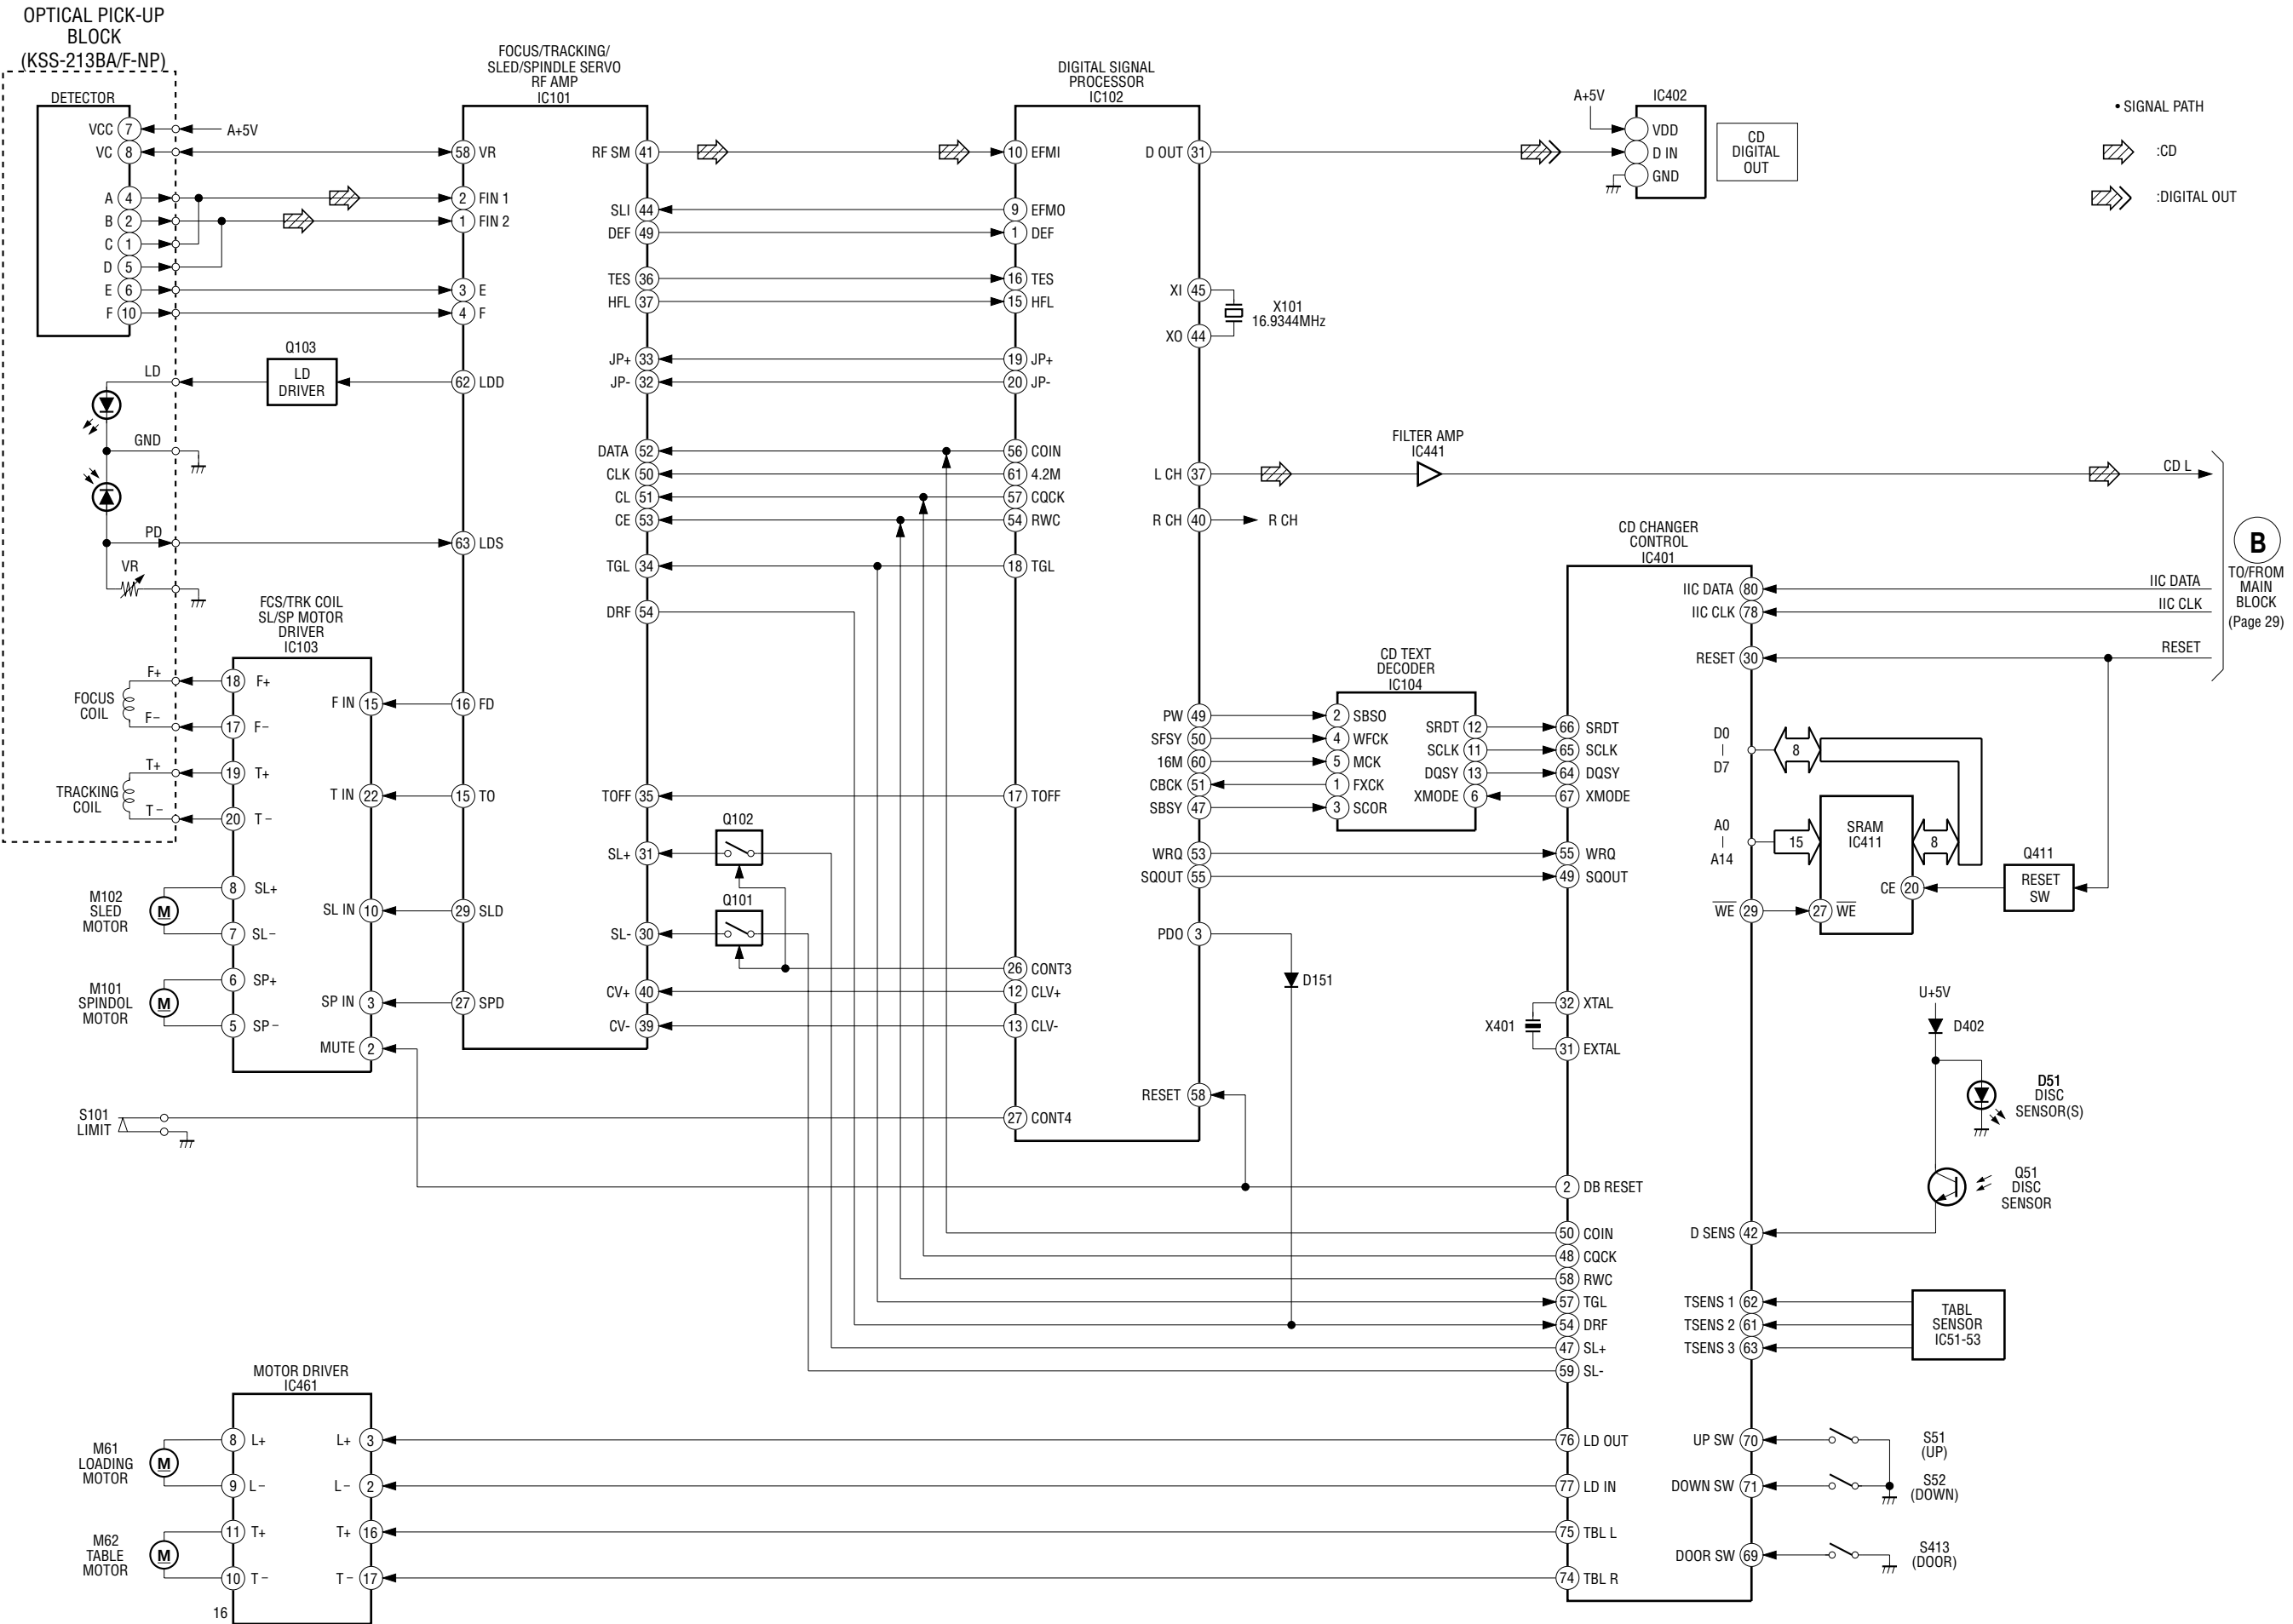



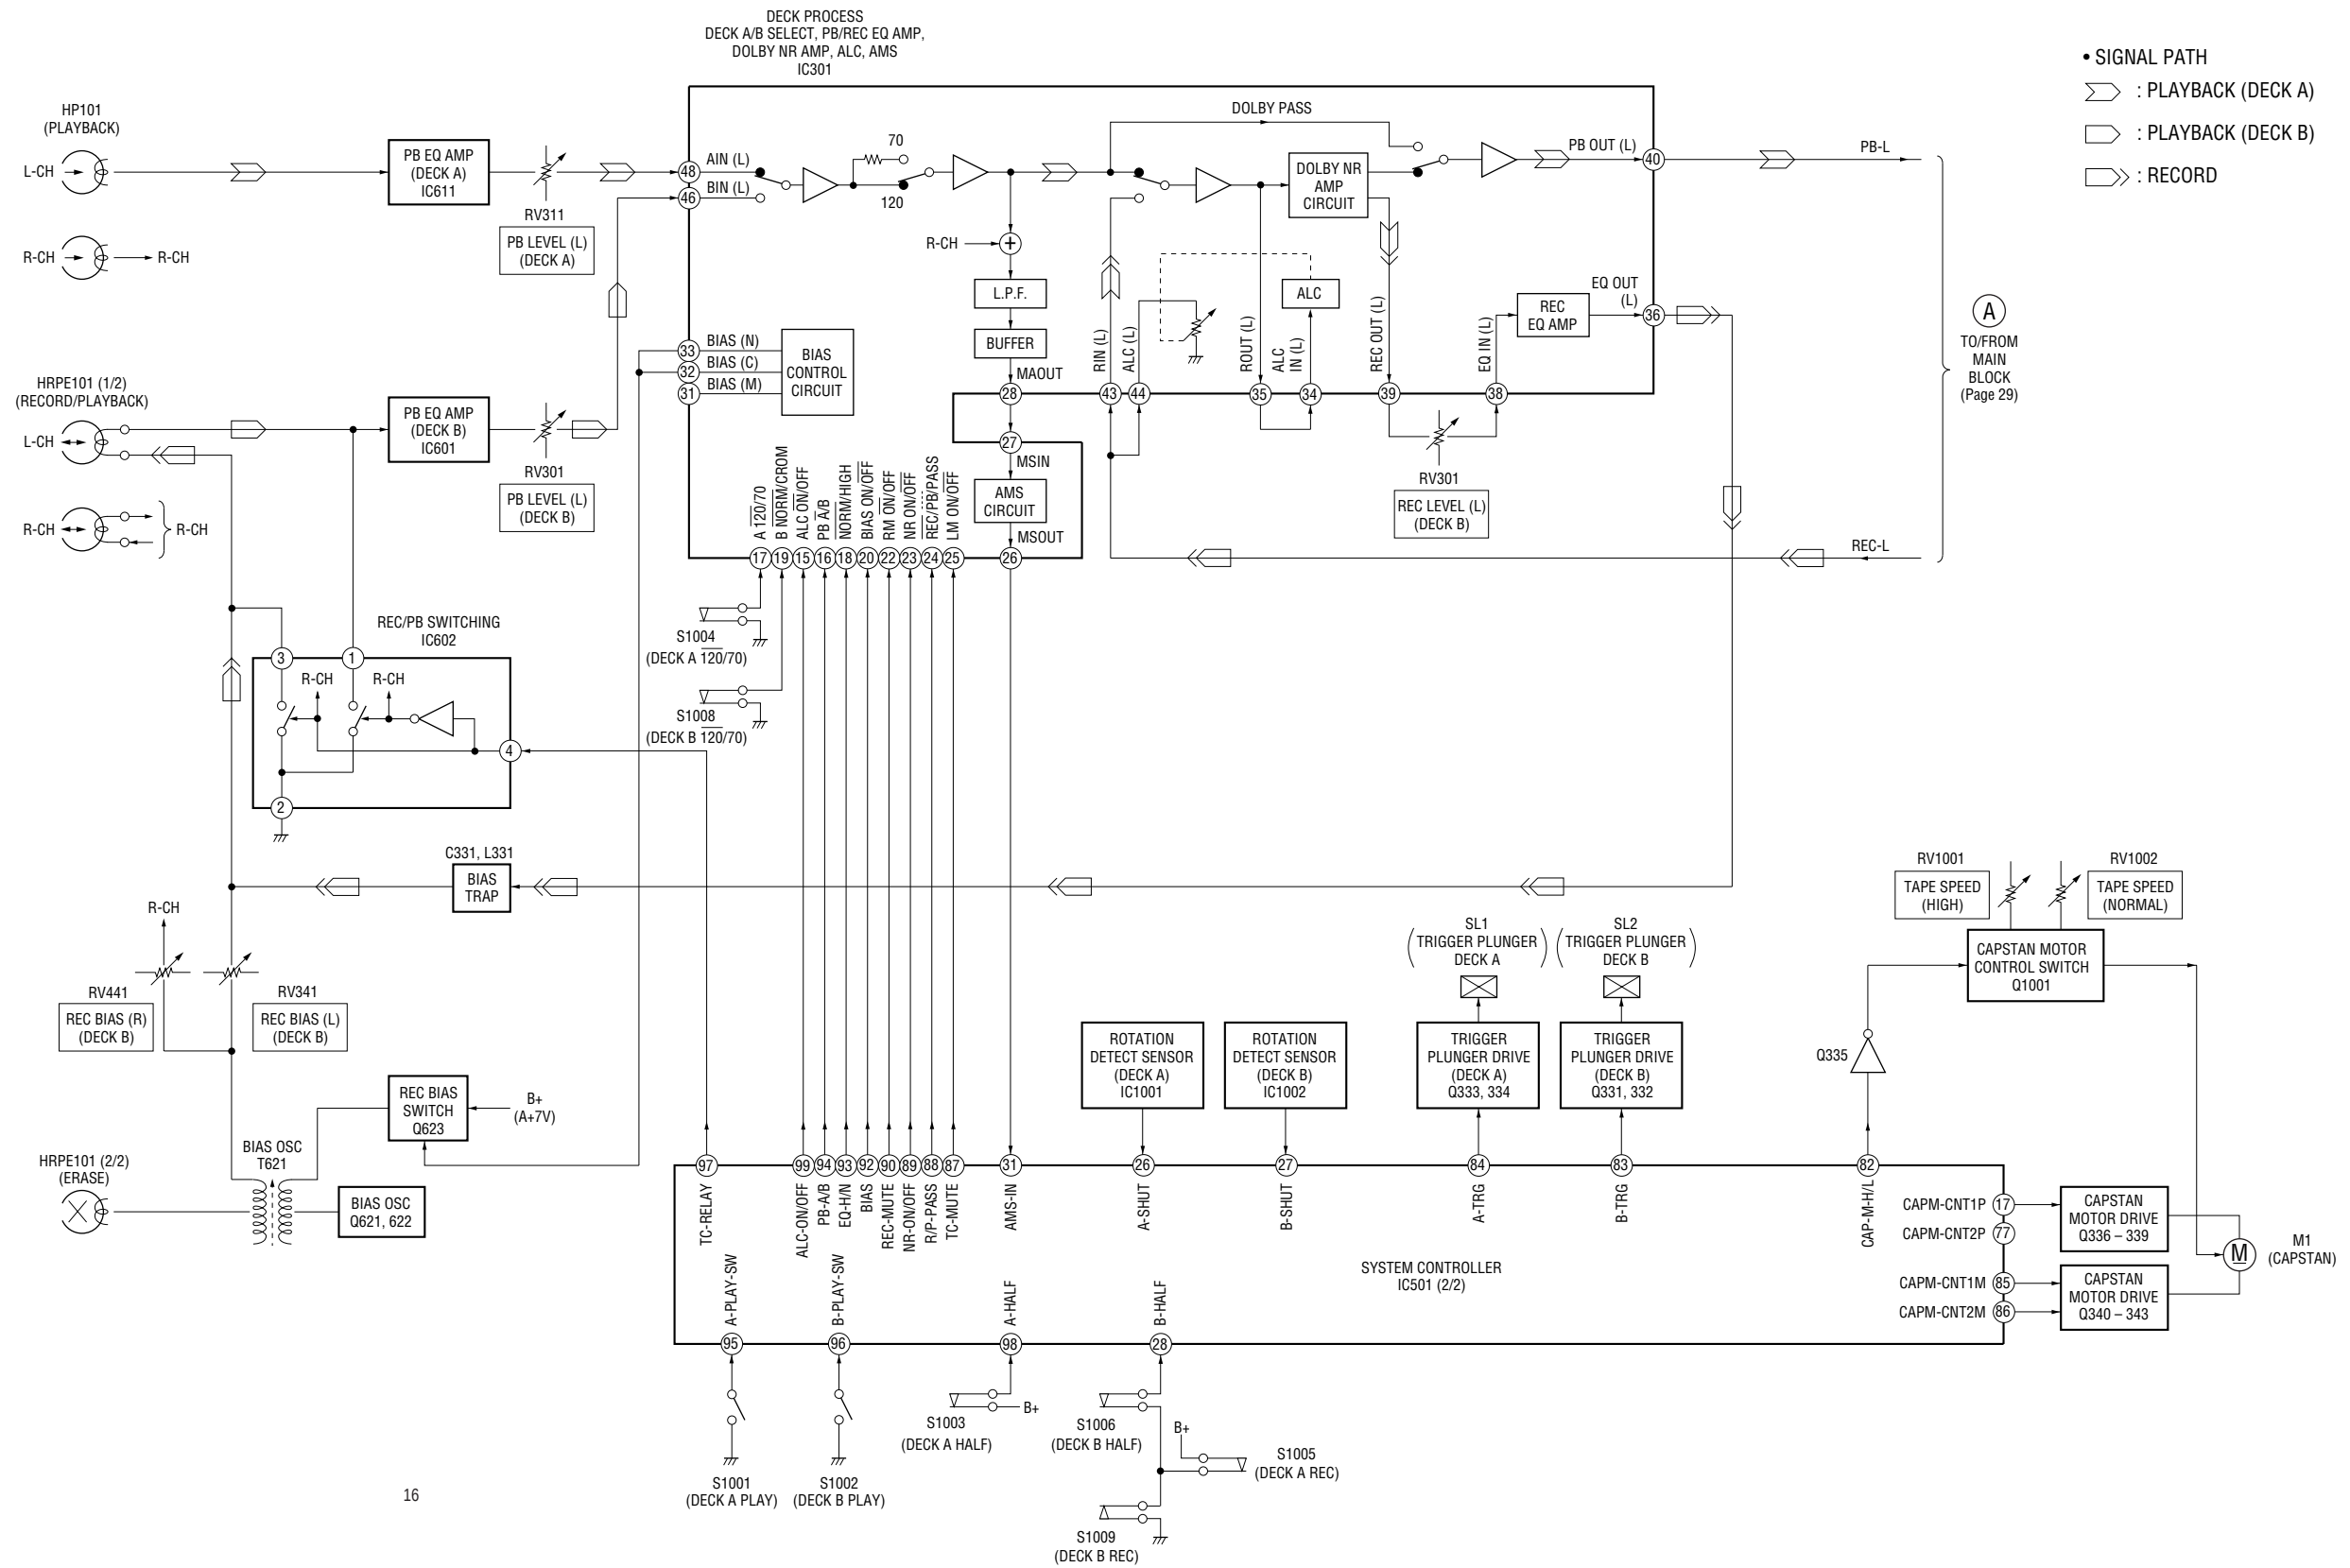


• SIGNAL PATH

▷ : PLAYBACK (DECK A)

◁ : PLAYBACK (DECK B)

◁▷ : RECORD

6-2. CIRCUIT BOARDS LOCATION

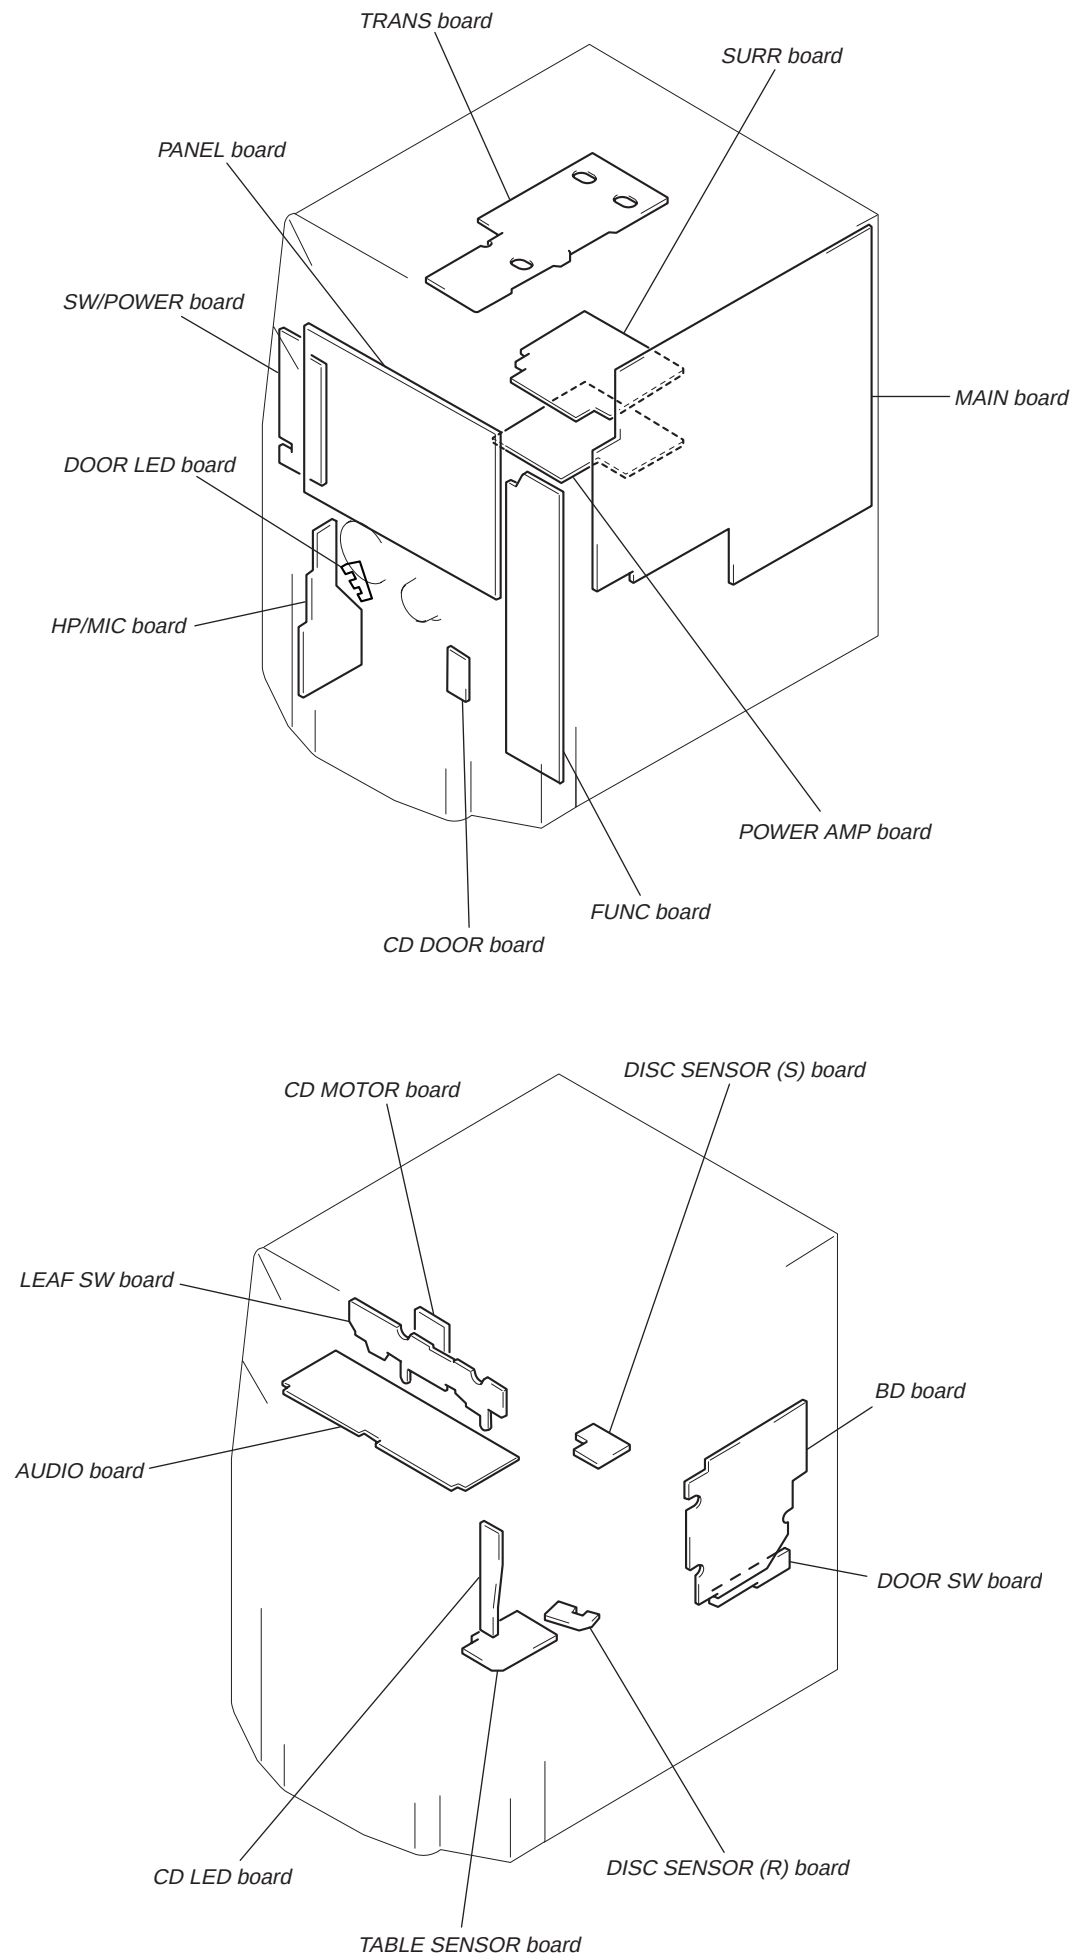

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this necessary note is printed in each block.)

For schematic diagrams.

Note:

- All capacitors are in μF unless otherwise noted. pF: μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- : B- Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Circled numbers refer to waveforms.
- Signal path.
 - : FM
 - : VIDEO/MD
 - : PB (DECK A)
 - : PB (DECK B)
 - : REC (DECK B)
 - : CD
 - : CD DIGITAL
- Abbreviation
 - CND : Canadian model
 - AUS : Australian model

For printed wiring boards.


Note:


- : parts extracted from the component side.
- : internal component.
- : Pattern from the side which enables seeing.

6-3. PRINTED WIRING BOARD BD SECTION • See page 33 for Circuit Boards Location.


• Semiconductor Location

Ref. No.	Location
D151	B-4
IC101	E-4
IC102	E-7
IC103	B-8
IC104	C-8
Q101	H-6
Q102	G-6
Q103	B-2

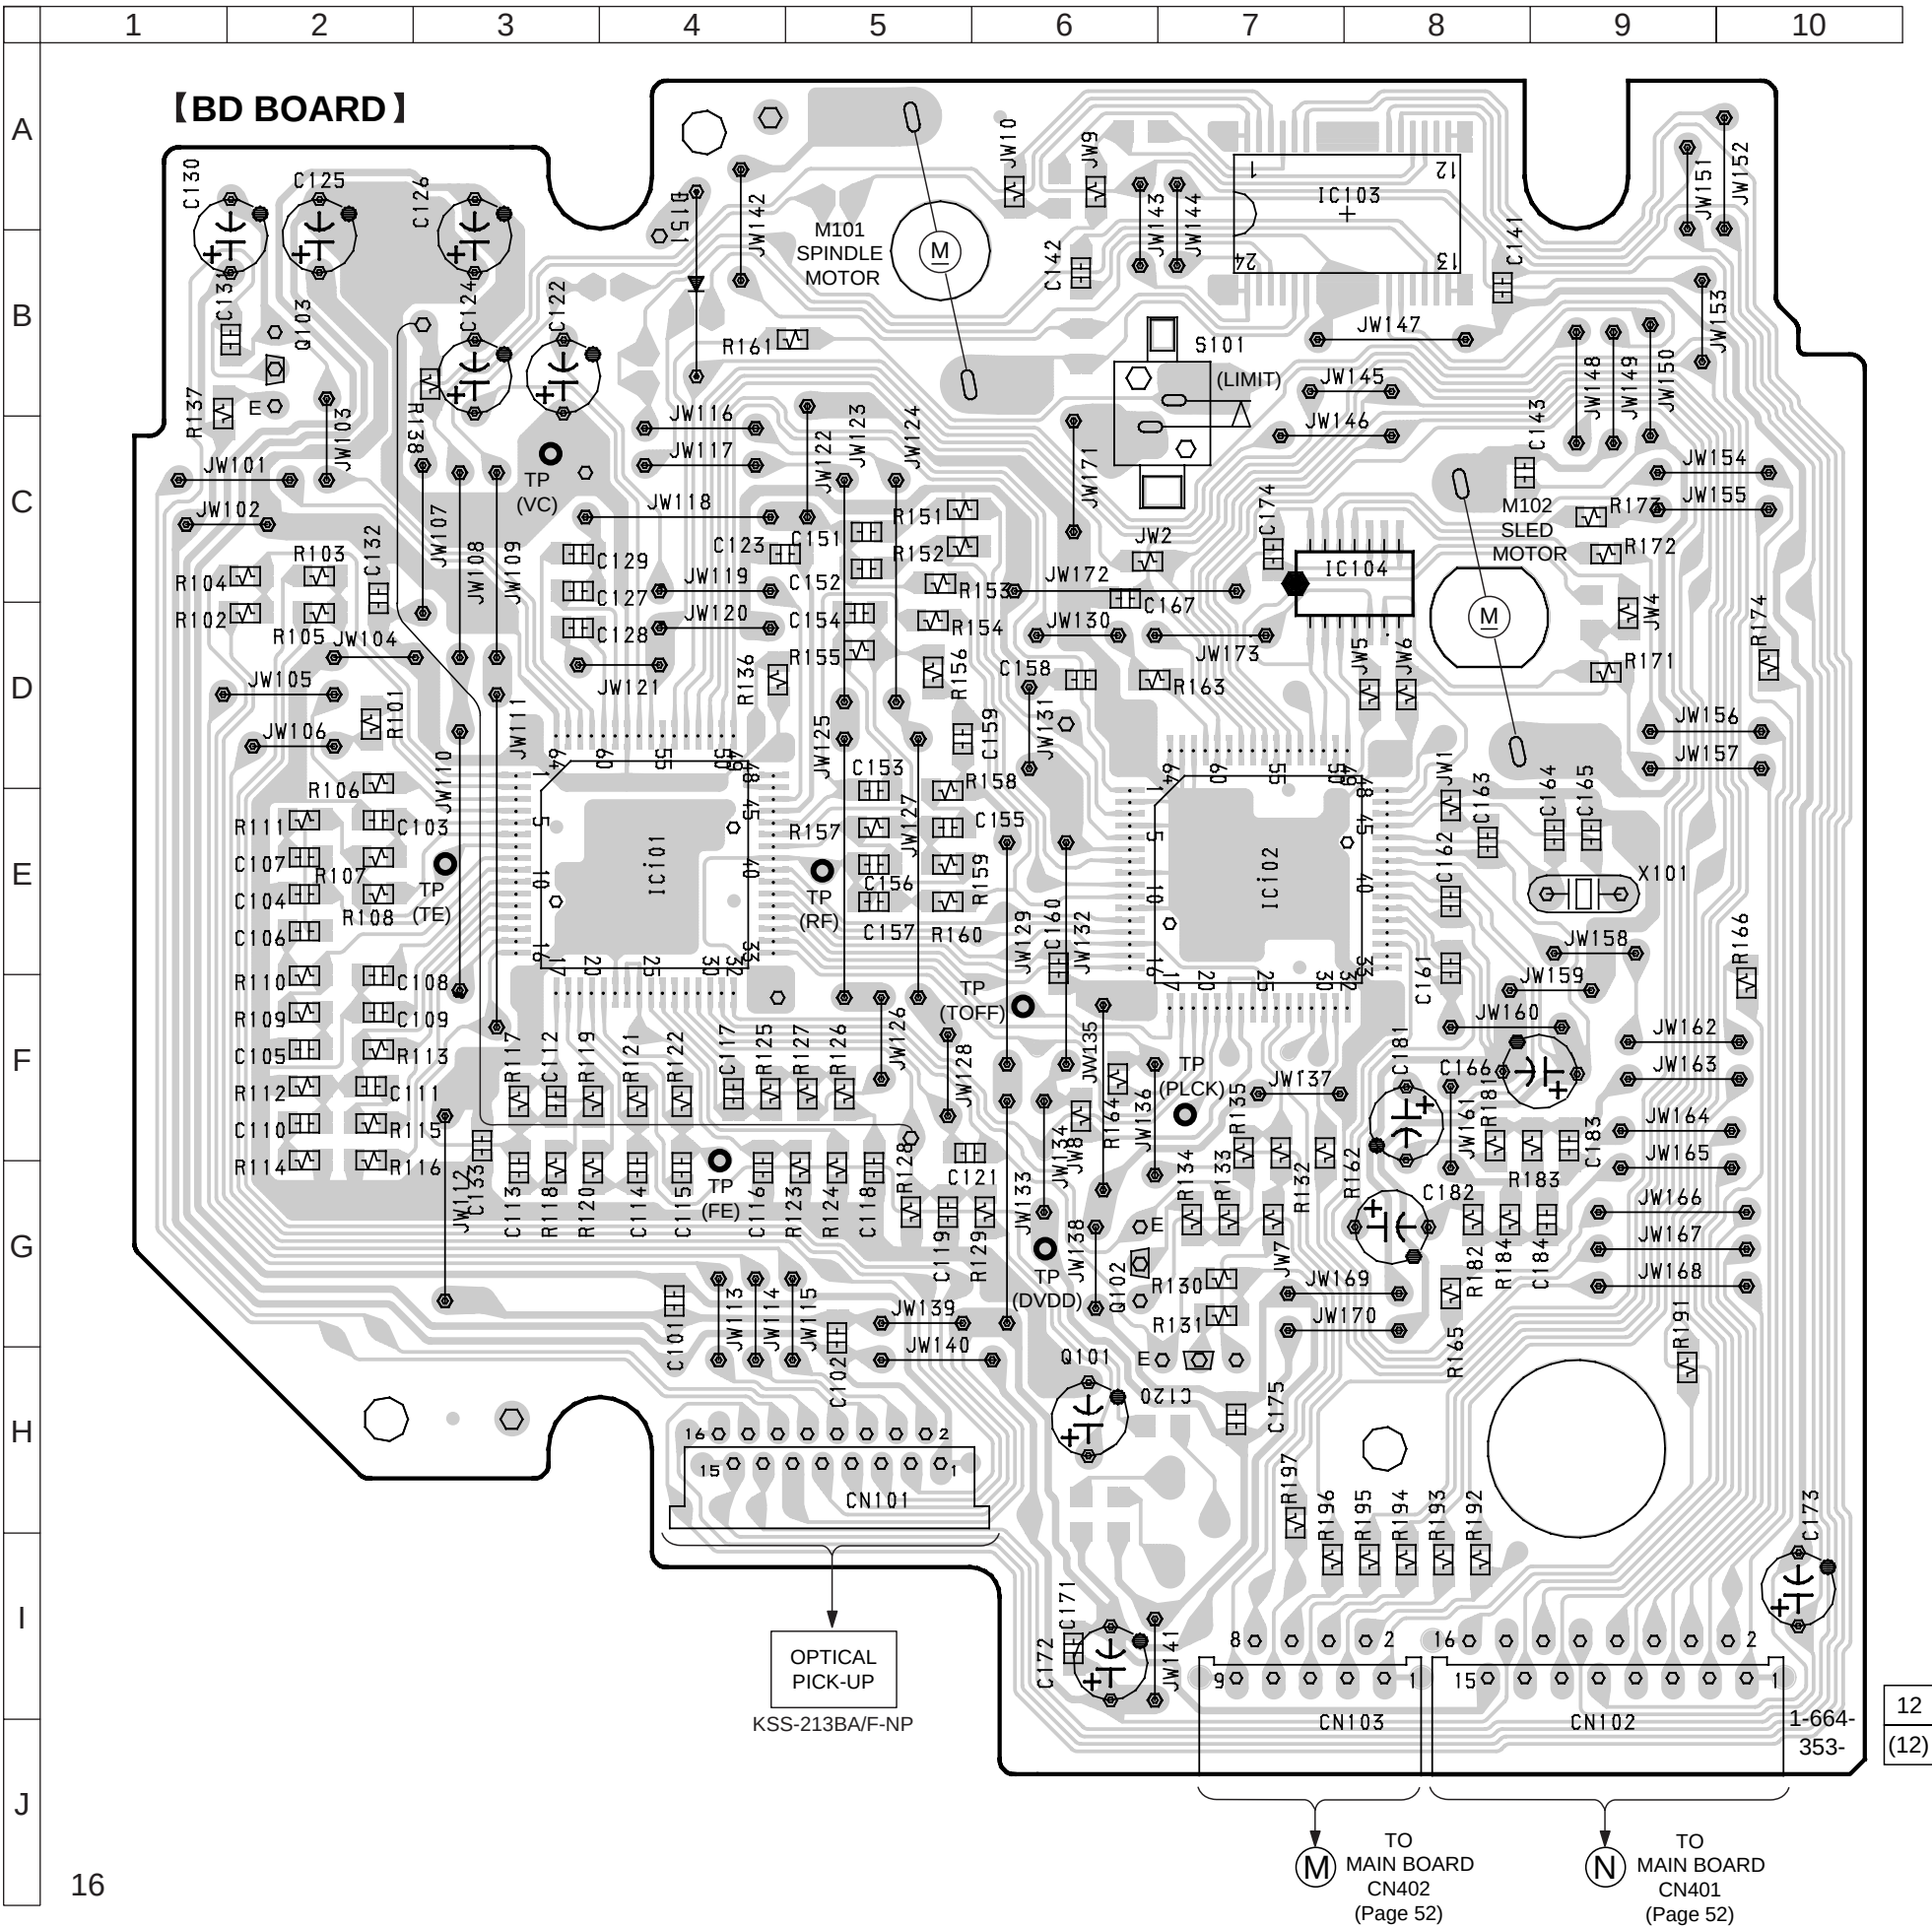

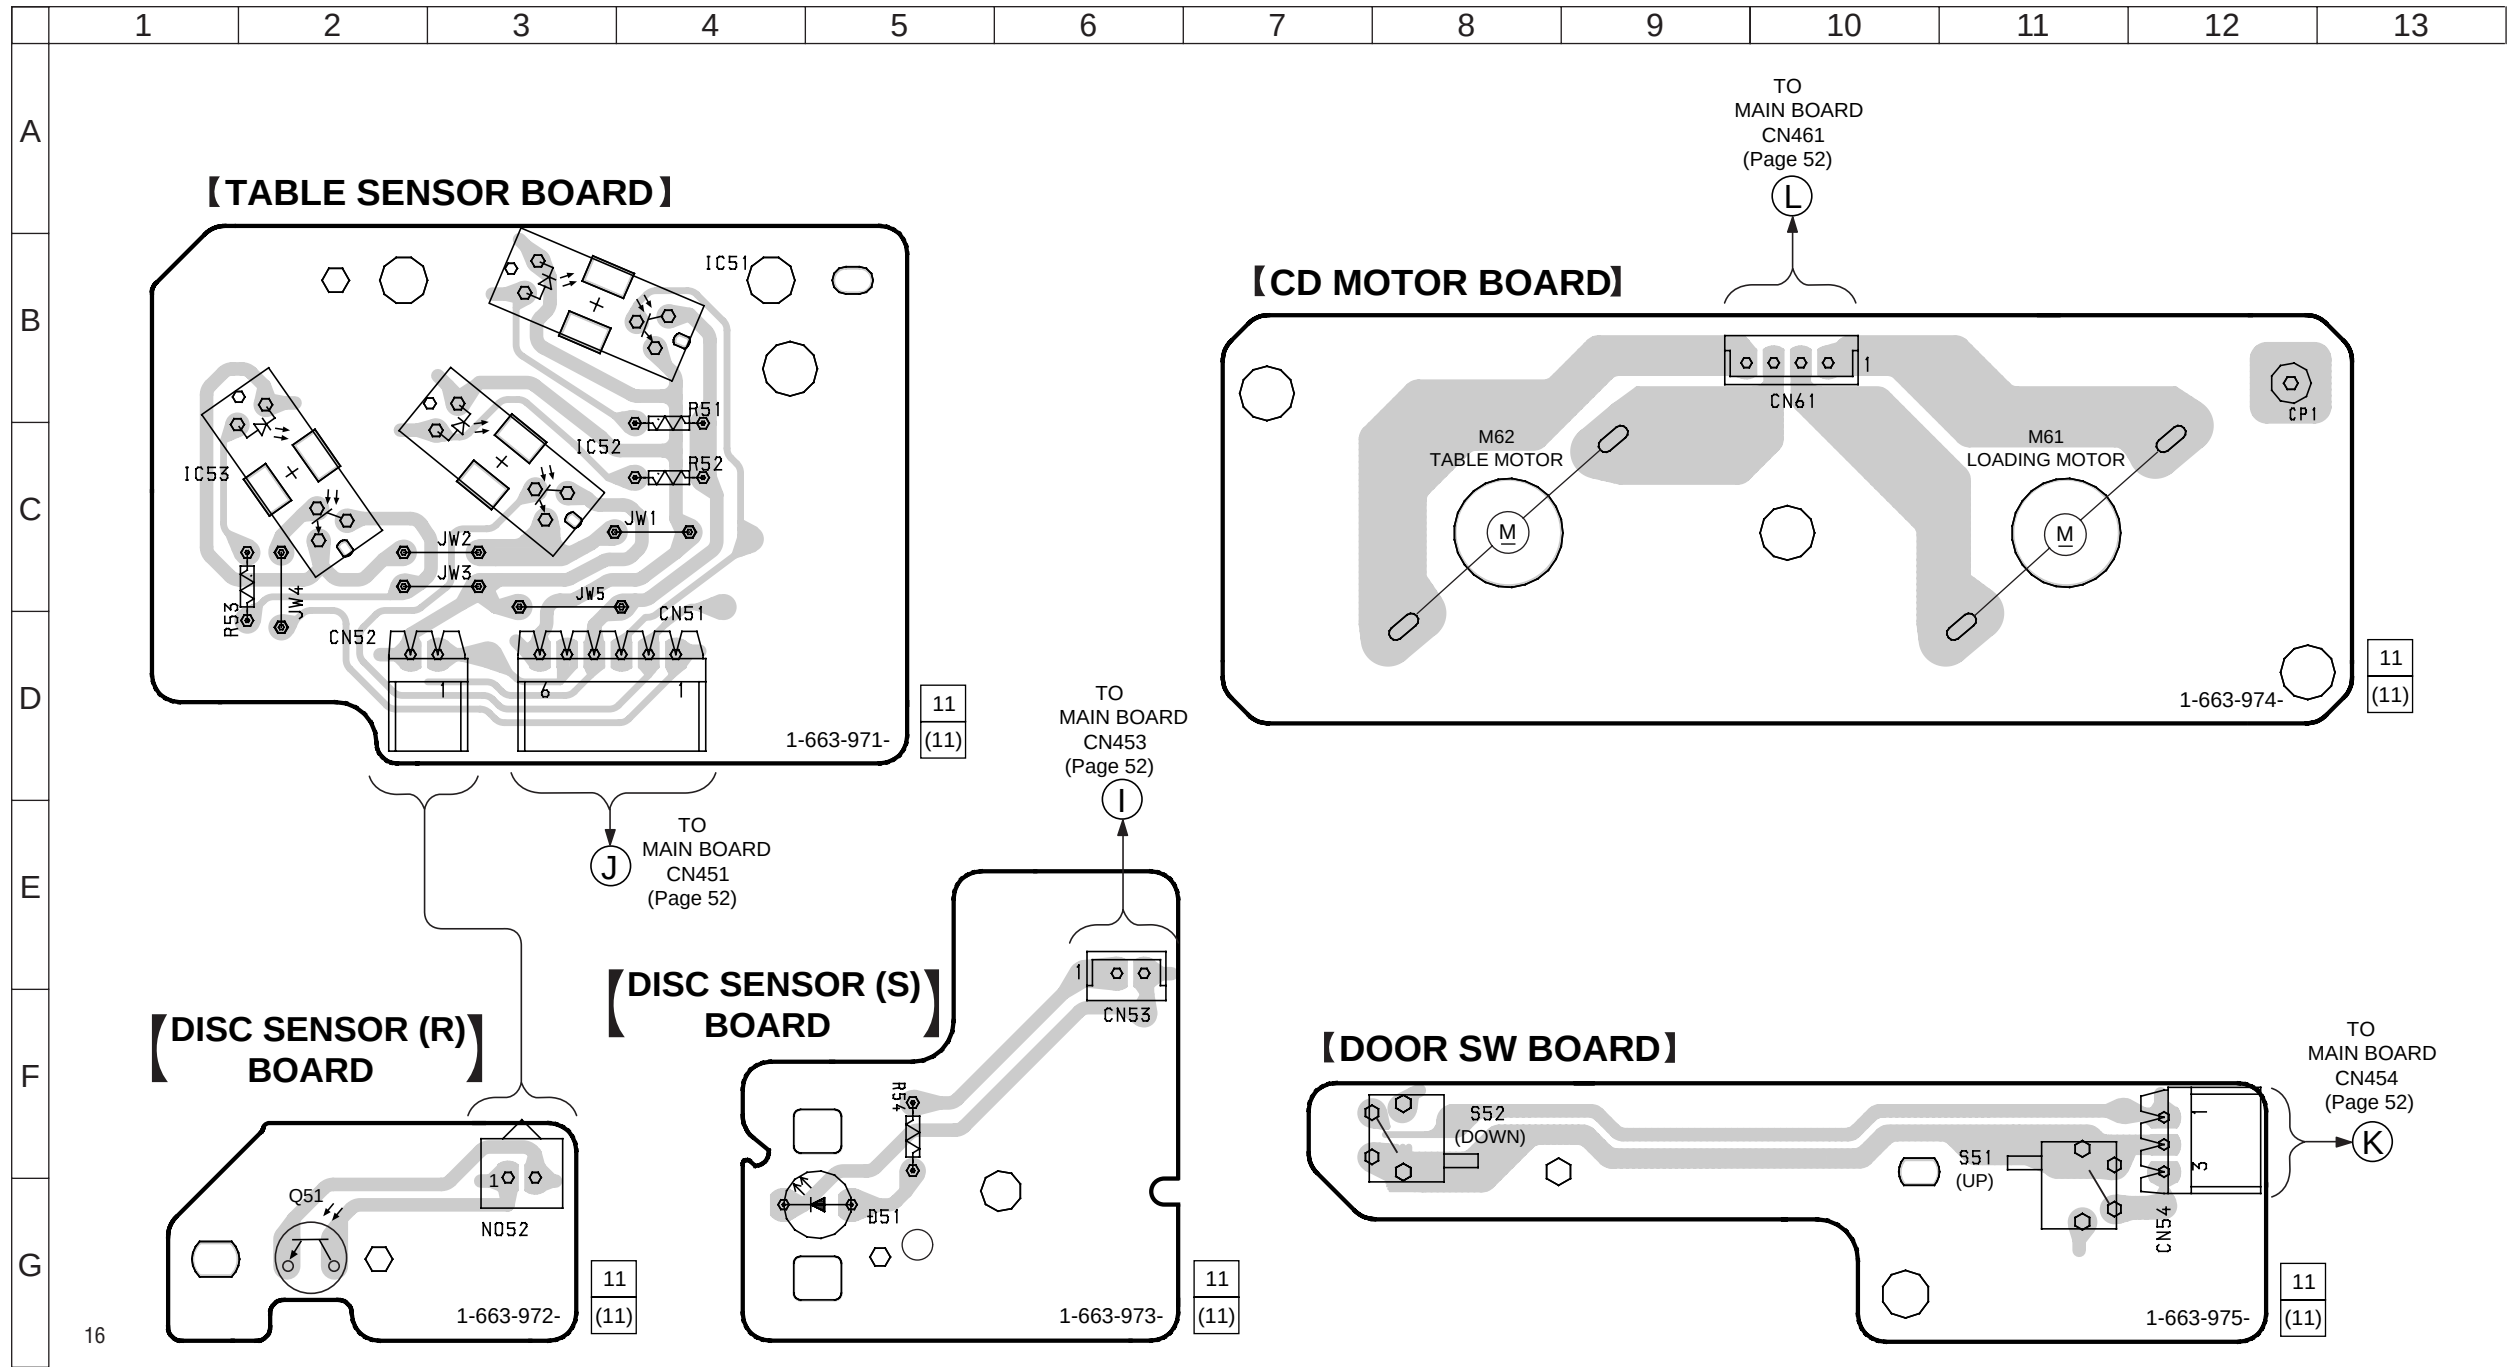


6-6. SCHEMATIC DIAGRAM CD MOTOR SECTION

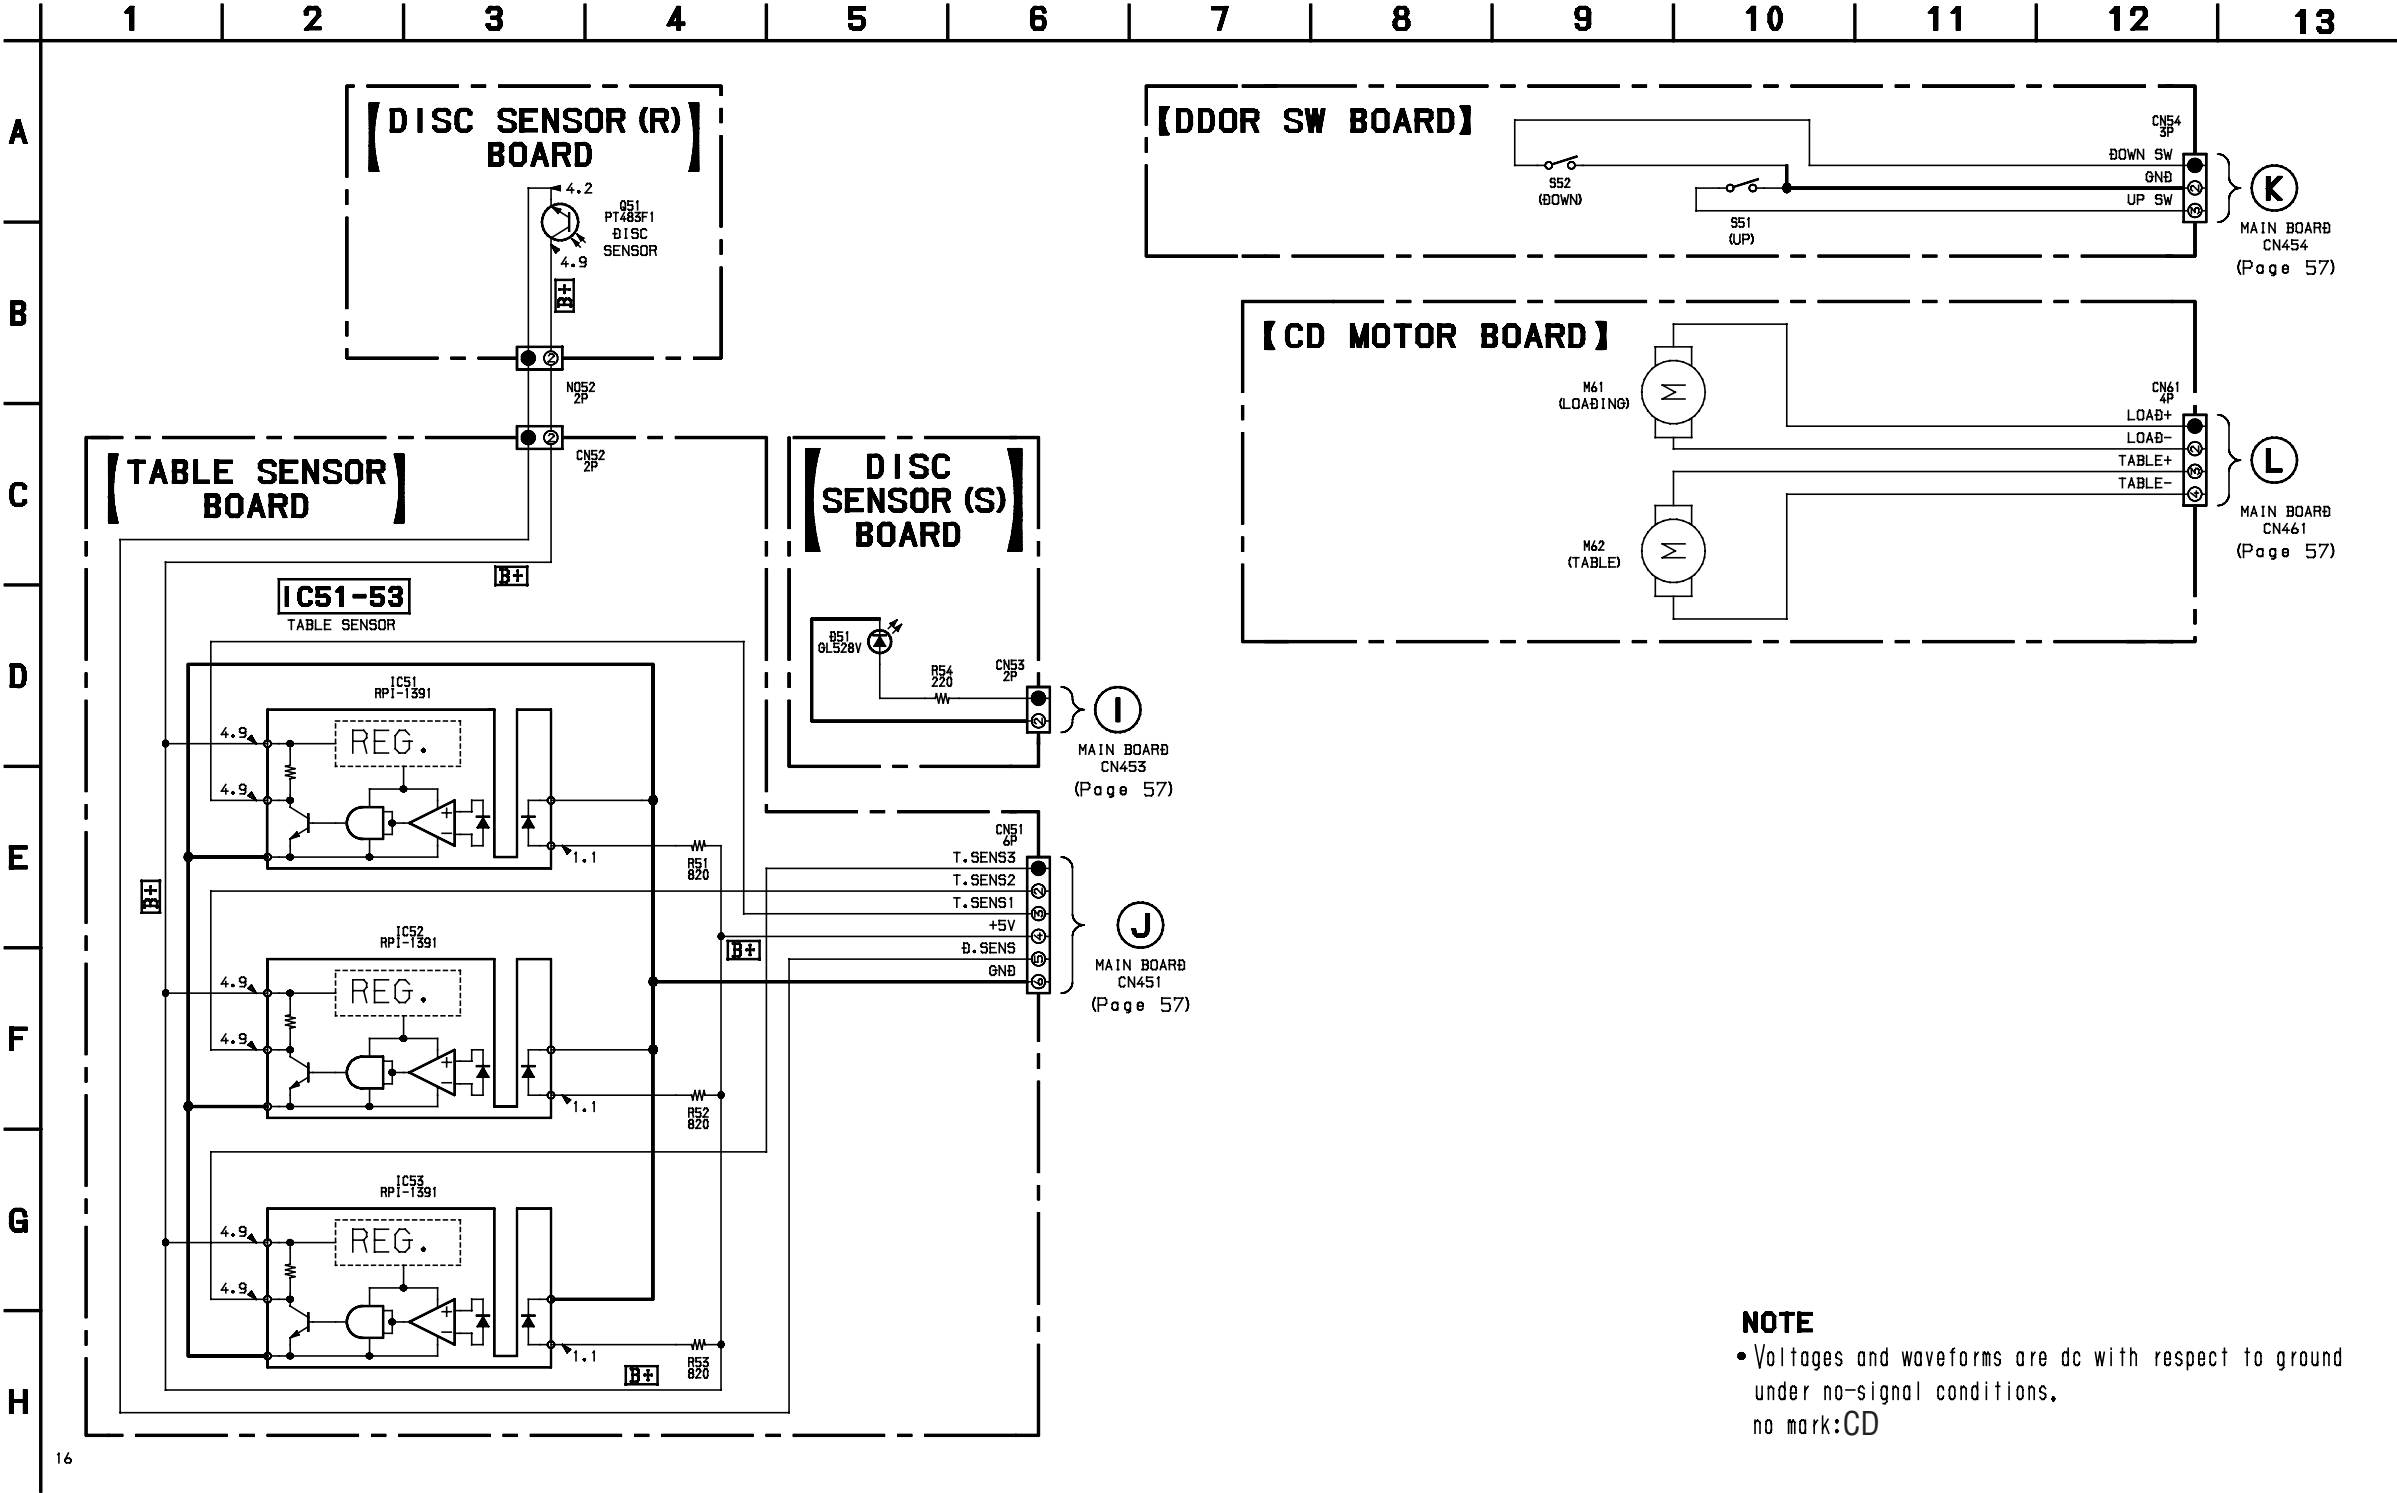


• Semiconductor Location

Ref. No.	Location
IC601	E-12
IC602	E-9
IC611	E-2
Q621	E-5
Q622	E-5
Q623	E-5

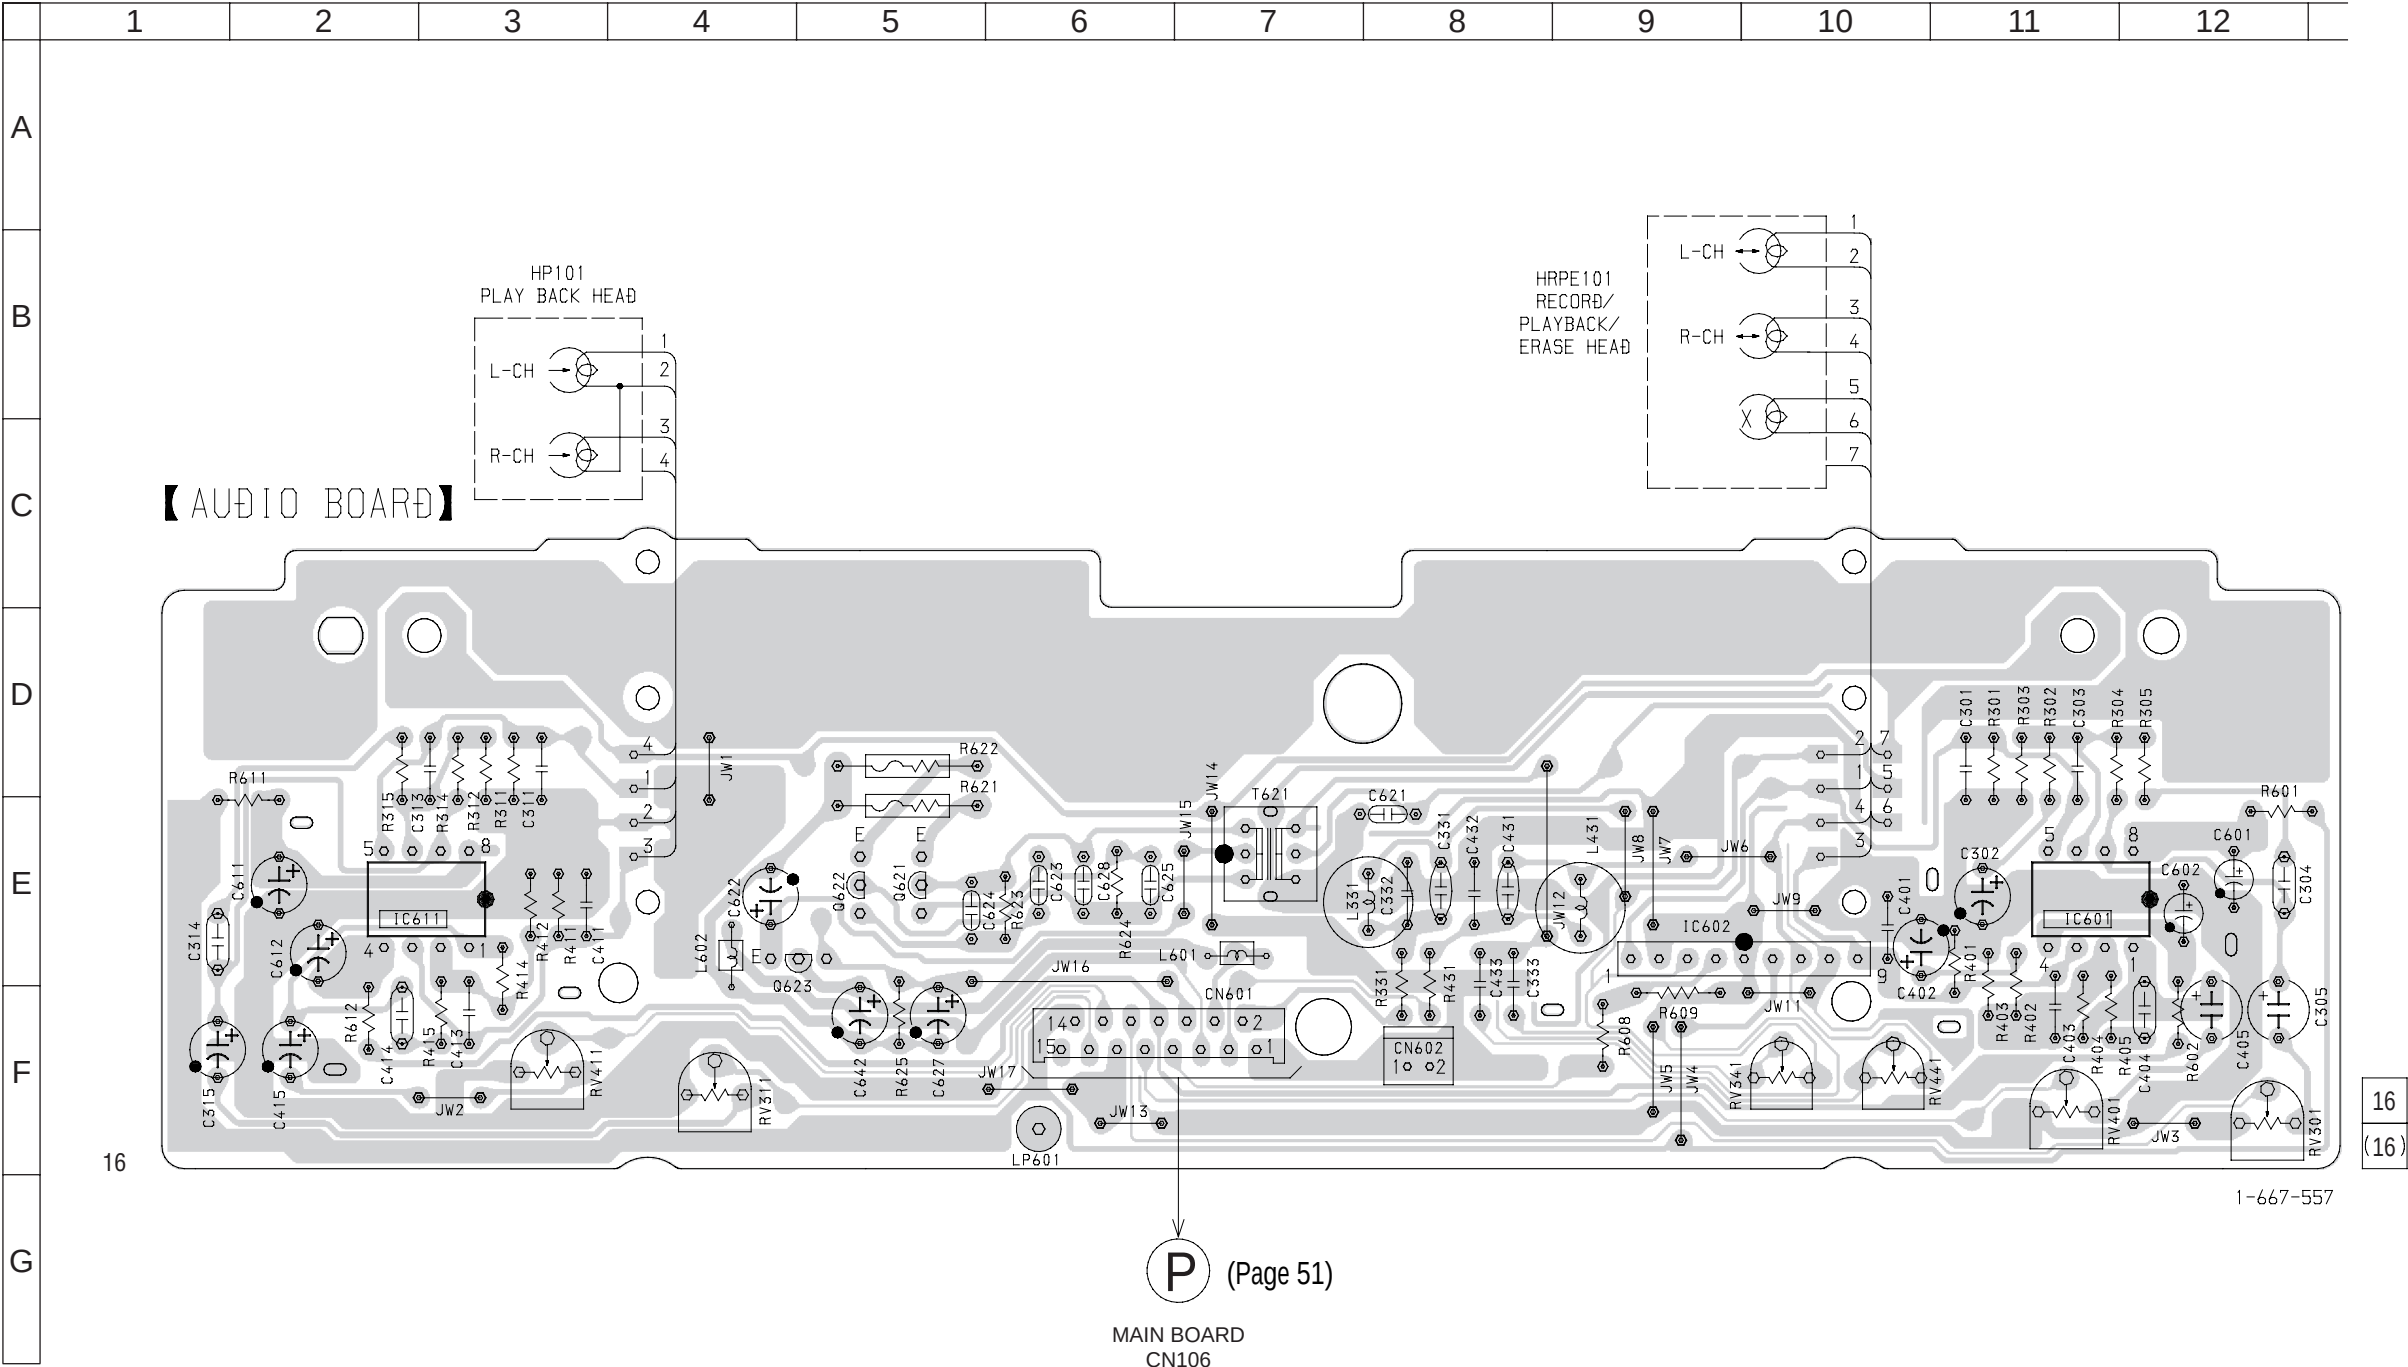


6-8. SCHEMATIC DIAGRAM AUDIO SECTION

• See page 84 for IC Block Diagrams.

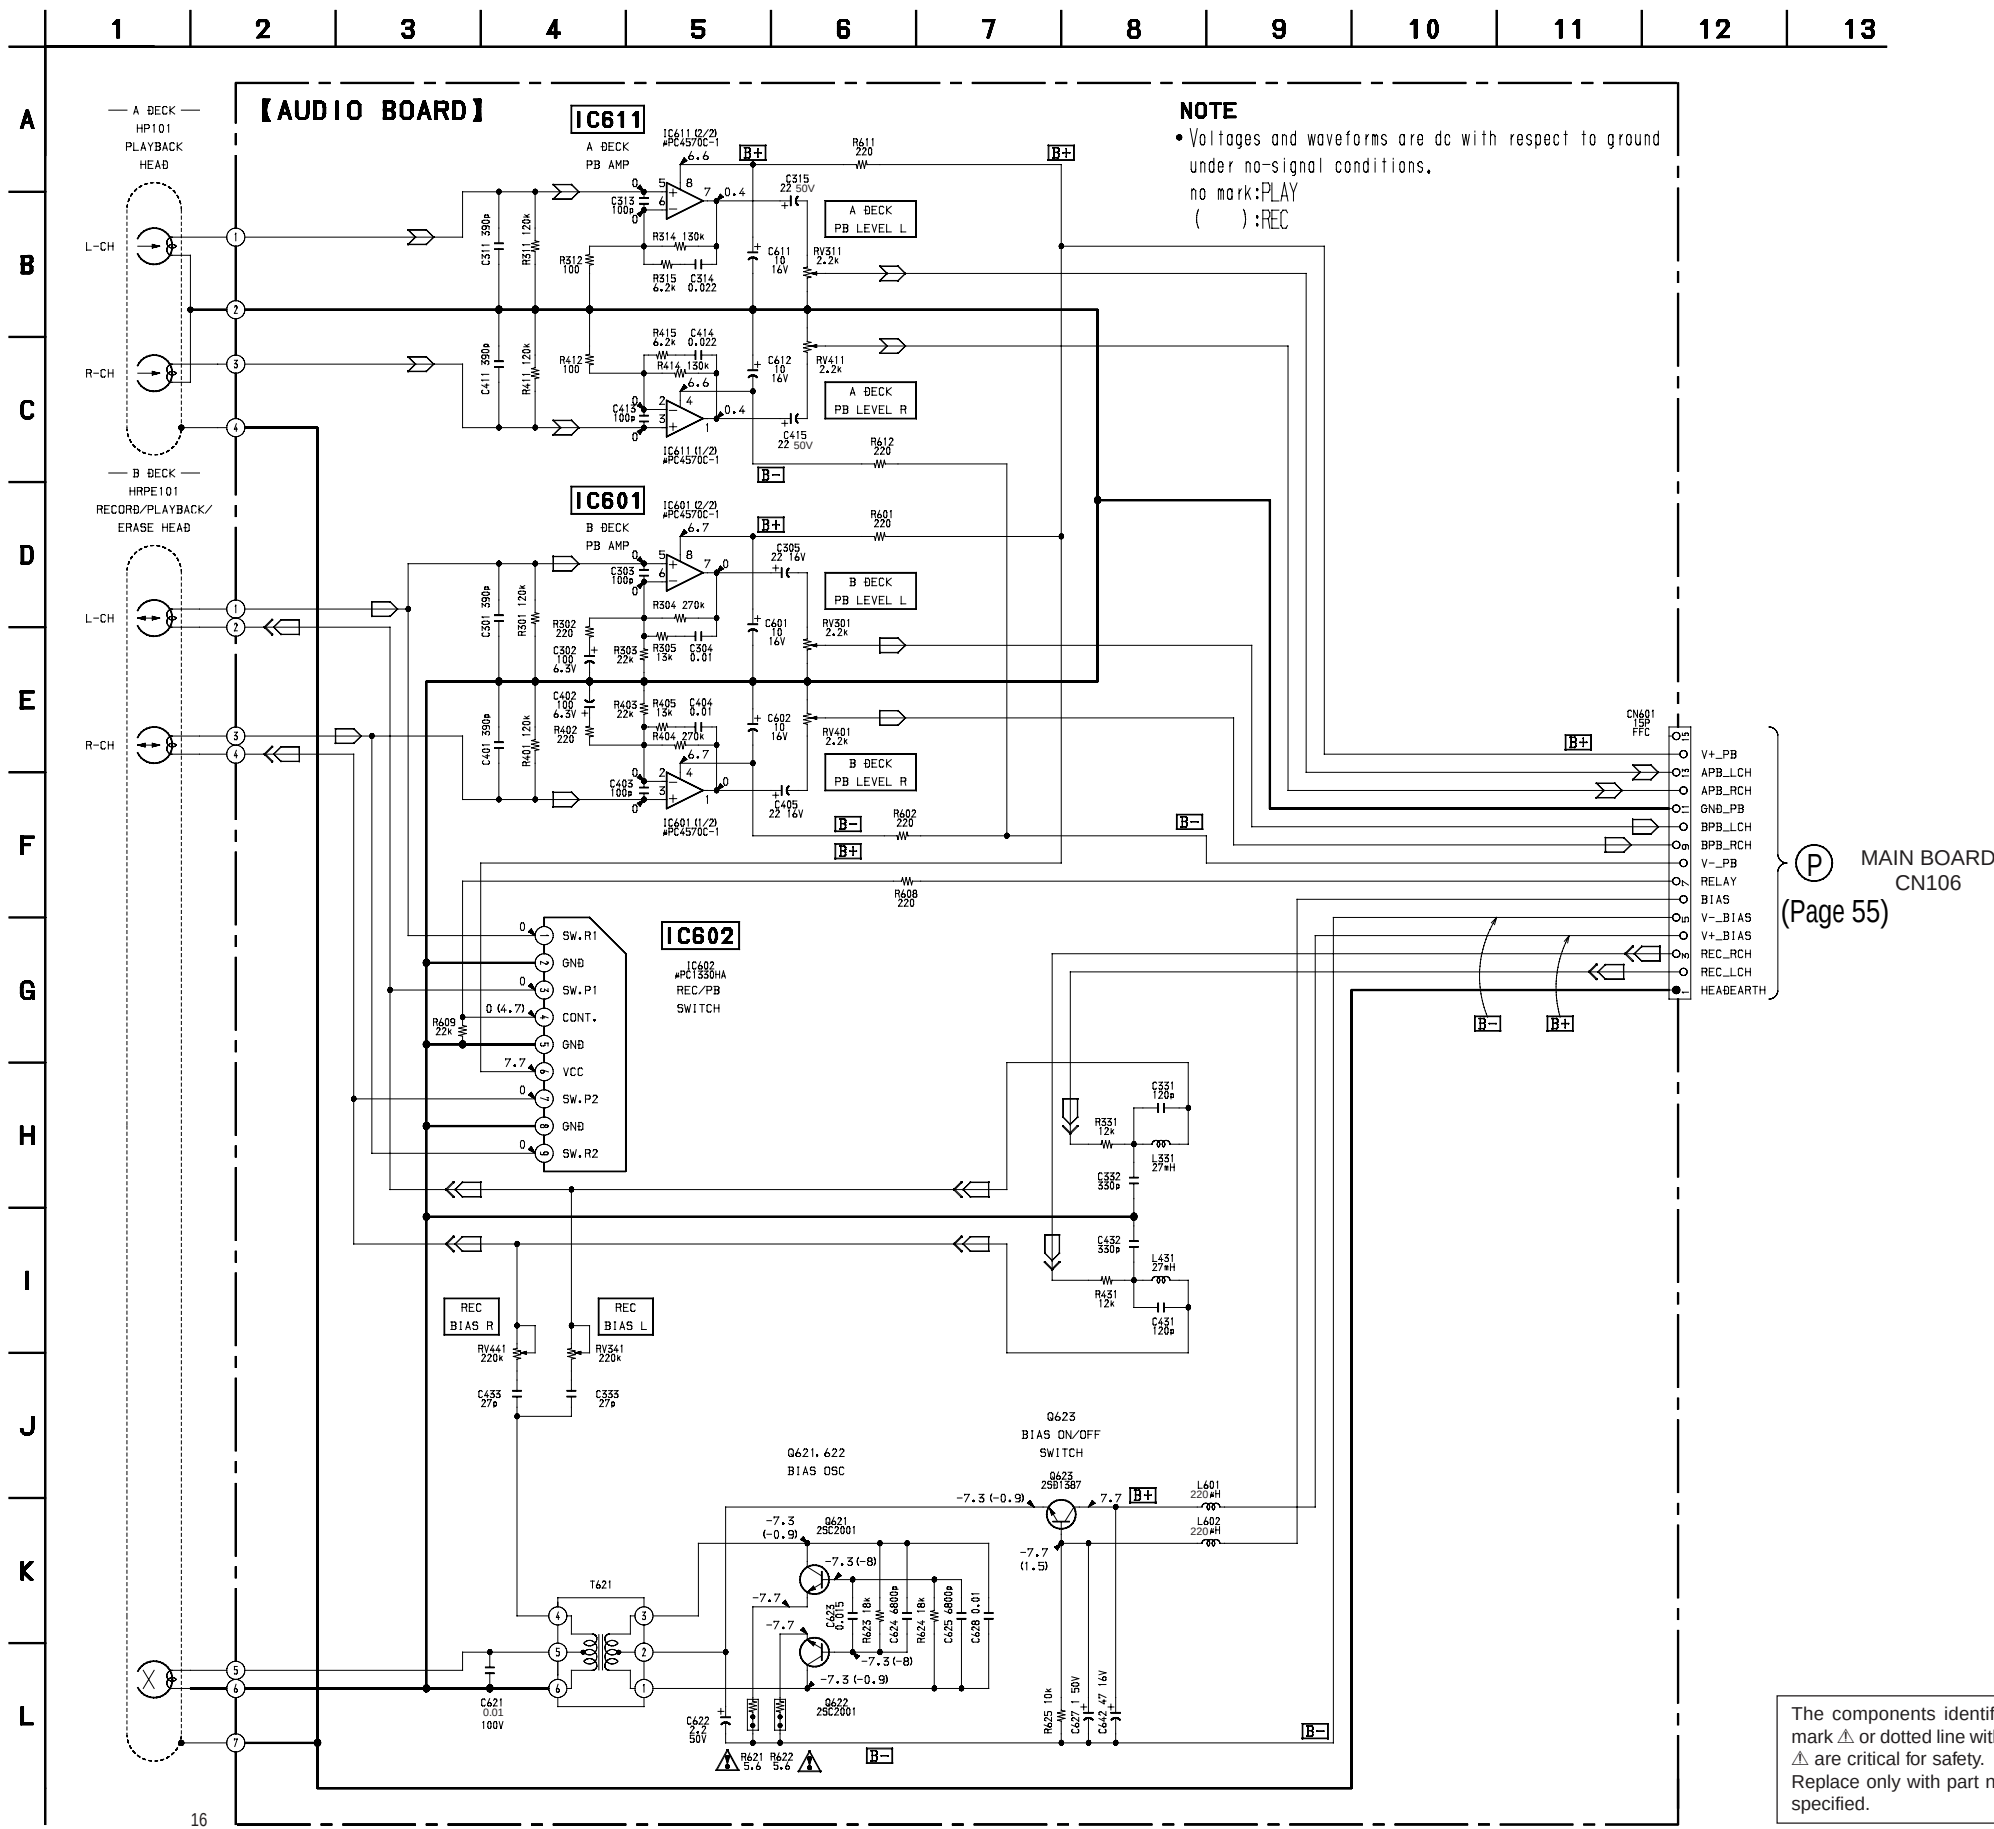

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

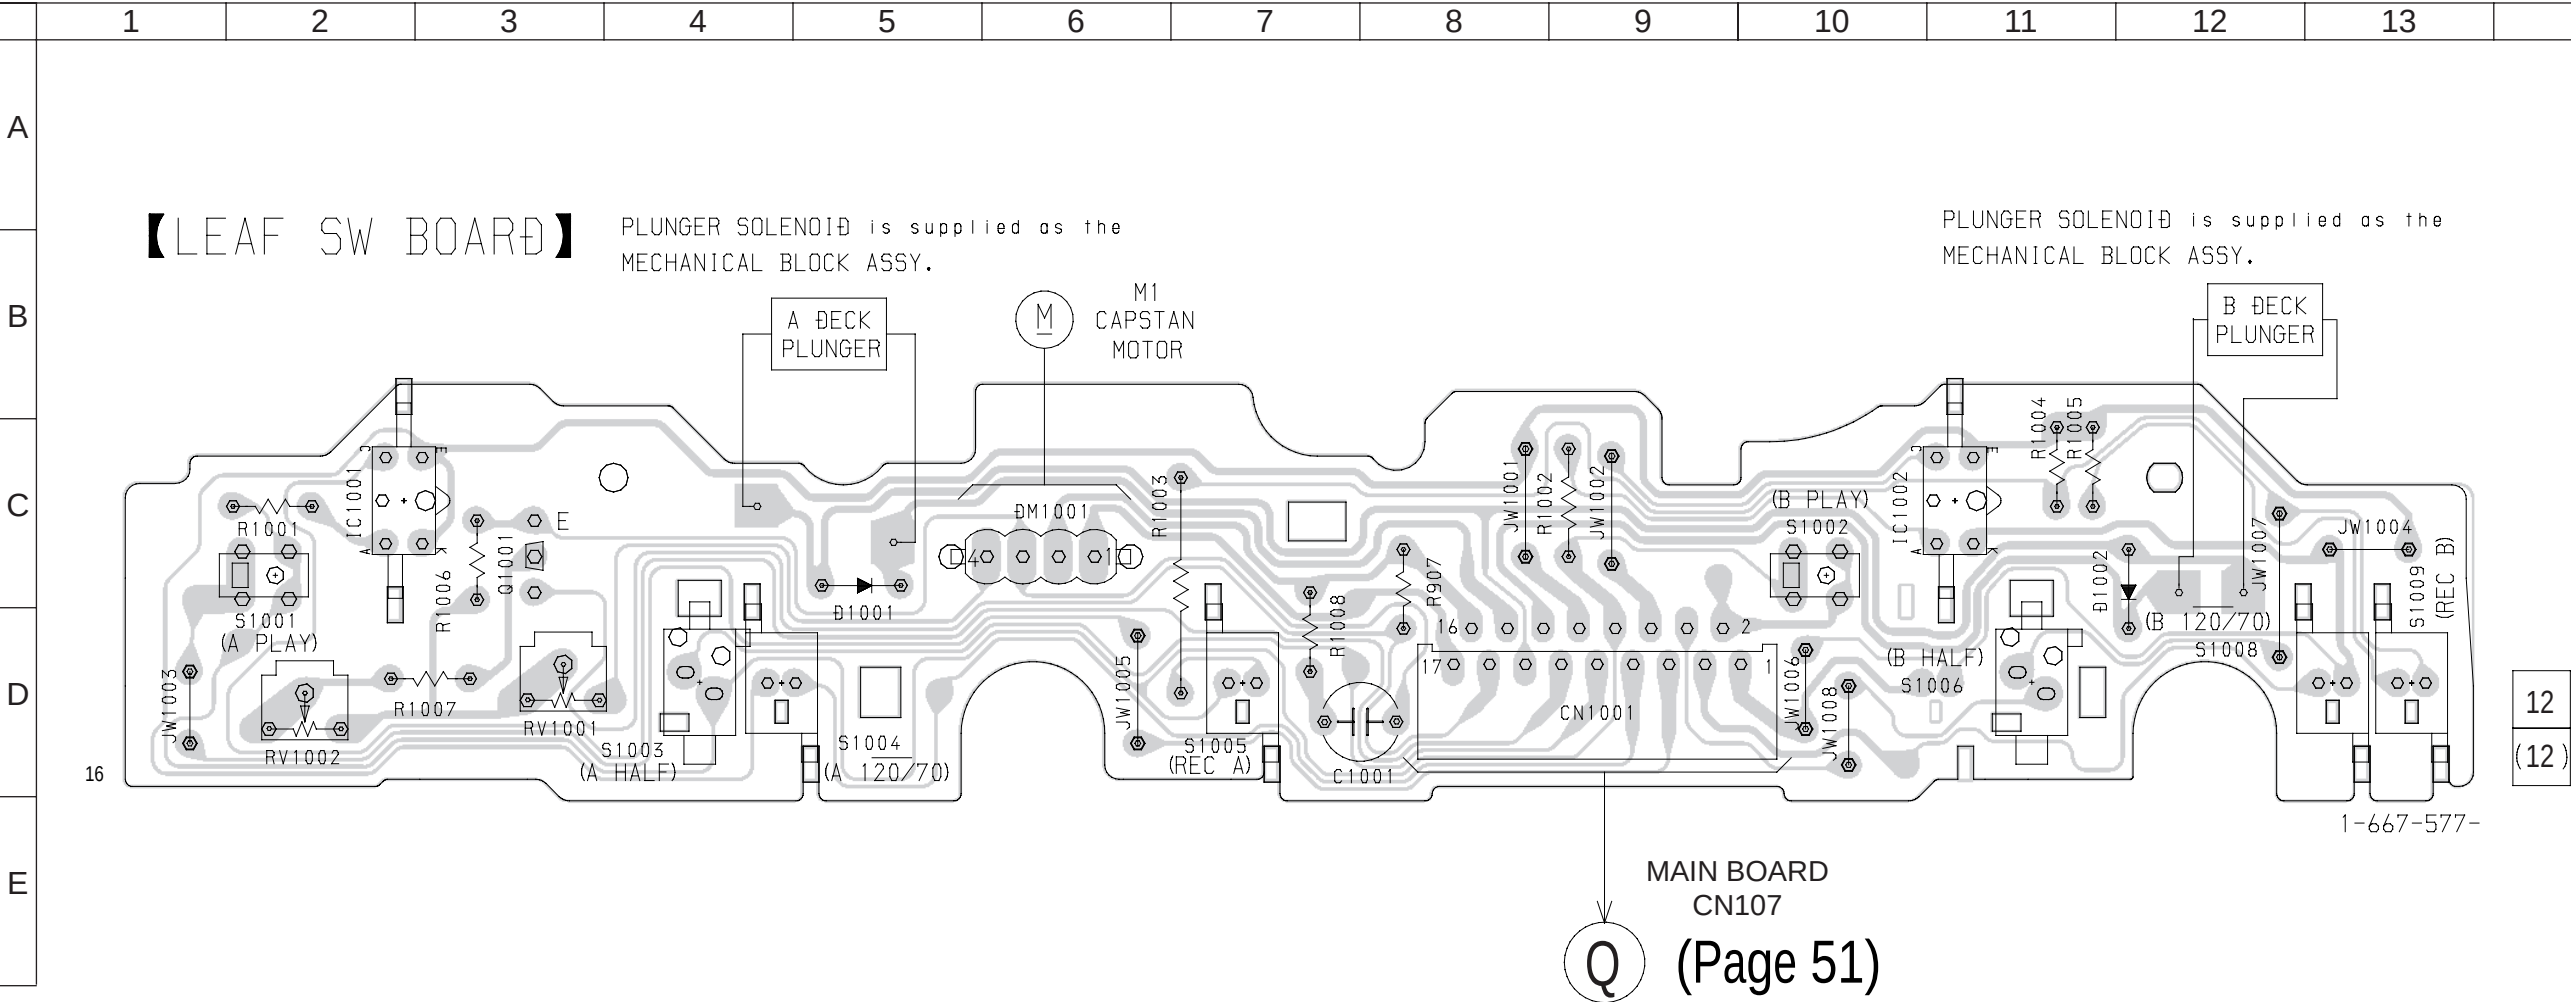

• Semiconductor Location


Ref. No.	Location
D1001	C-5
D1002	D12
IC1001	C-2
IC1002	C-11
Q1001	C-3

6-10. SCHEMATIC DIAGRAM LEAF SW SECTION

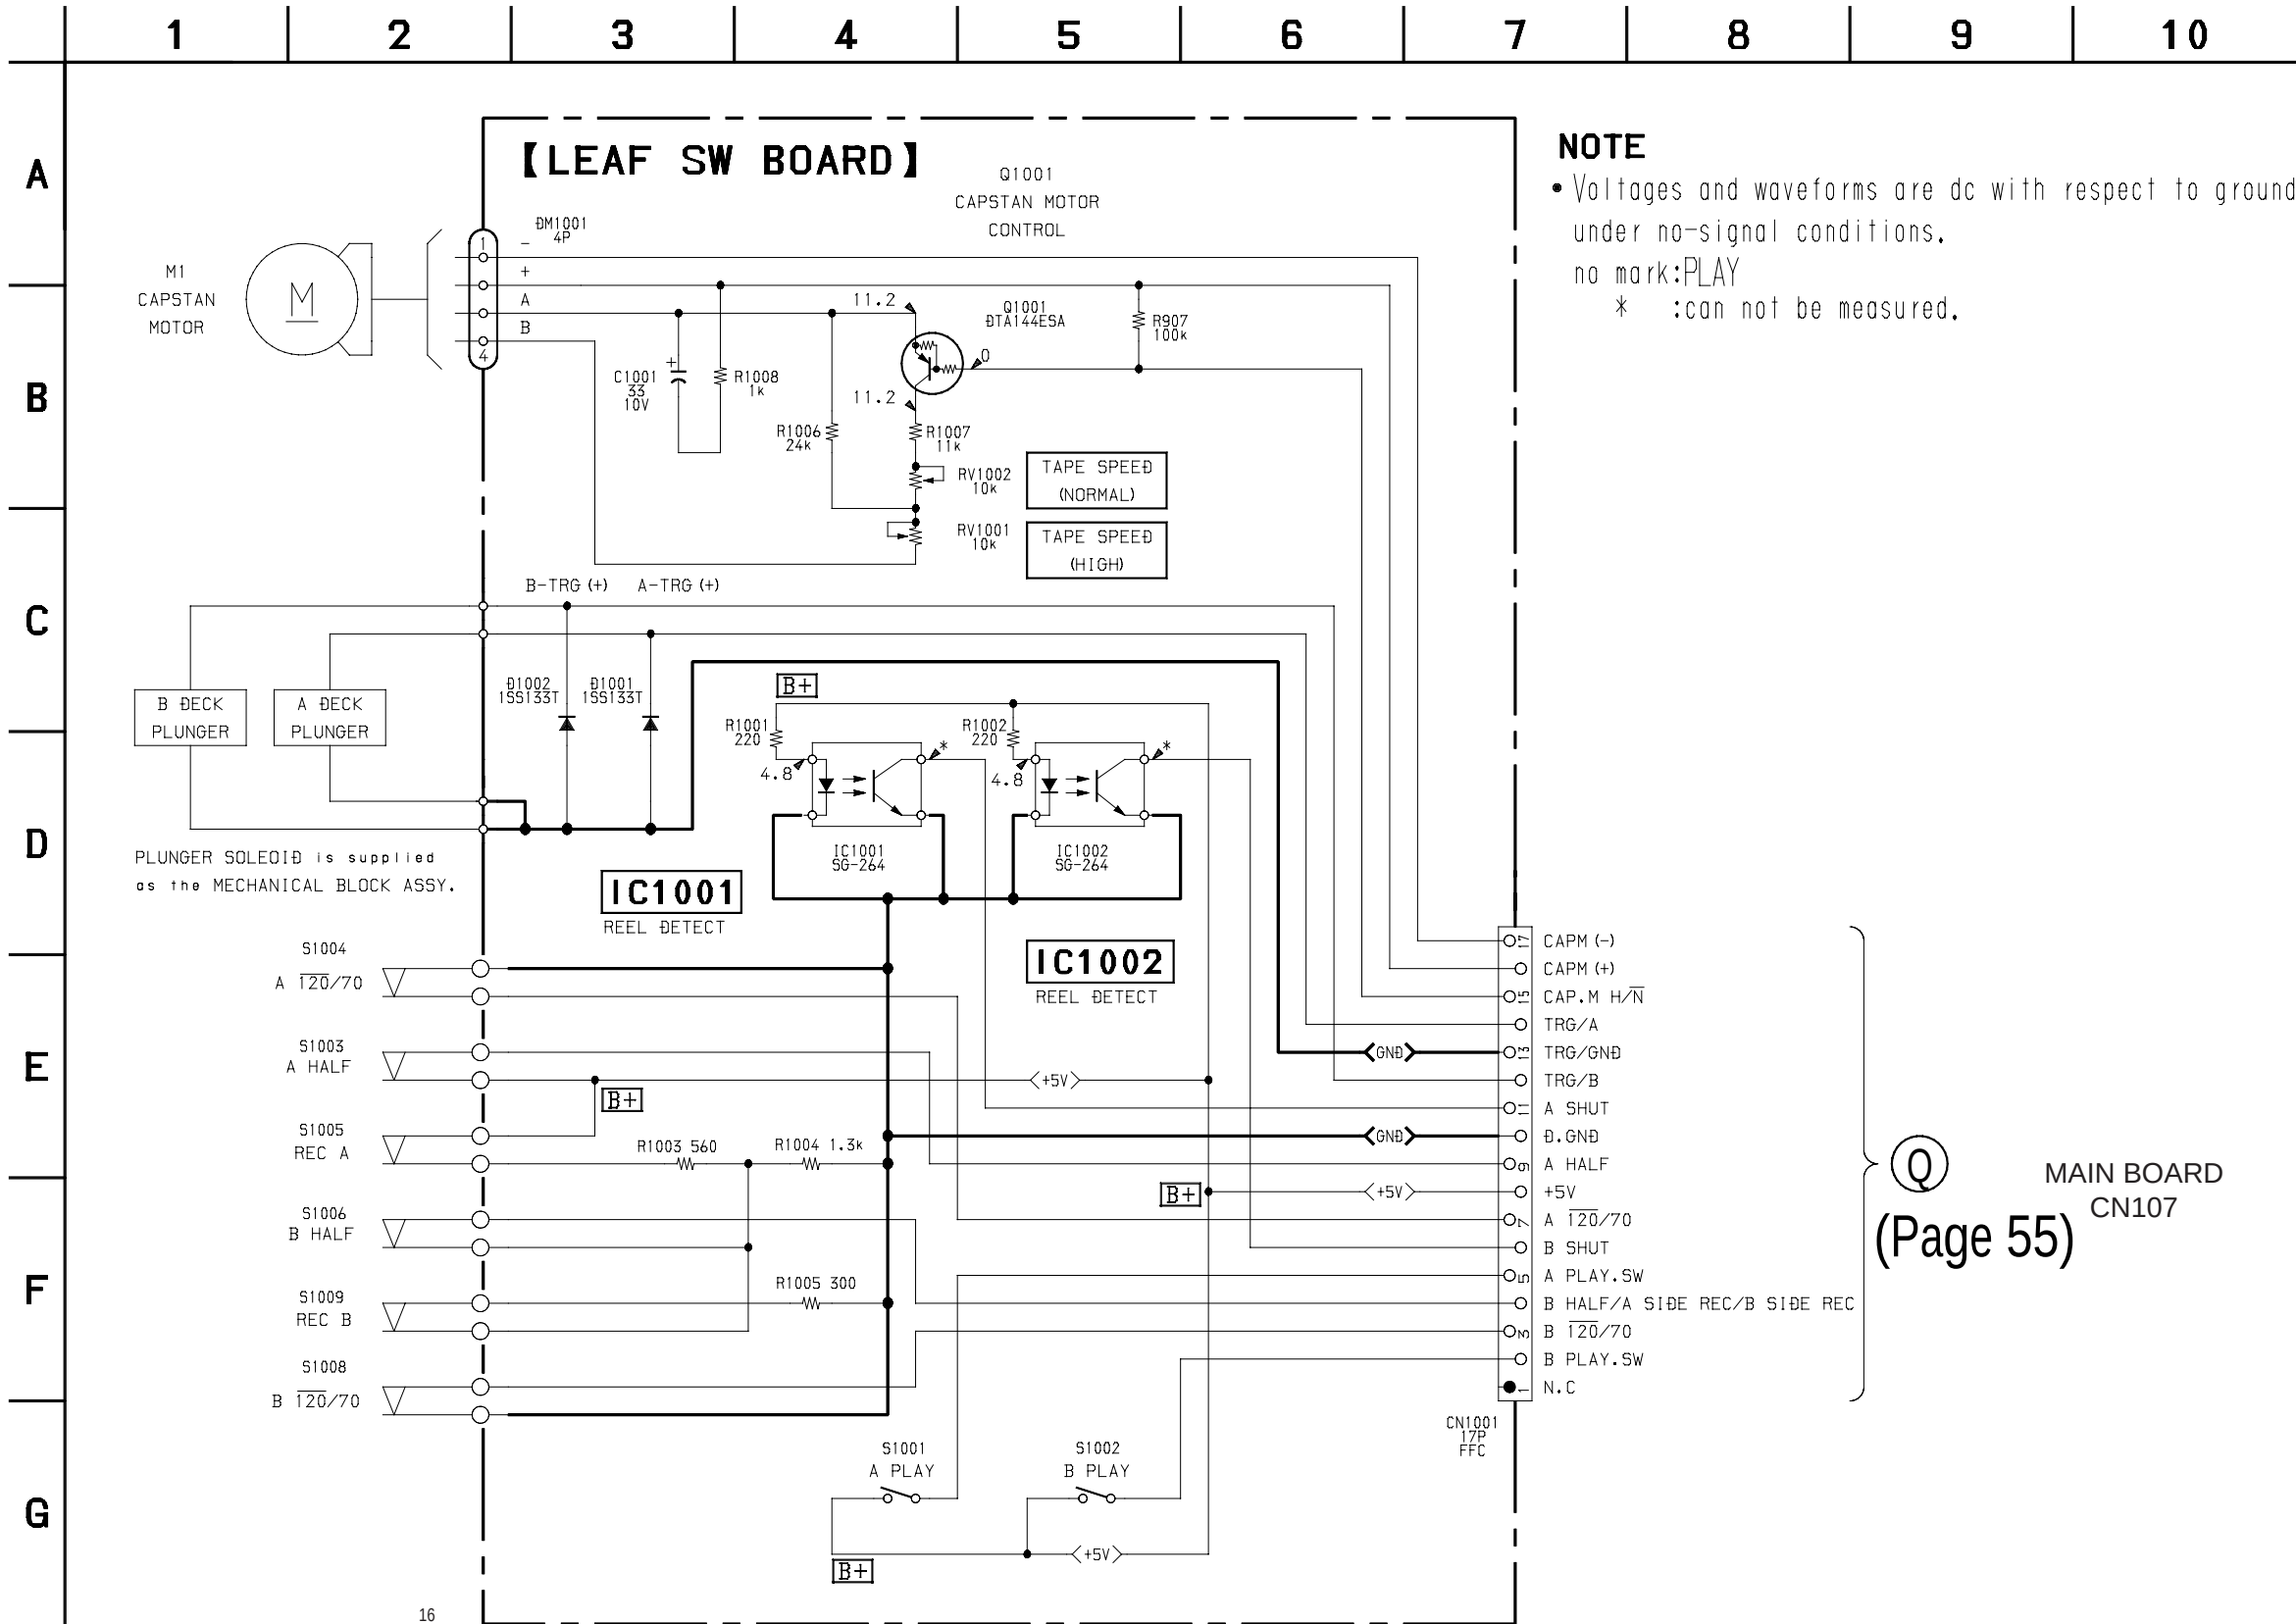


6-11. PRINTED WIRING BOARD MAIN SECTION • See page 33 for Circuit Boards Location.


• Semiconductor Location	
Ref. No.	Location
D141	C-10
D333	D-1
D401	I-10
D402	I-10
D411	I-10
D501	D-7
D502	D-7
D503	D-7
D504	D-7
D505	D-6
D506	D-6
D701	E-13
D702	F-11
D703	E-10
D704	E-11
D705	E-13
D712	G-11
D731	H-10
D732	H-2
D733	H-5
D751	E-13
D901	H-4
D902	H-4
D903	H-5
D904	H-5
D905	F-6
D906	F-7
D907	H-6
D908	H-6
D909	H-4
D910	H-3
D911	H-2
D912	H-2
D913	G-4
D914	F-3
D917	F-3
IC101	B-11
IC191	D-13
IC301	C-4
IC401	I-11
IC402	E-13
IC411	I-12
IC441	G-8
IC461	J-13
IC501	B-6
IC502	D-6
IC701	H-10
IC901	H-7
IC902	G-4
IC903	F-2
IC904	E-8
Q111	C10
Q112	B-10
Q113	C-9
Q191	C-13
Q161	B-10
Q162	B-10
Q163	C-9
Q331	F-2
Q332	F-1
Q333	F-2
Q334	F-1
Q335	F-3
Q336	F-2
Q337	F-2
Q338	F-1
Q339	F-1
Q340	D-2
Q341	D-2
Q342	D-1
Q343	D-1
Q411	J-13
Q501	D-7
Q505	C-5
Q571	D-5
Q572	D-5
Q575	D-8
Q701	F-10
Q702	F-10
Q703	E-13
Q704	E-13
Q711	G-9
Q712	F-9
Q713	F-9
Q731	H-10
Q732	G-10
Q733	H-9
Q901	F-6
Q902	F-6
Q903	F-7
Q905	F-4
Q906	F-3
Q907	F-4
Q908	F-4
Q910	H-2
Q911	F-7
Q912	F-7
Q913	G-4
Q914	G-4
Q915	F-6
Q916	F-5
Q951	F-5
Q952	F-5

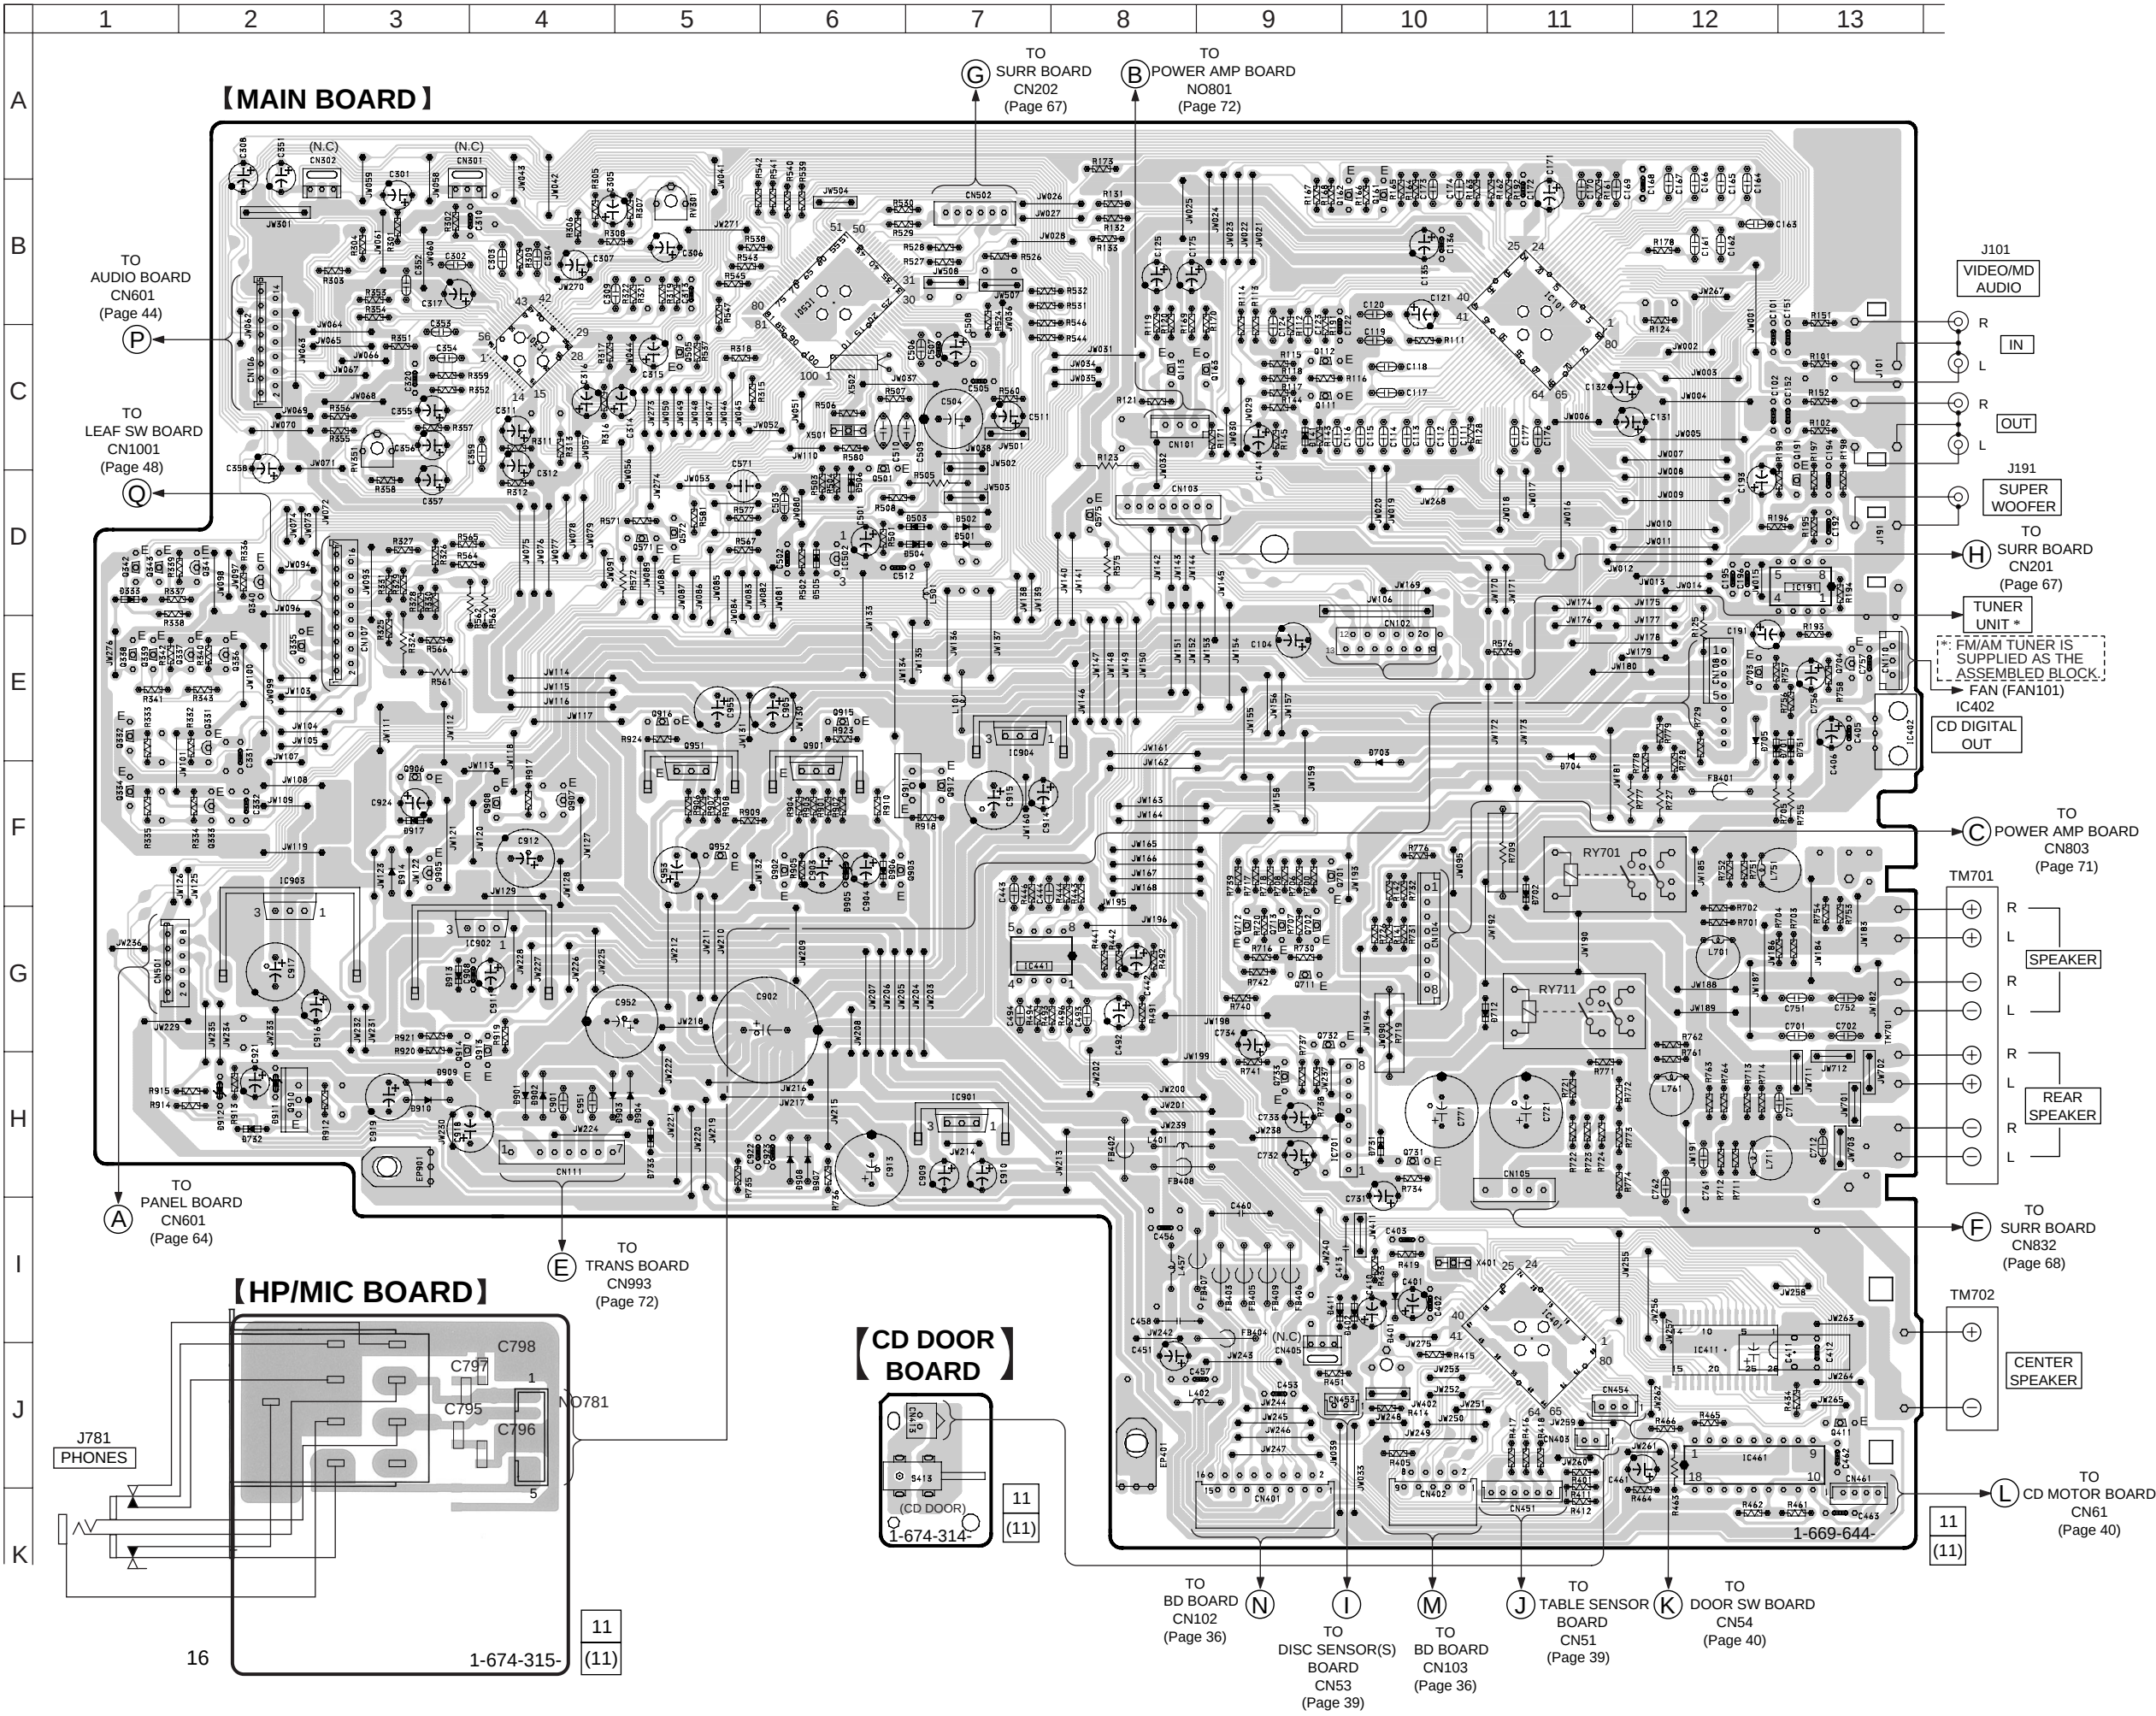



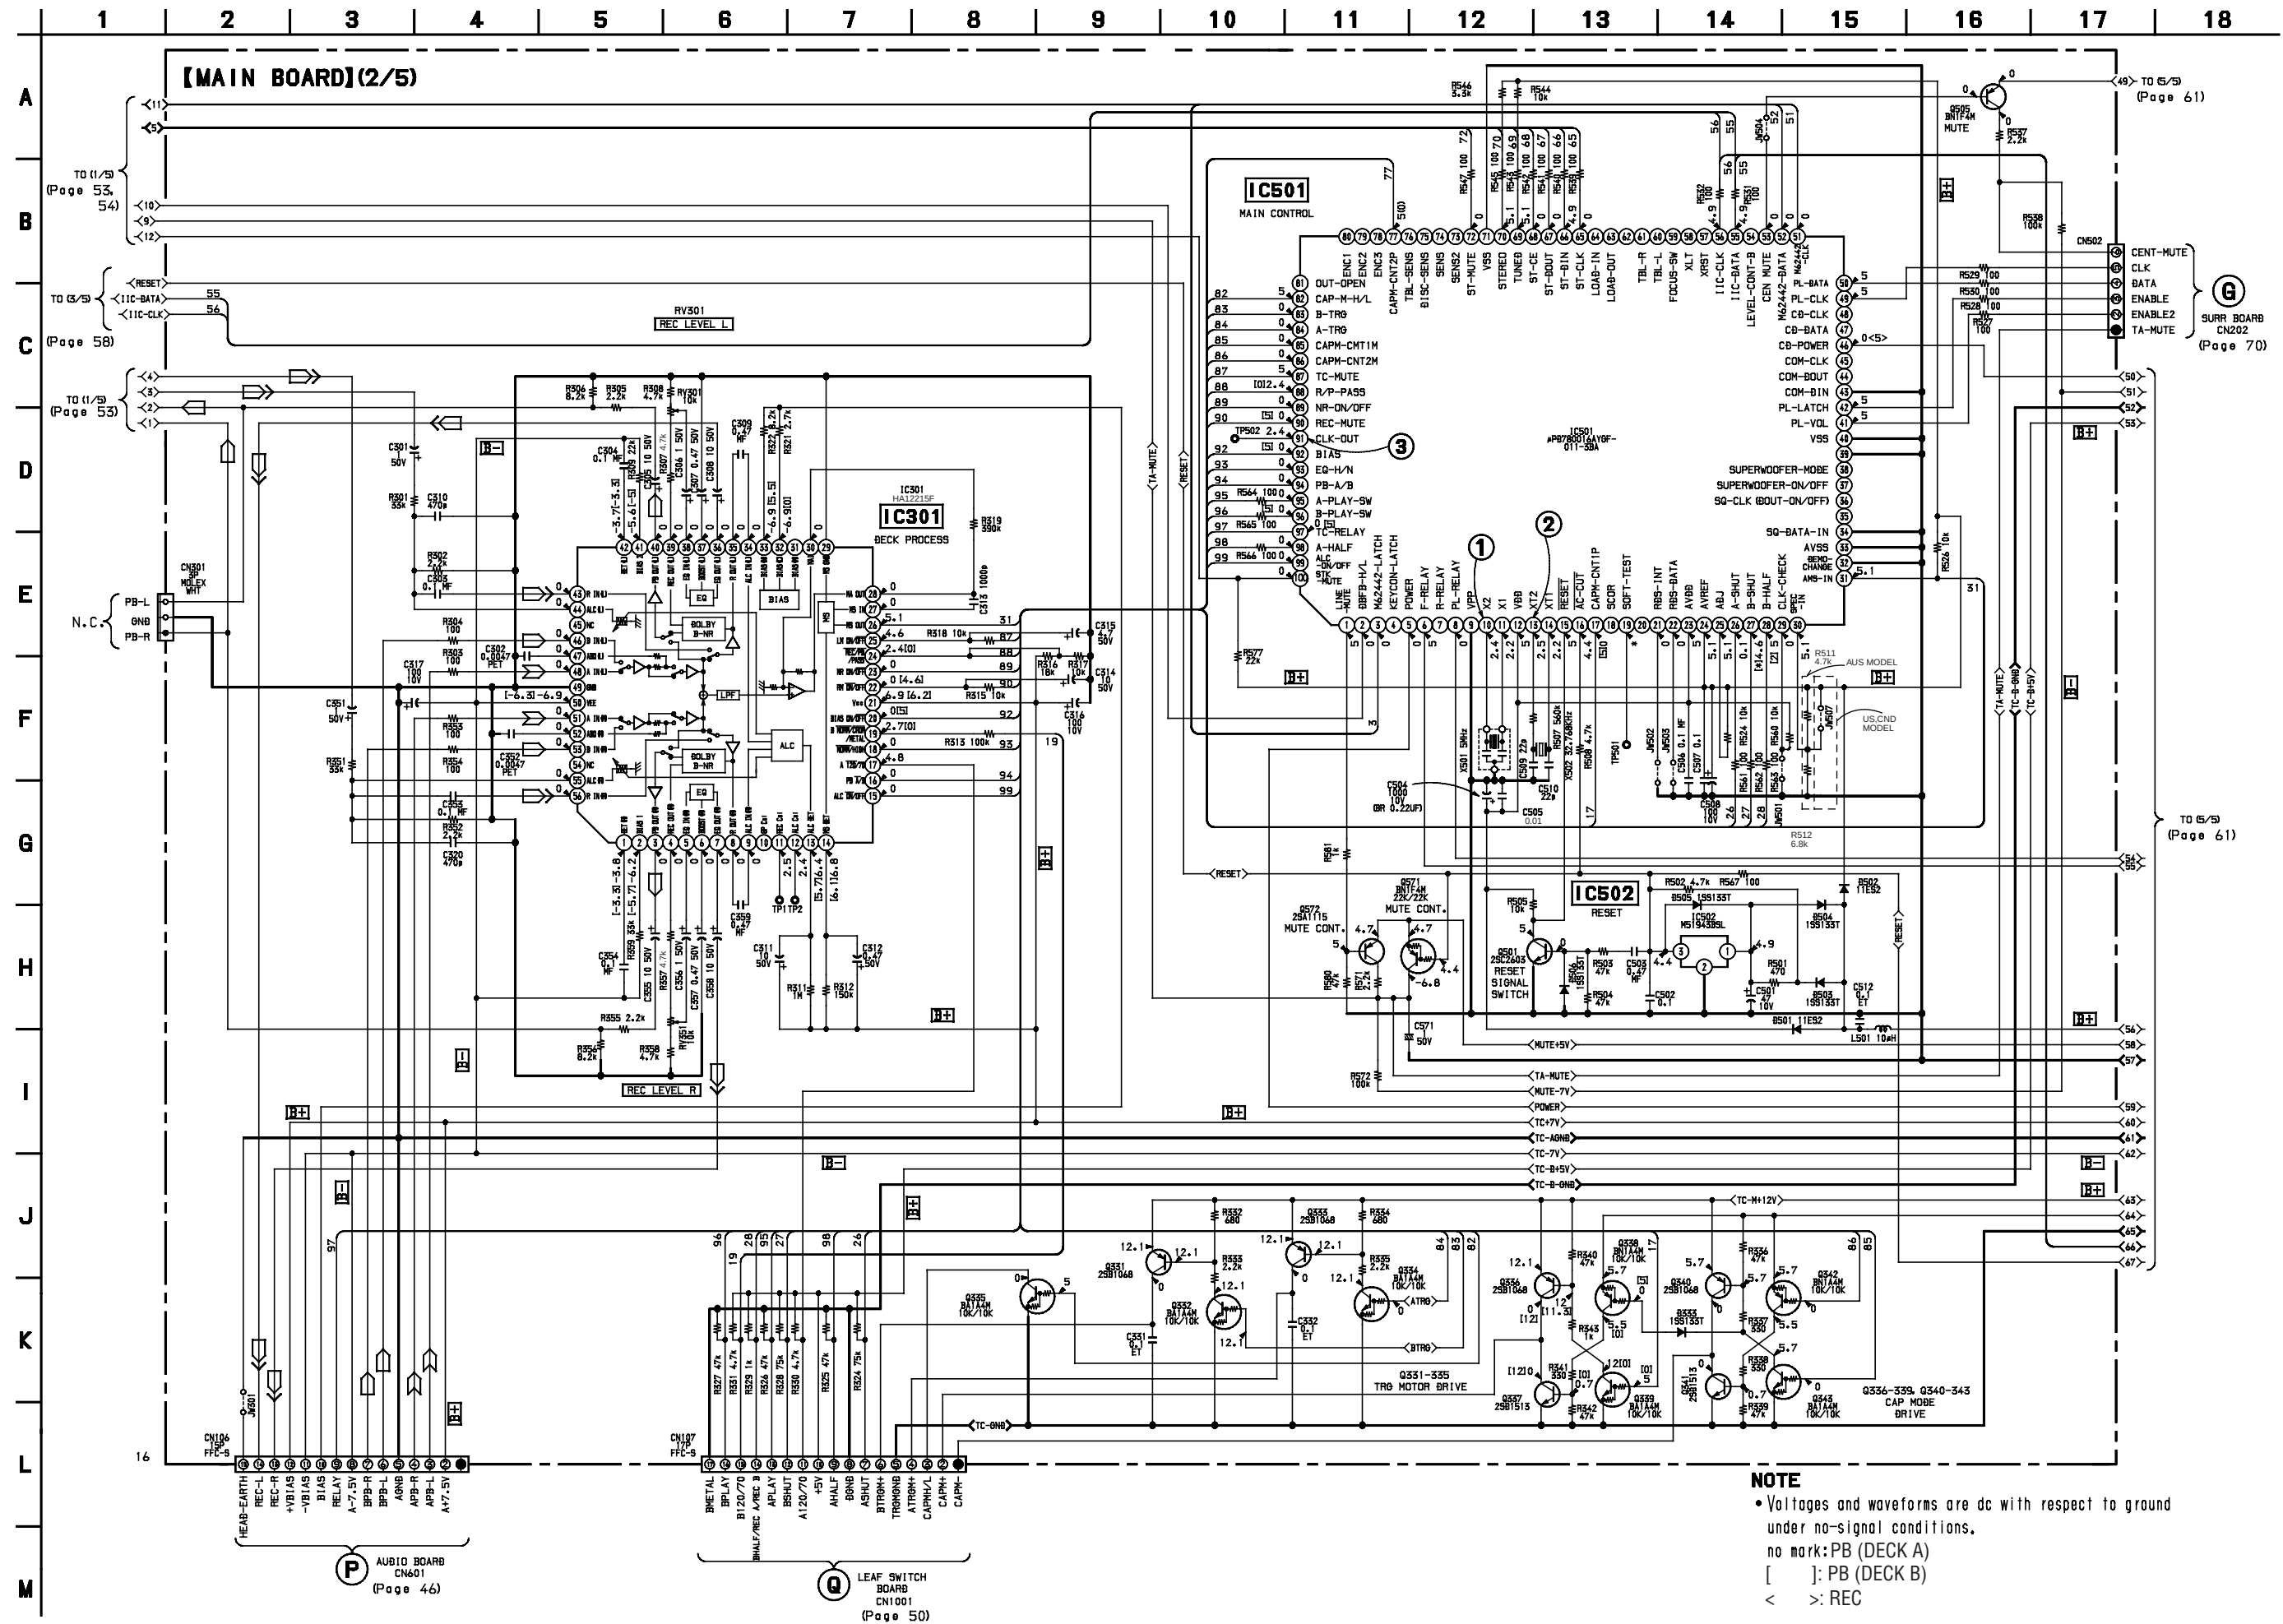



6-14. SCHEMATIC DIAGRAM MAIN (3/5) SECTION • See page 51 for Printed Wiring Board. • See page 75 for Waveforms. • See page 80 for IC Pin Functions. • See page 84 for IC Block Diagrams.

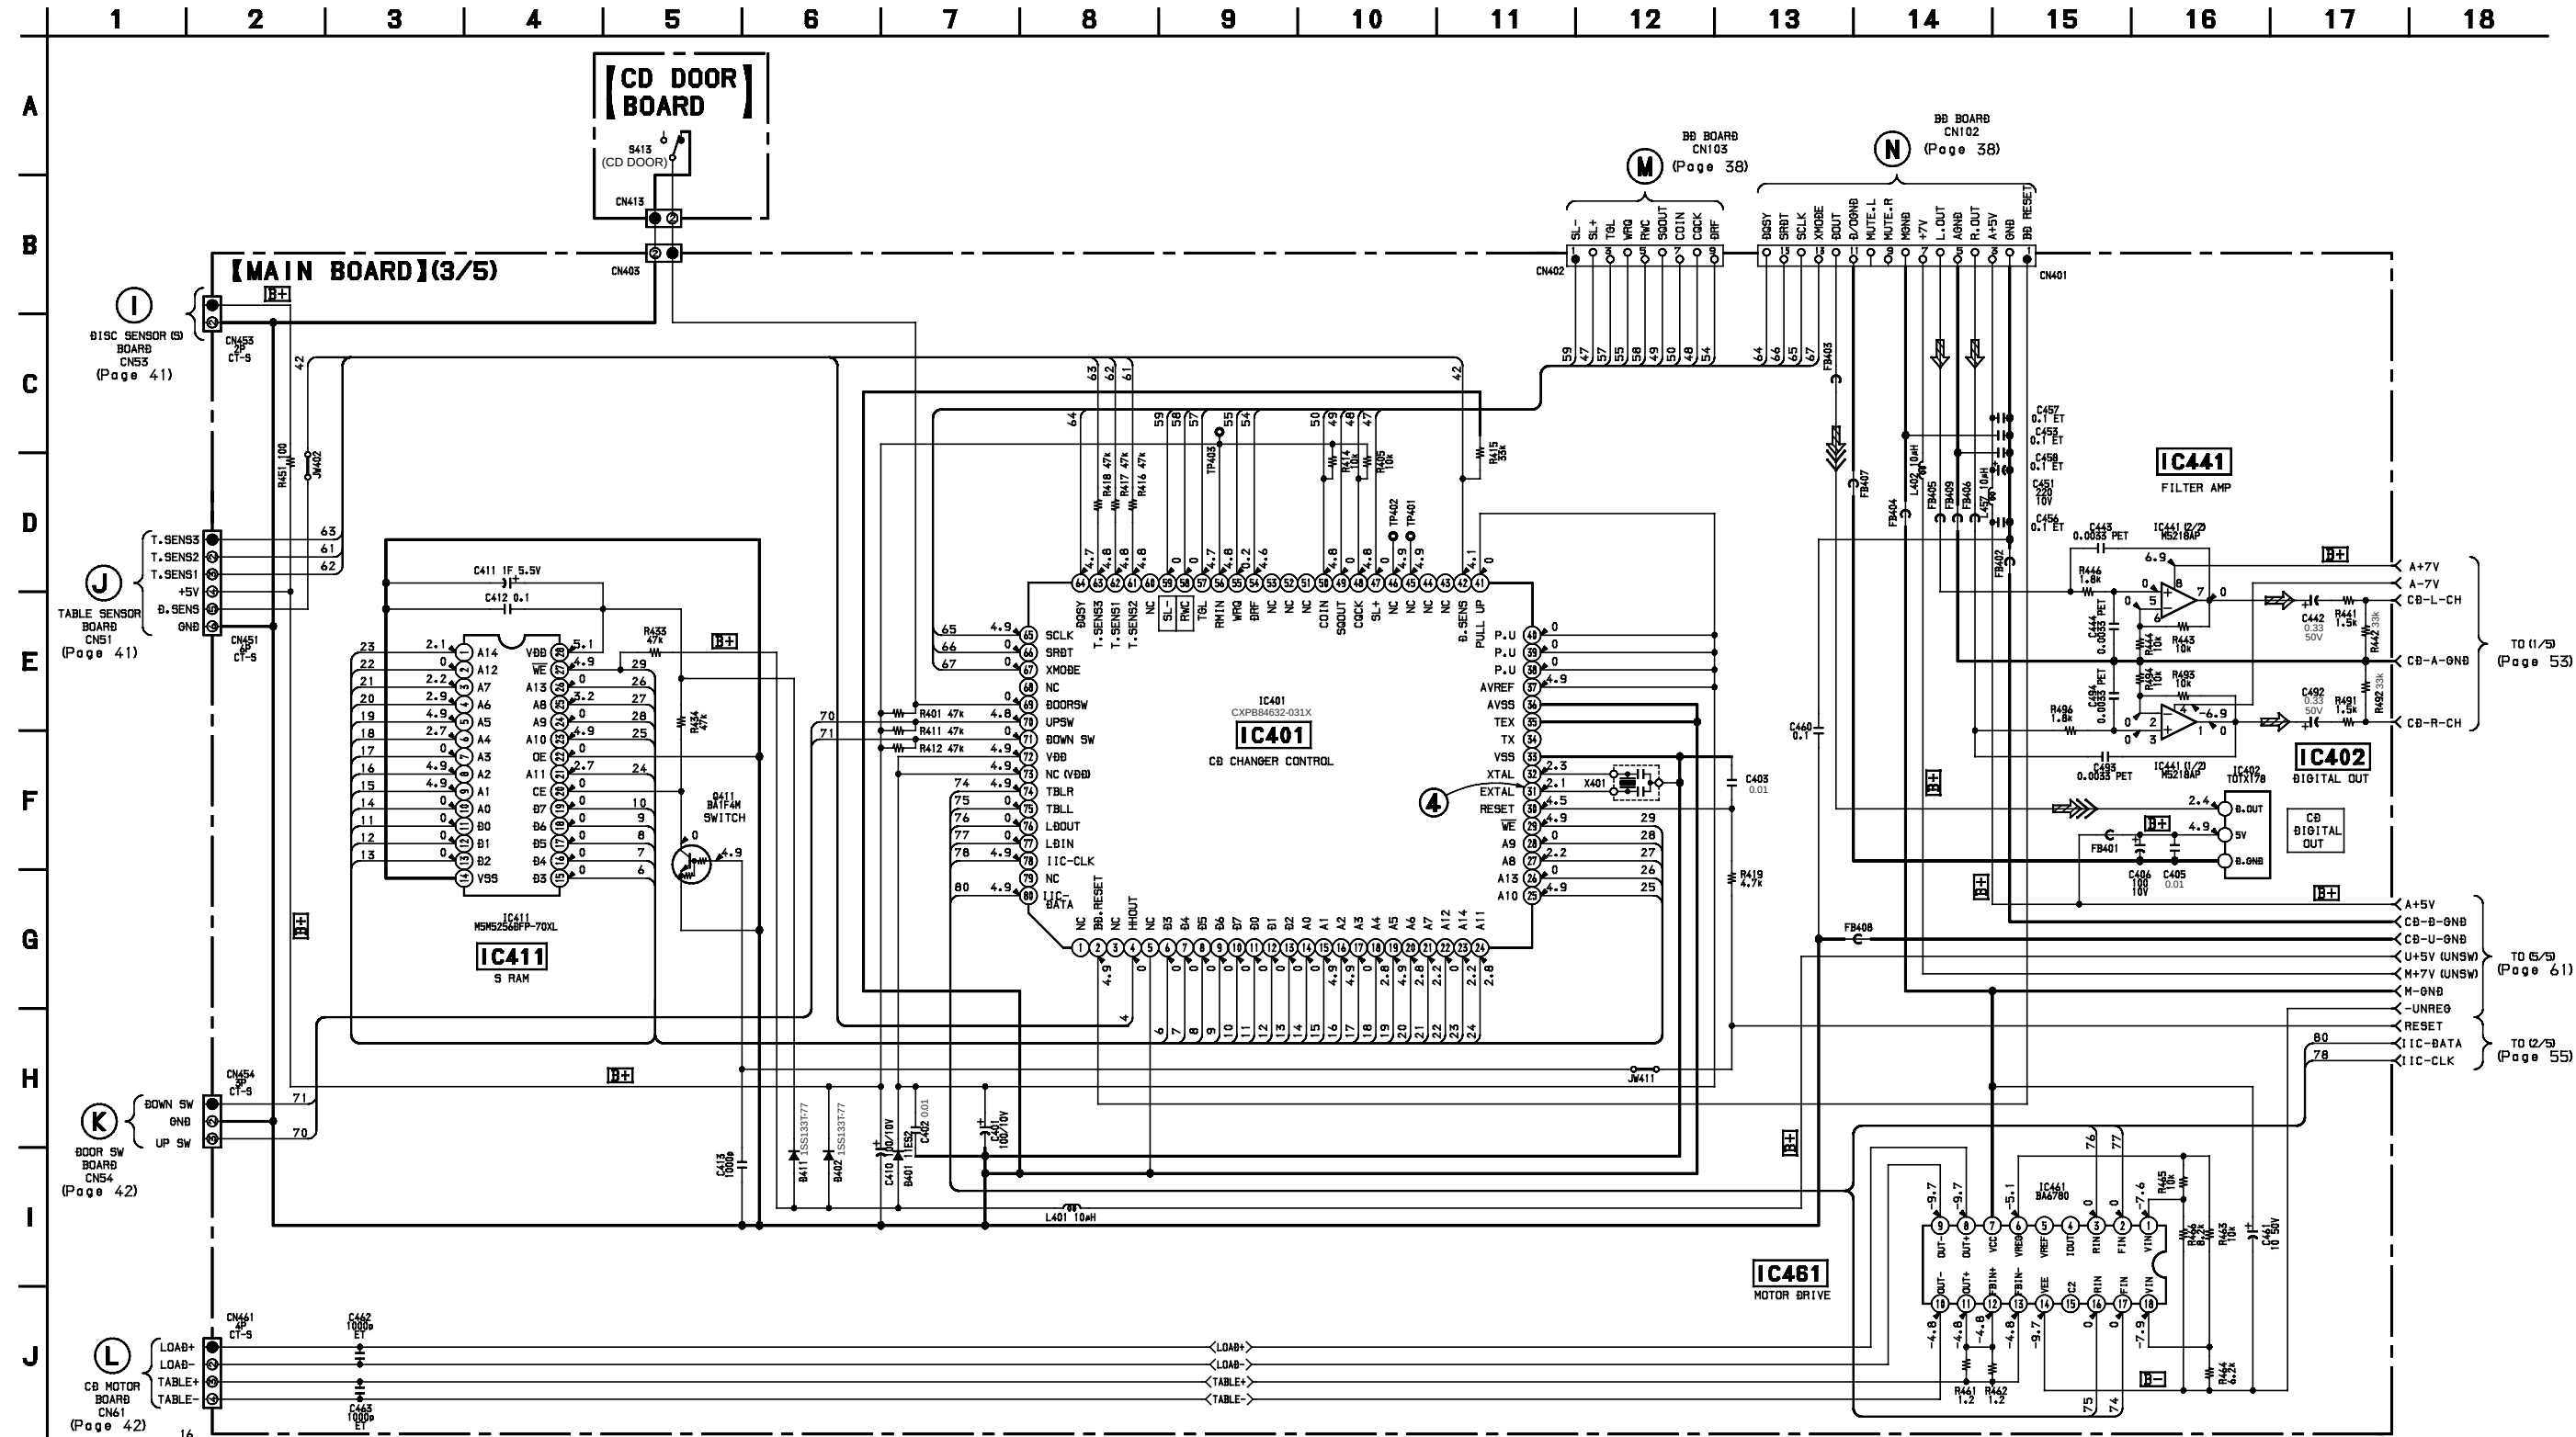

NOTE


- Voltages and waveforms are dc with respect to ground under no-signal conditions.
no mark:CD

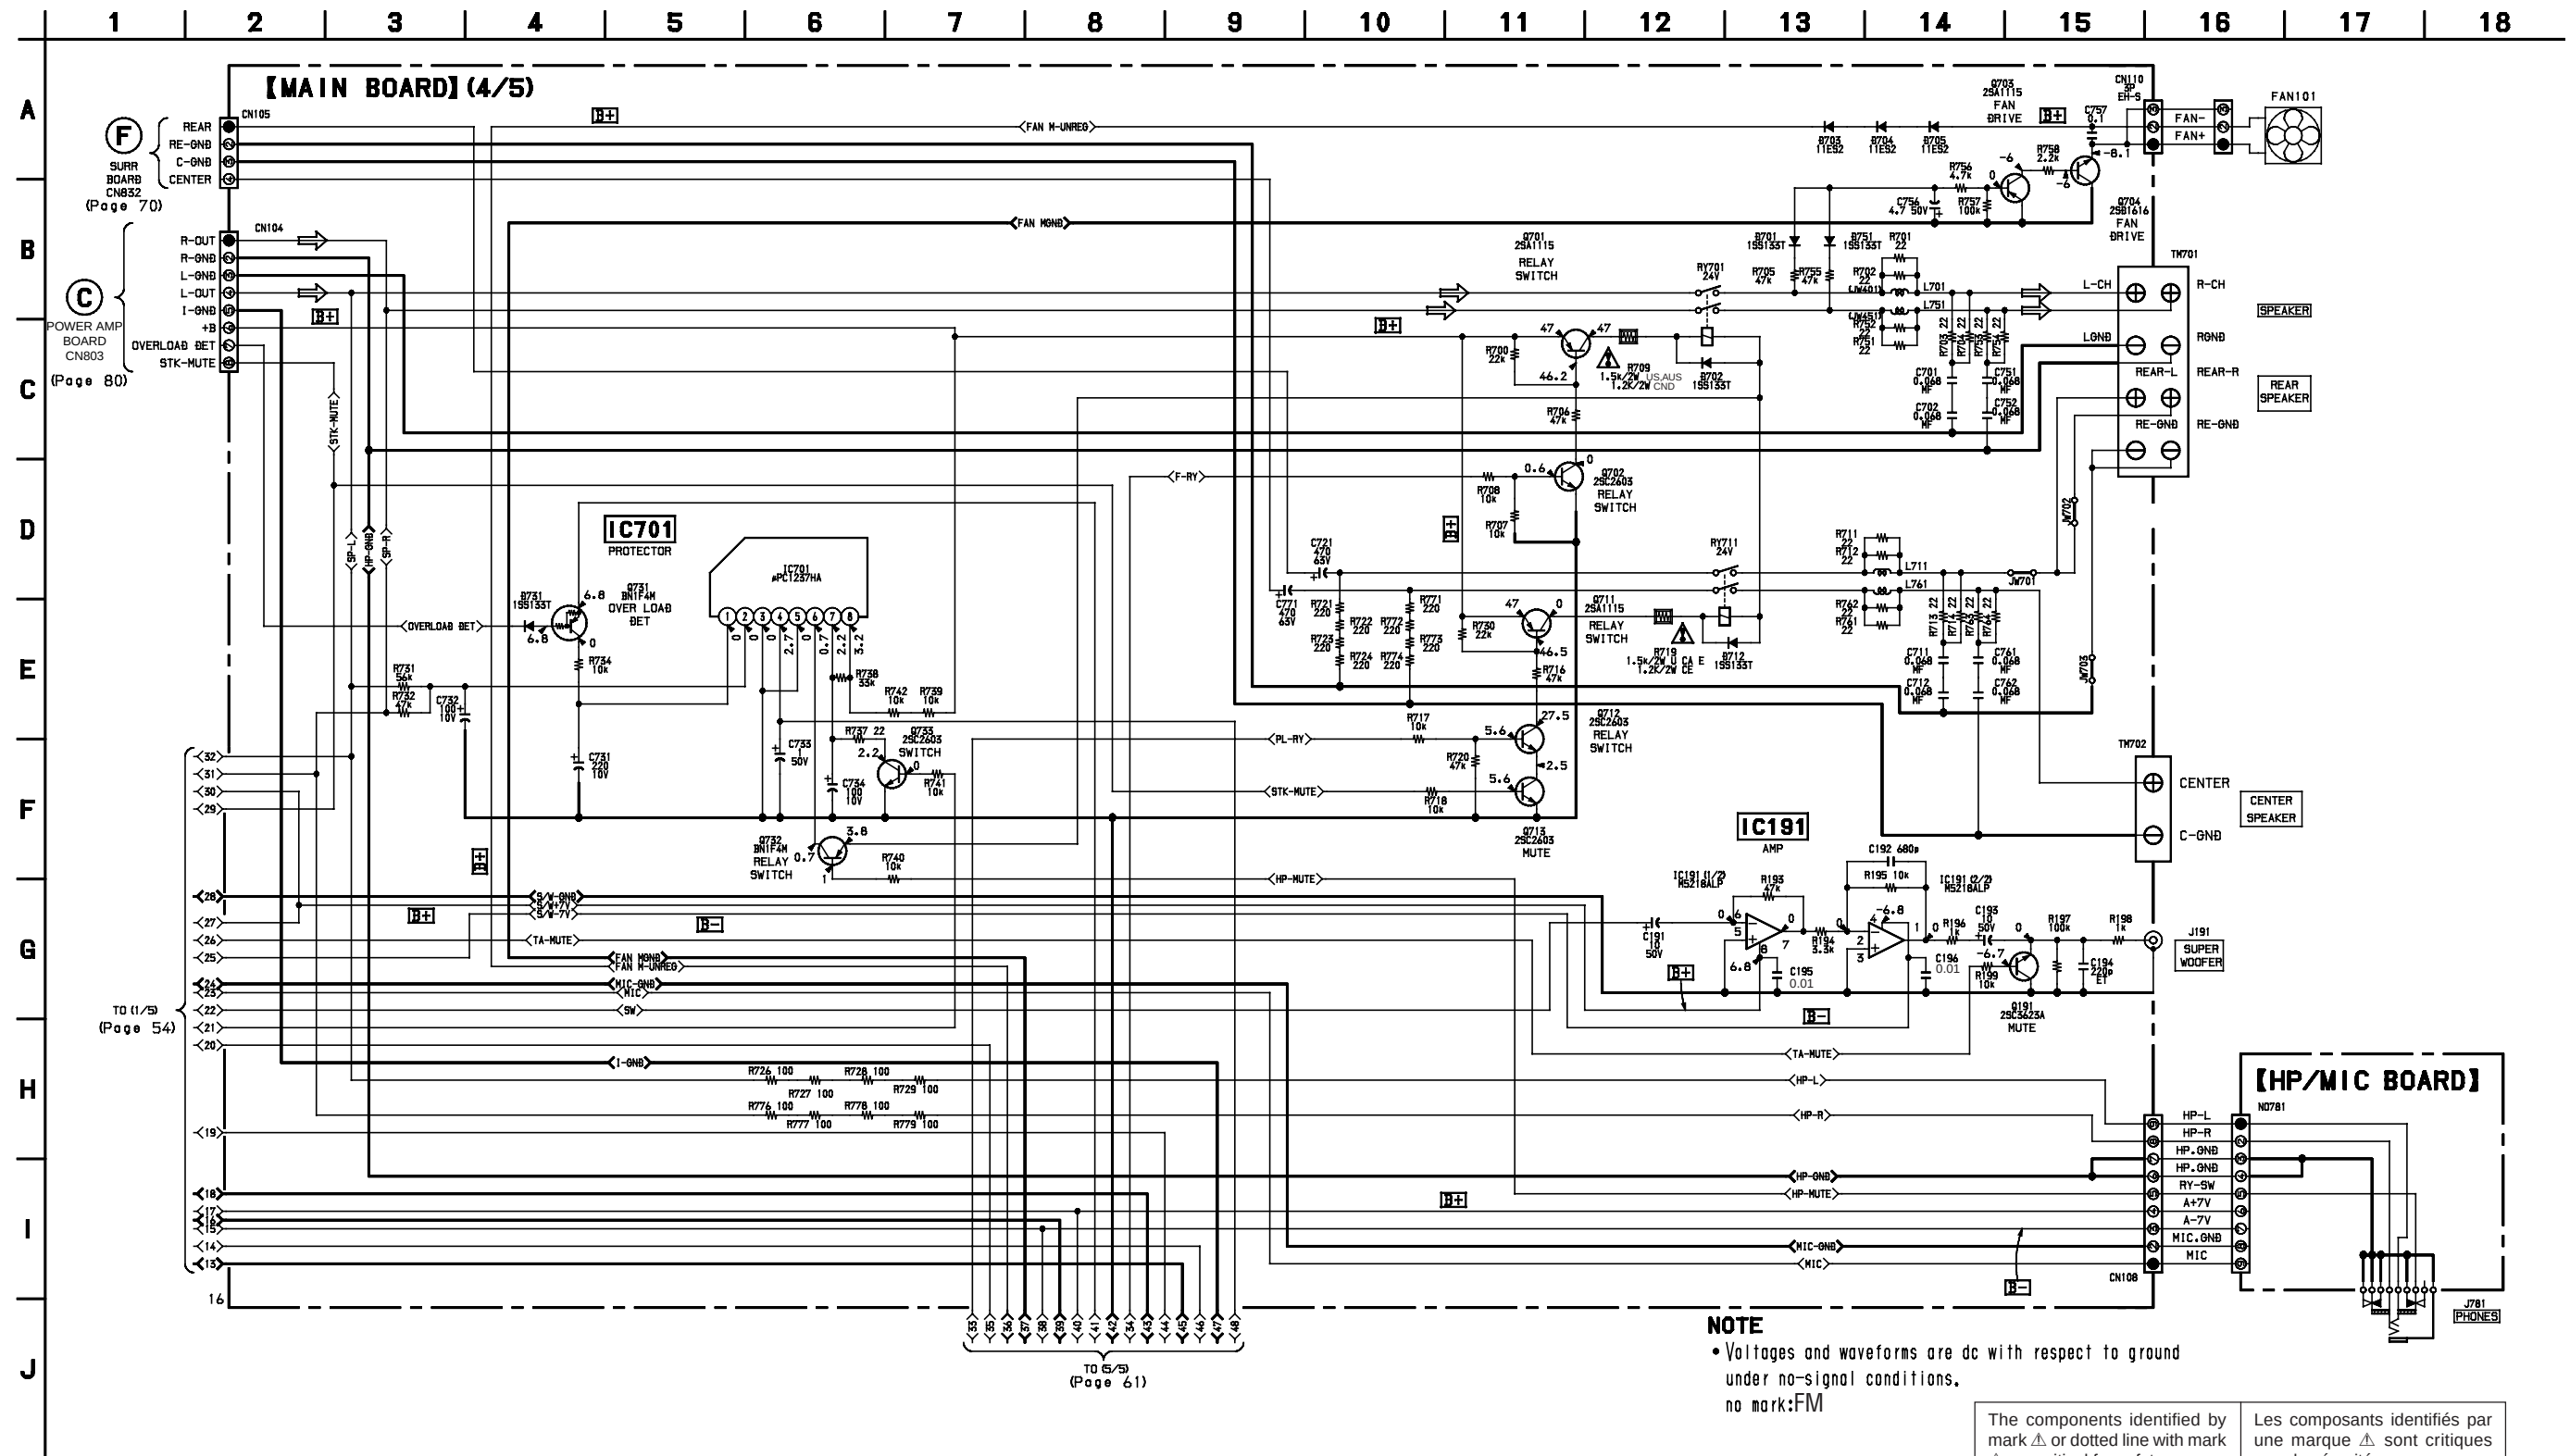

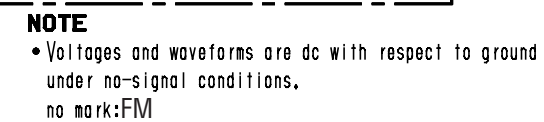


6-17. PRINTED WIRING BOARD PANEL SECTION • See page 33 for Circuit Boards Location.

Semiconductor Location	
Ref. No.	Location
D601	E-5
D602	D-8
D607	G-12
D611	E-8
D612	E-10
D613	D-4
D614	C-4
D615	C-7
D616	D-10
D617	D-11
D618	E-11
D619	F-2
D620	H-2
D621	H-1
D622	H-2
D623	H-1
D624	I-2
D625	C-8
D626	C-7
D628	C-9
D630	C-6
D631	C-5
D632	C-7
D633	H-4
D637	F-9
D638	F-9
D639	G-9
D640	G-9
IC601	B-6
IC602	B-10
IC603	B-8
Q601	E-8
Q602	D-8
Q603	D-8
Q604	D-10
Q608	E-4
Q609	E-4
Q611	C-4
Q612	E-4
Q621	B-9

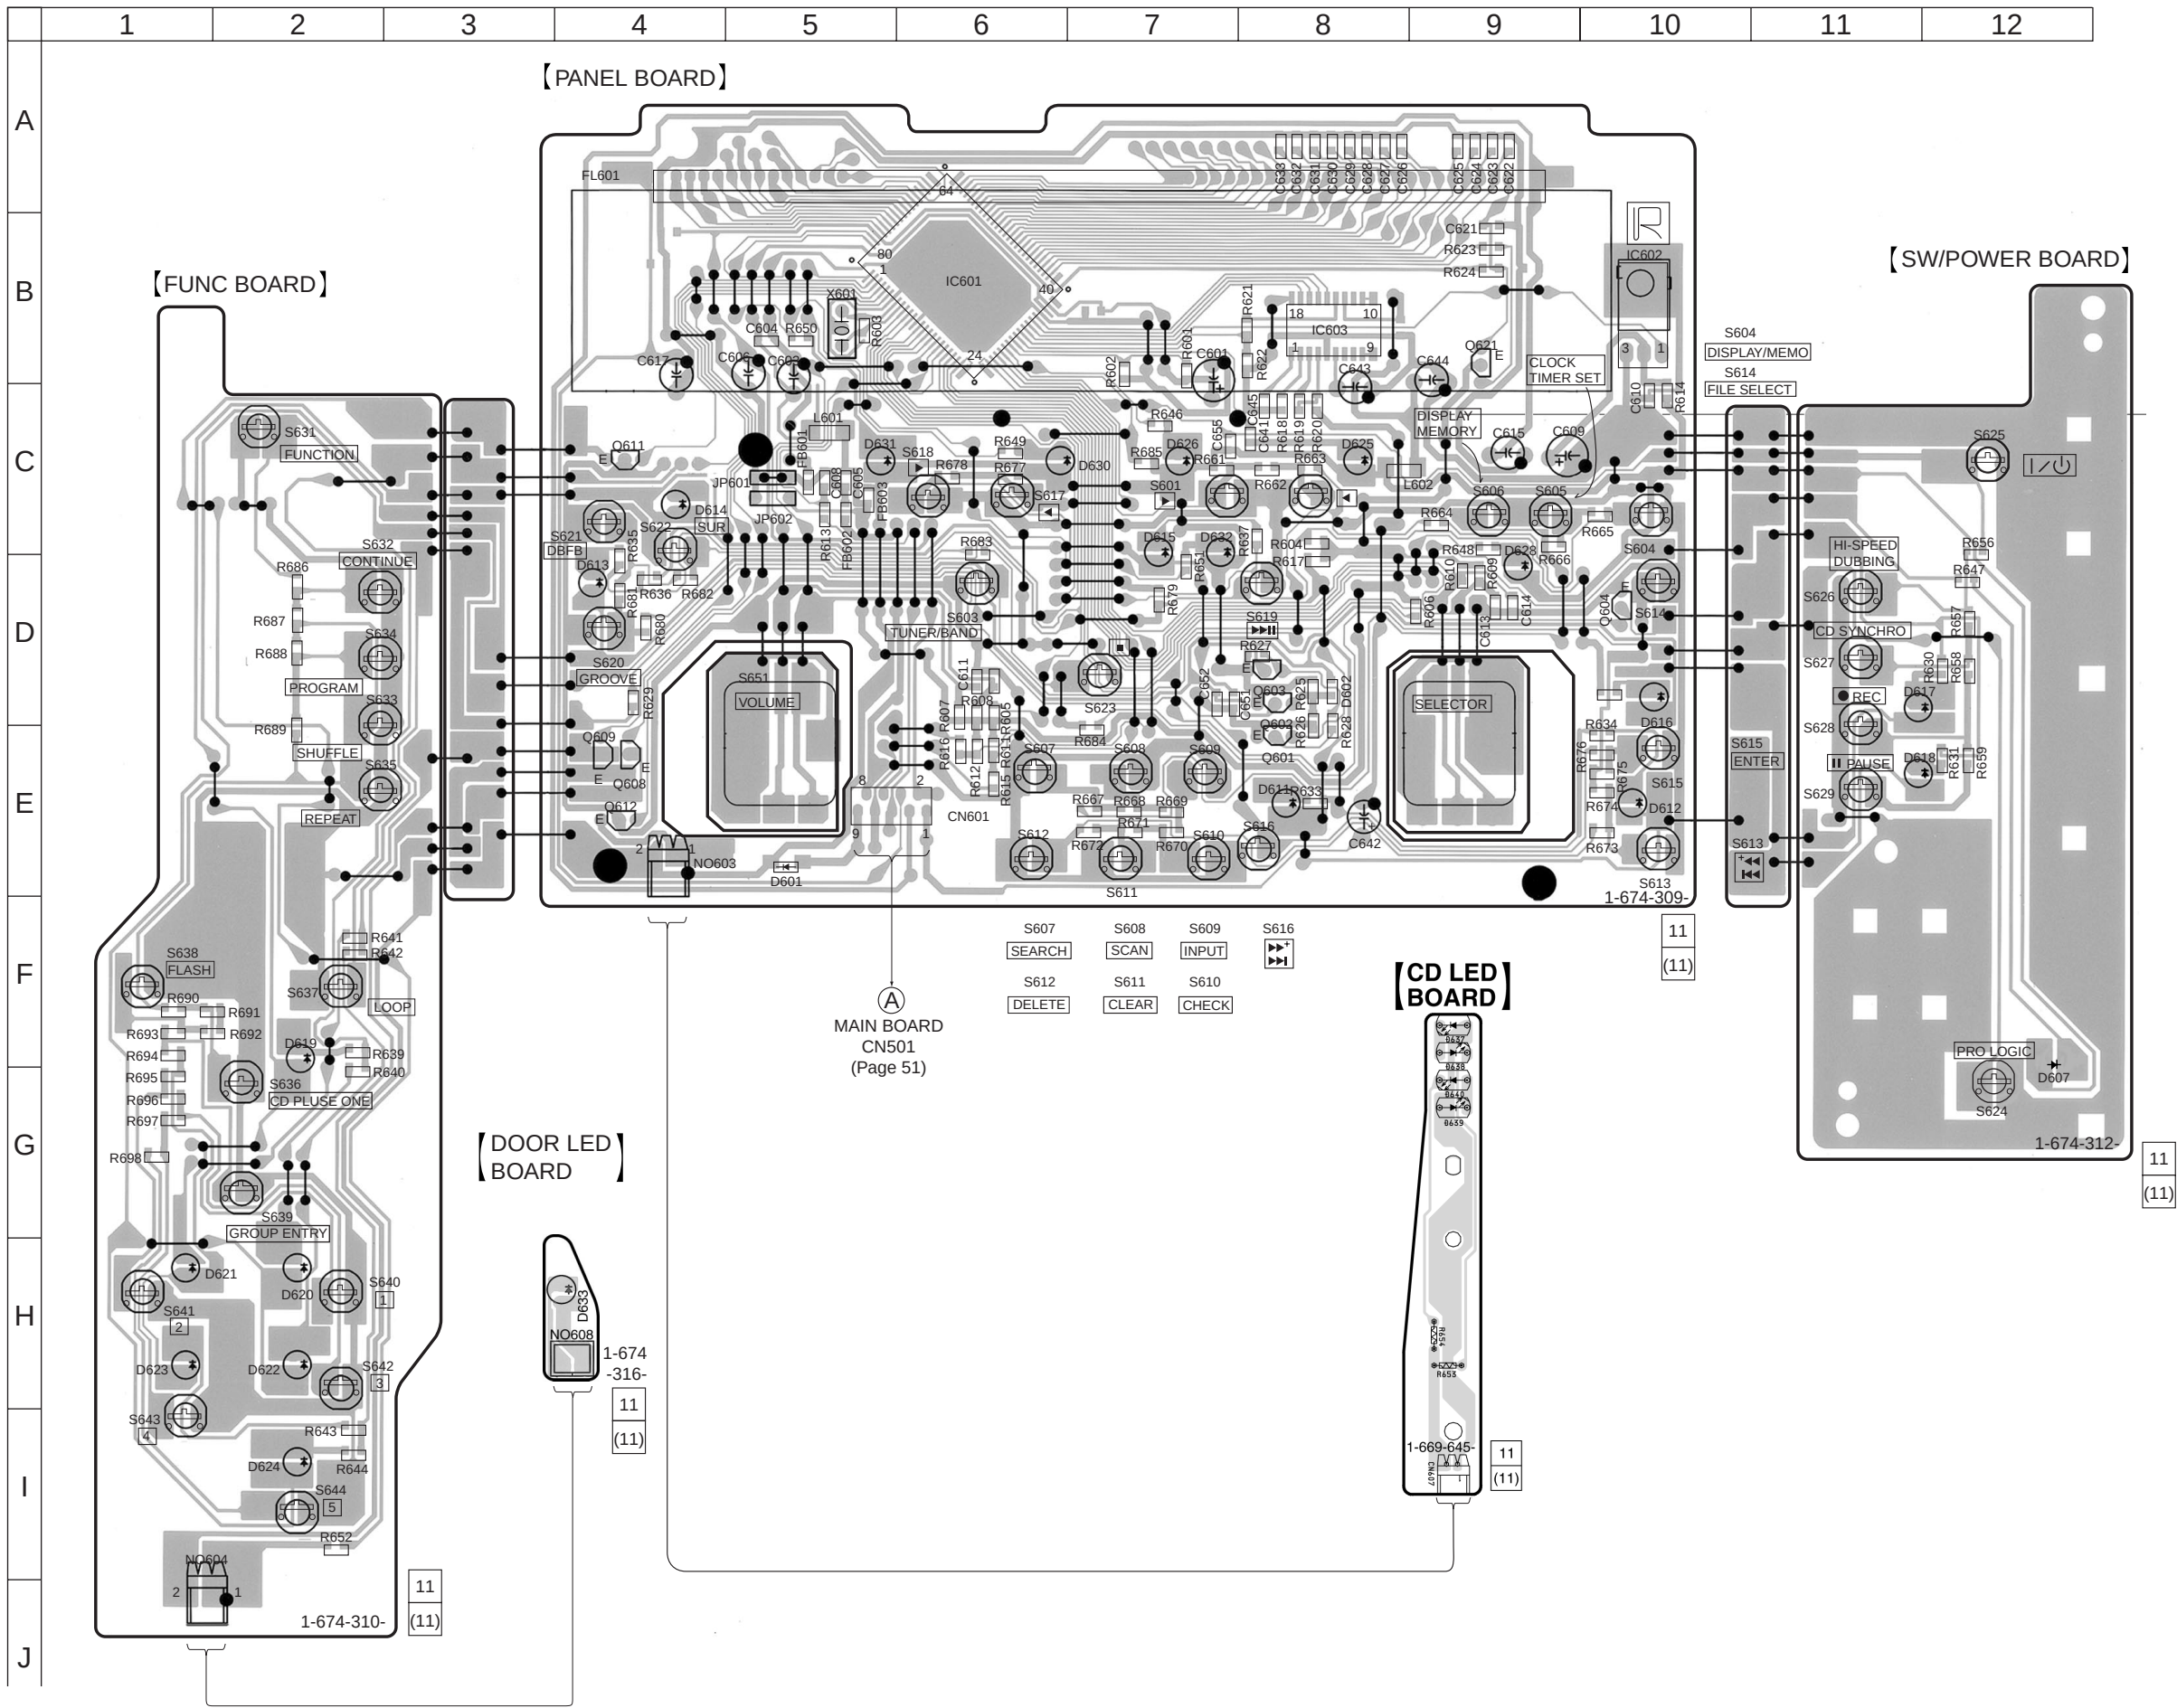

6-18. SCHEMATIC DIAGRAM PANEL SECTION • See page 84 for IC Block Diagrams. • See page 75 for waveform.

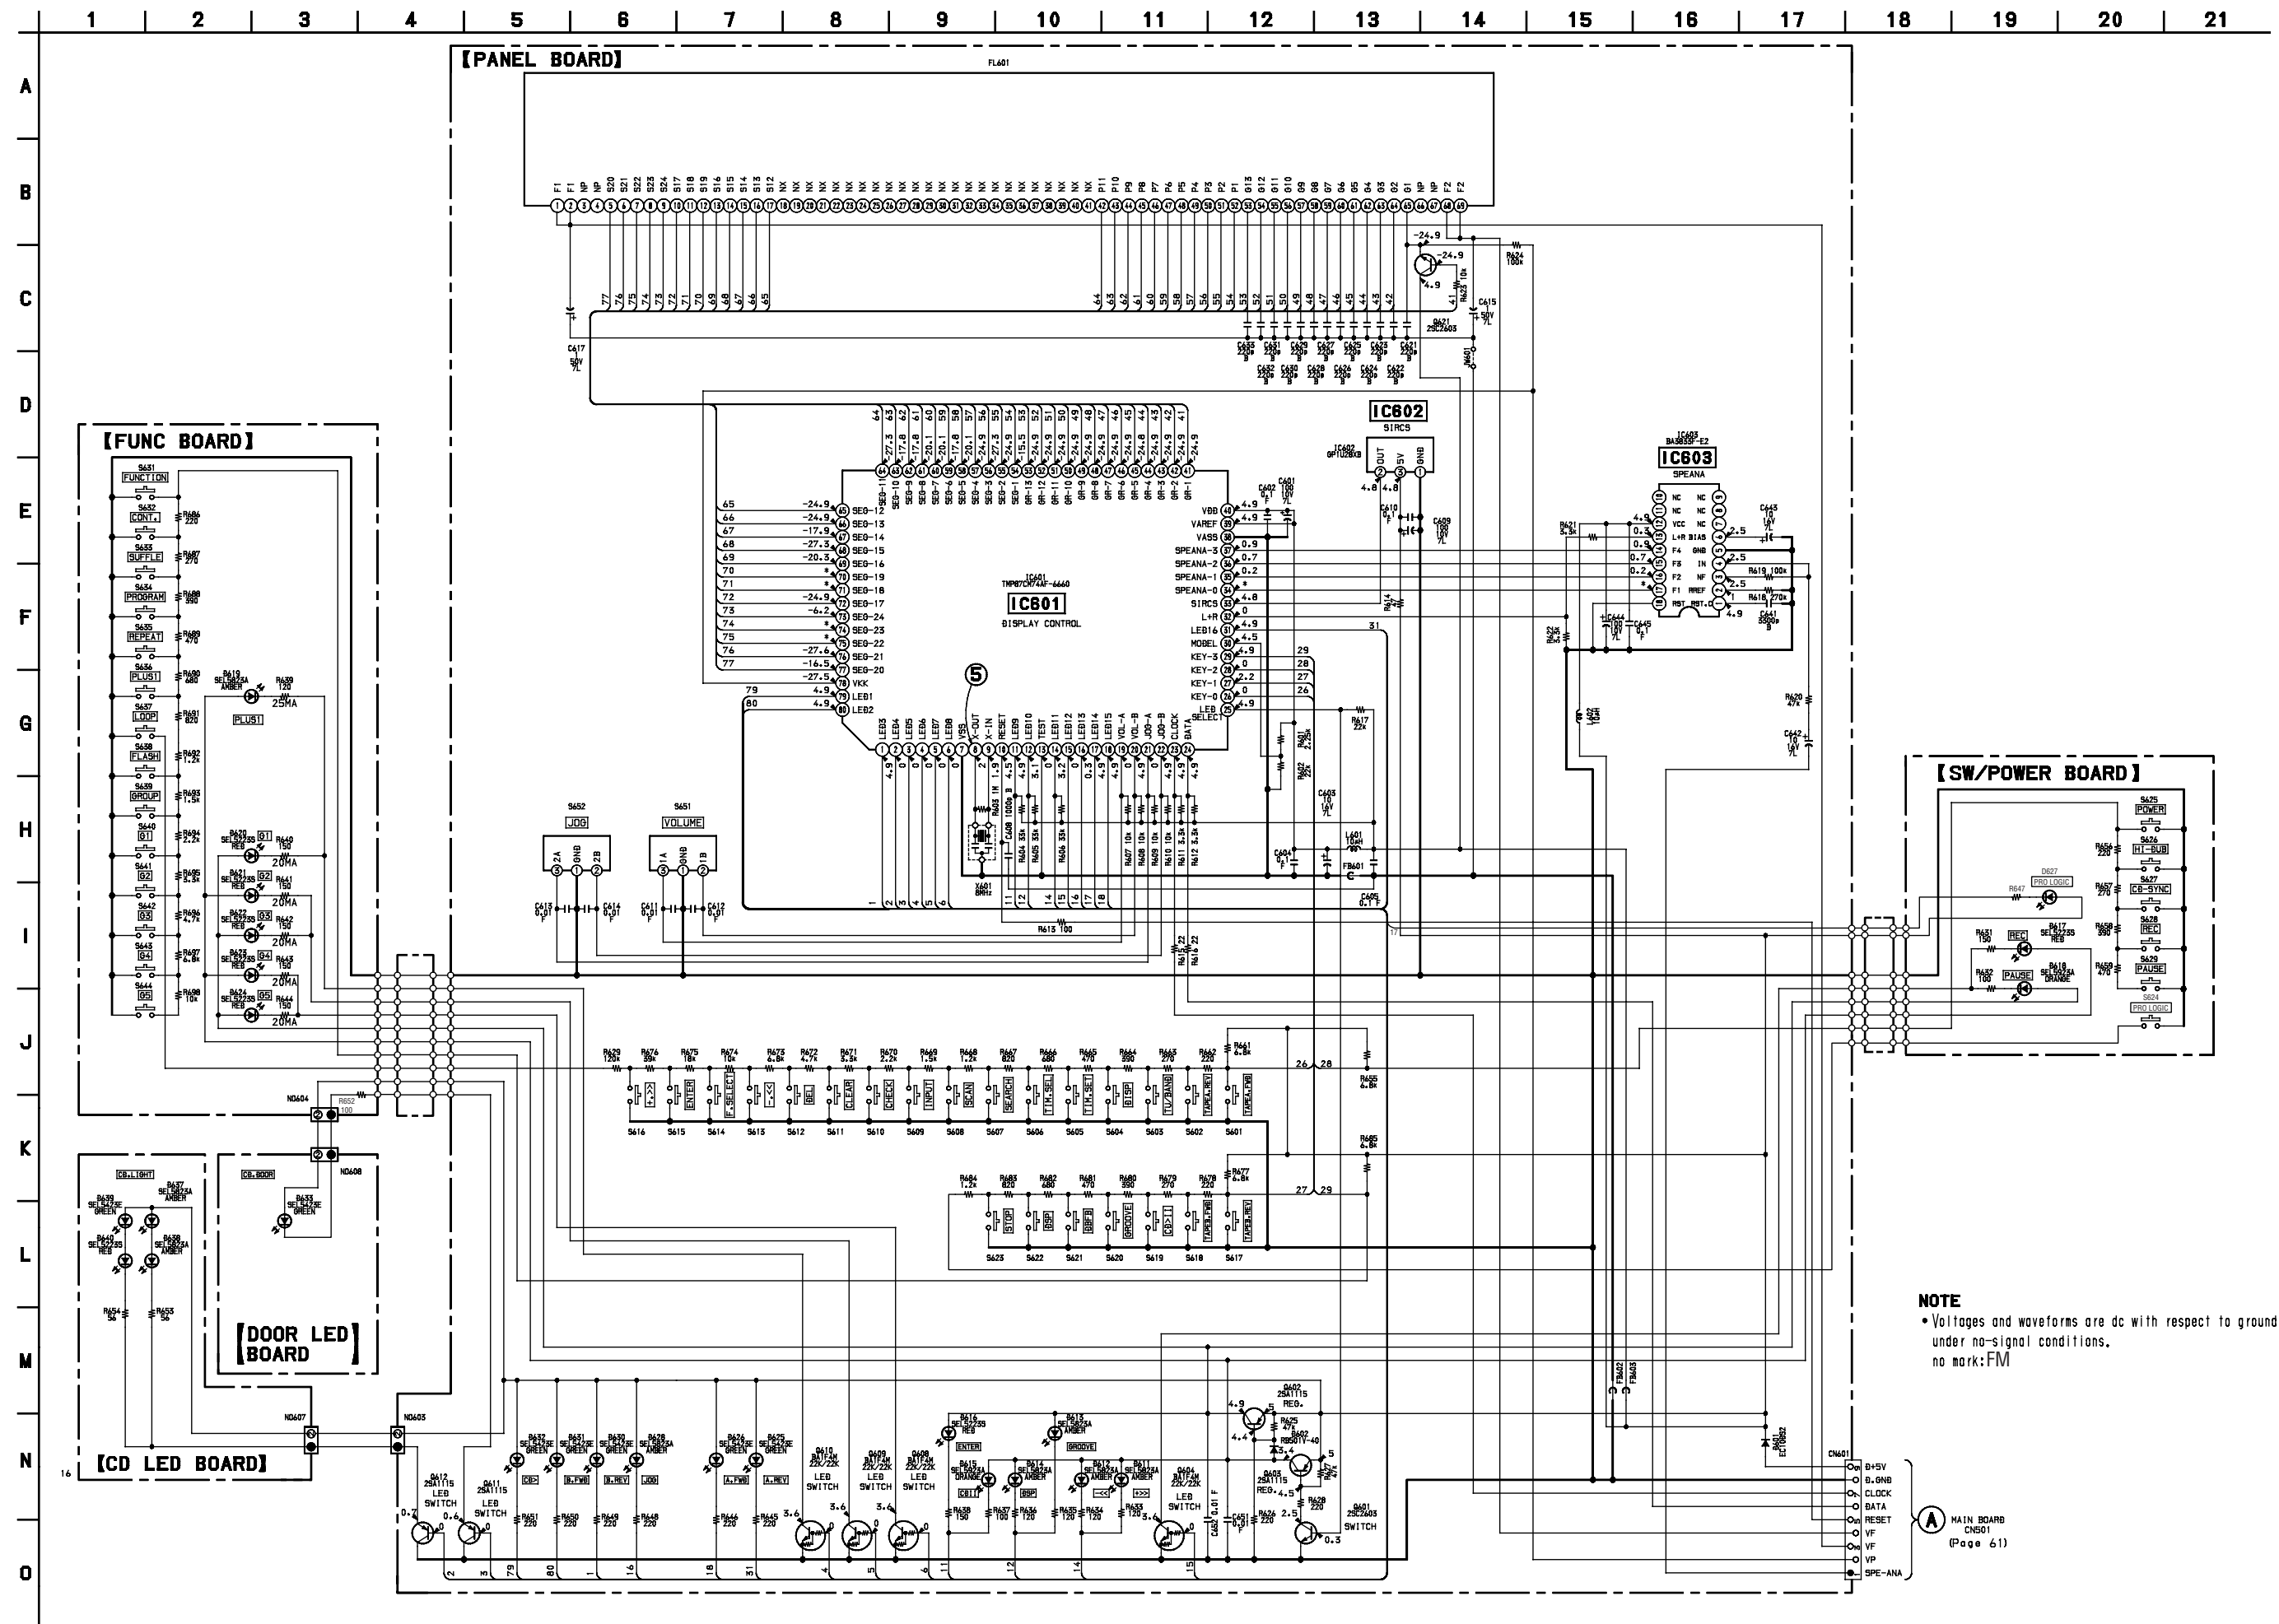
**NOTE**


- Voltages and waveforms are dc with respect to ground under no-signal conditions.
- no mark: FM


MAIN BOARD
CN501
(Page 61)

• Semiconductor Location

Ref. No.	Location
D863	G-9
IC201	E-5
IC831	E-11
Q291	H-8
Q292	B-8
Q831	G-10
Q834	G-9
Q881	C-9

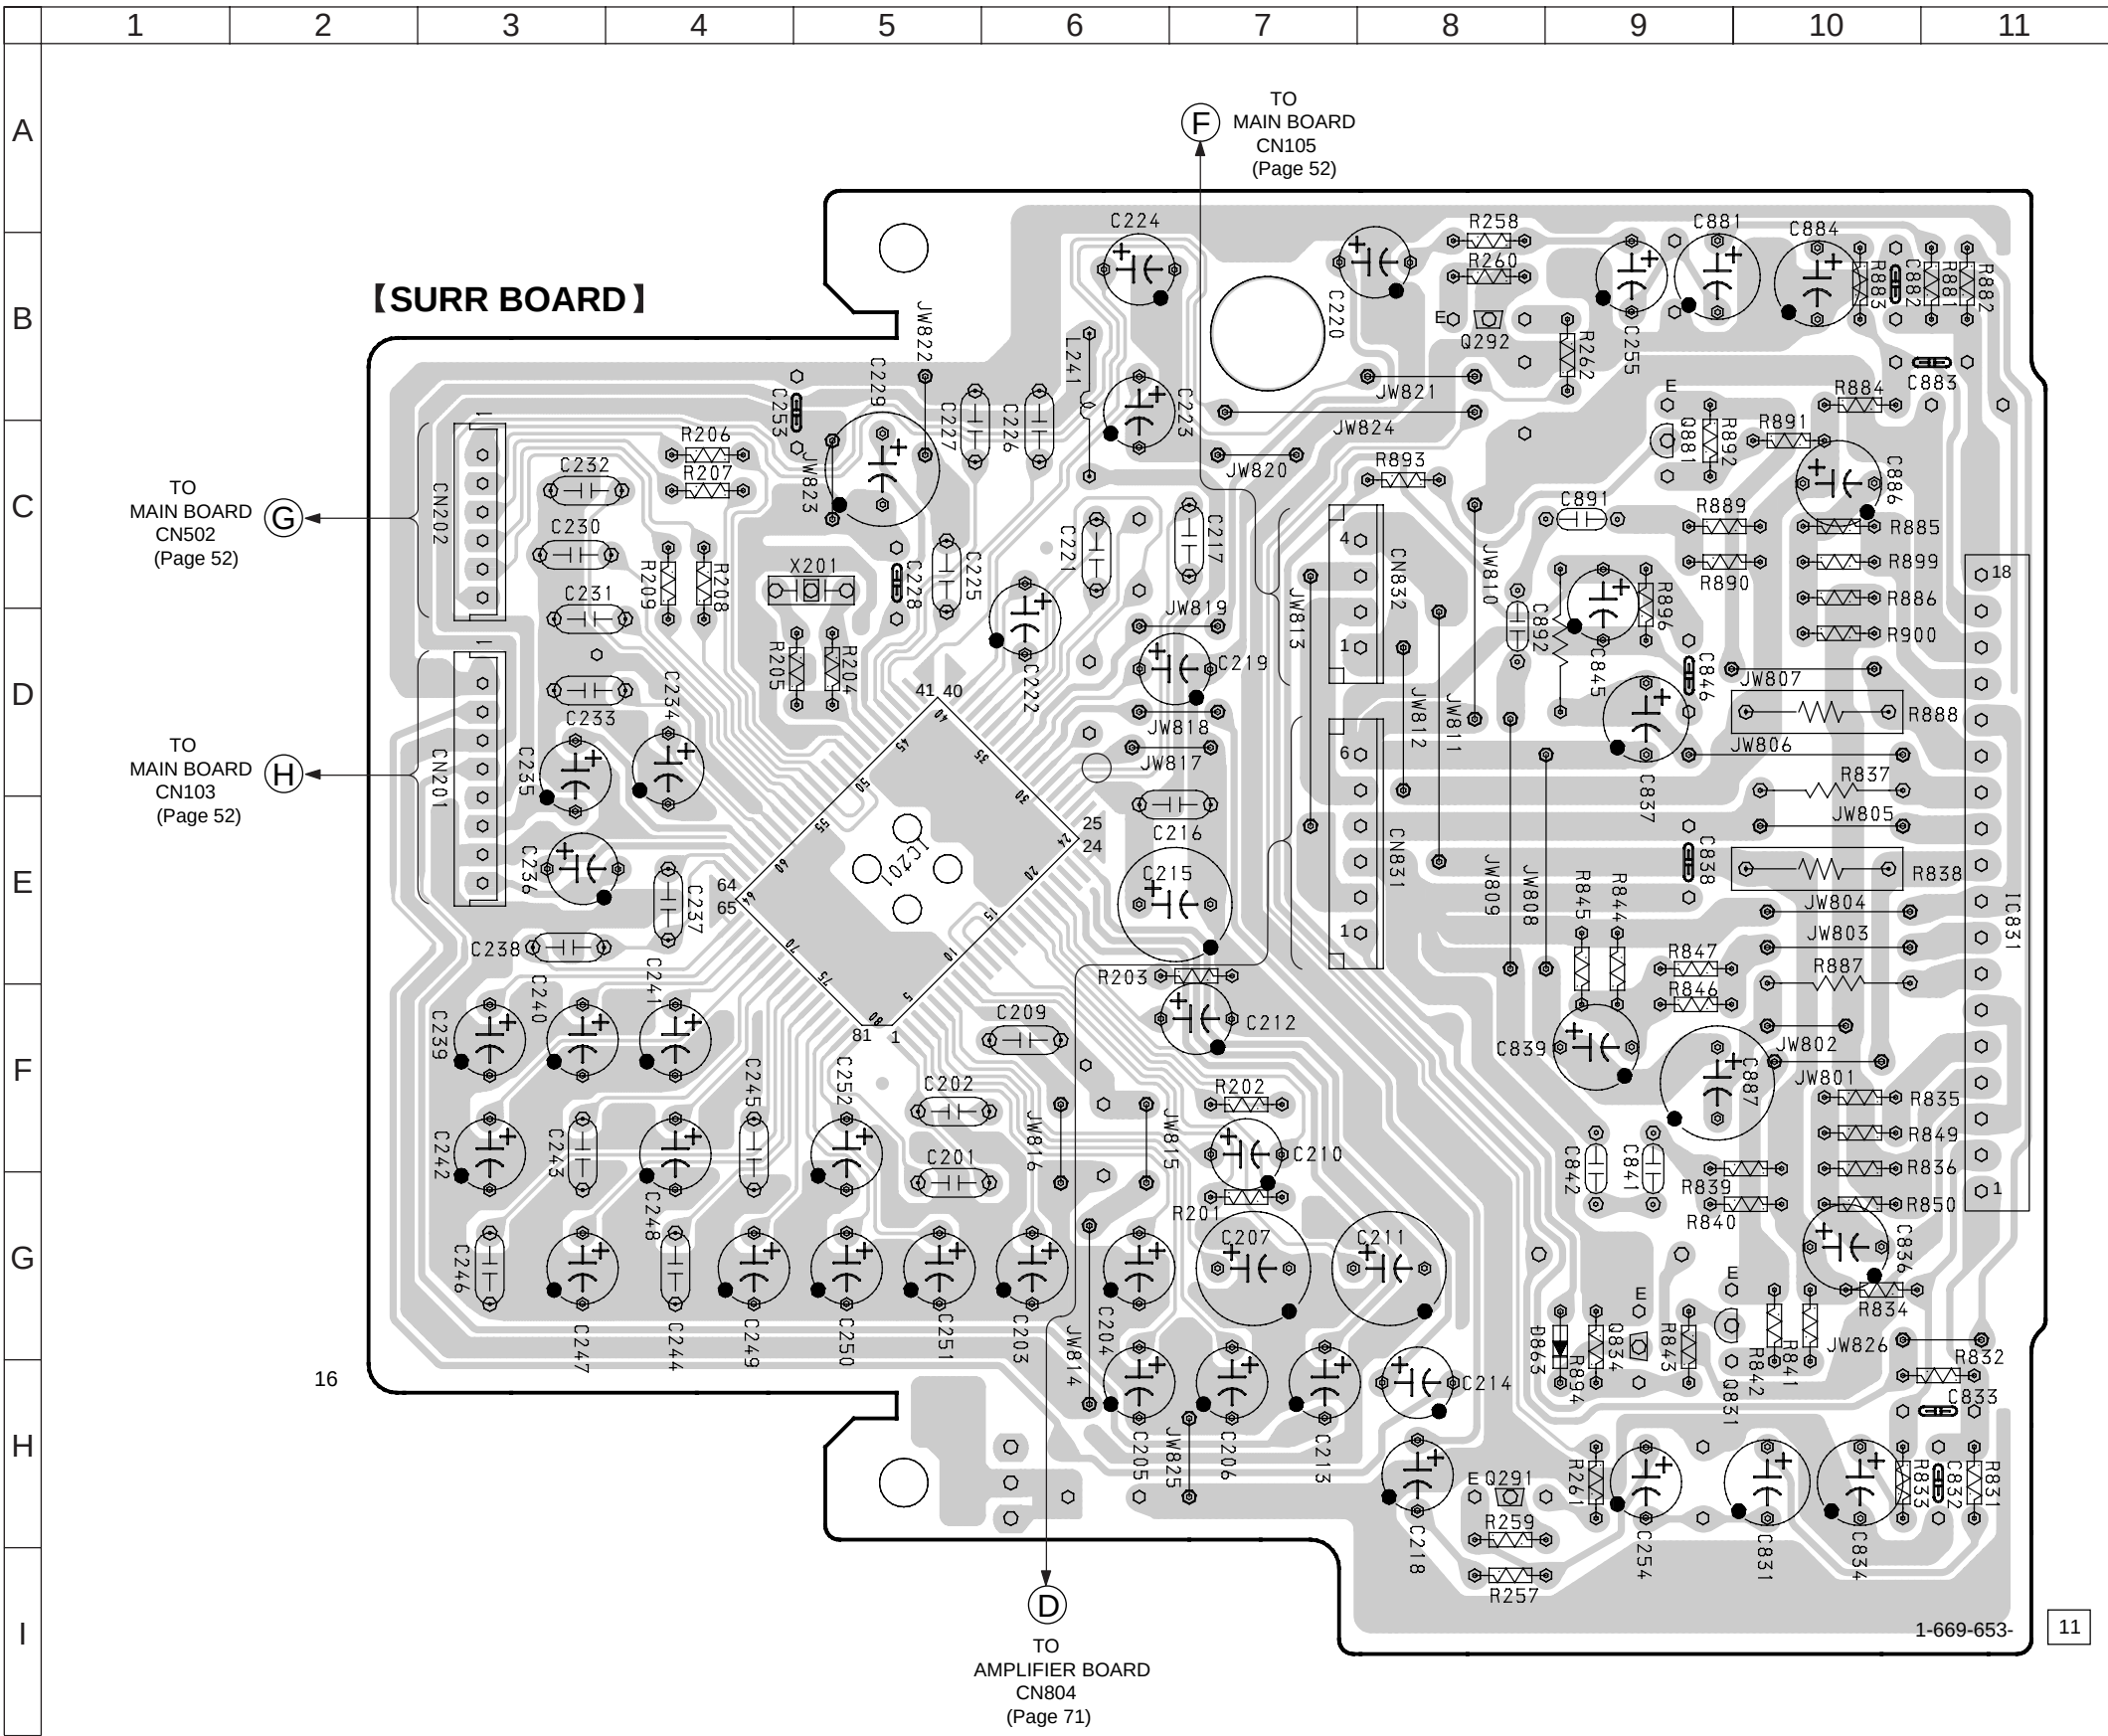


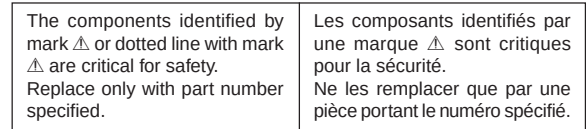

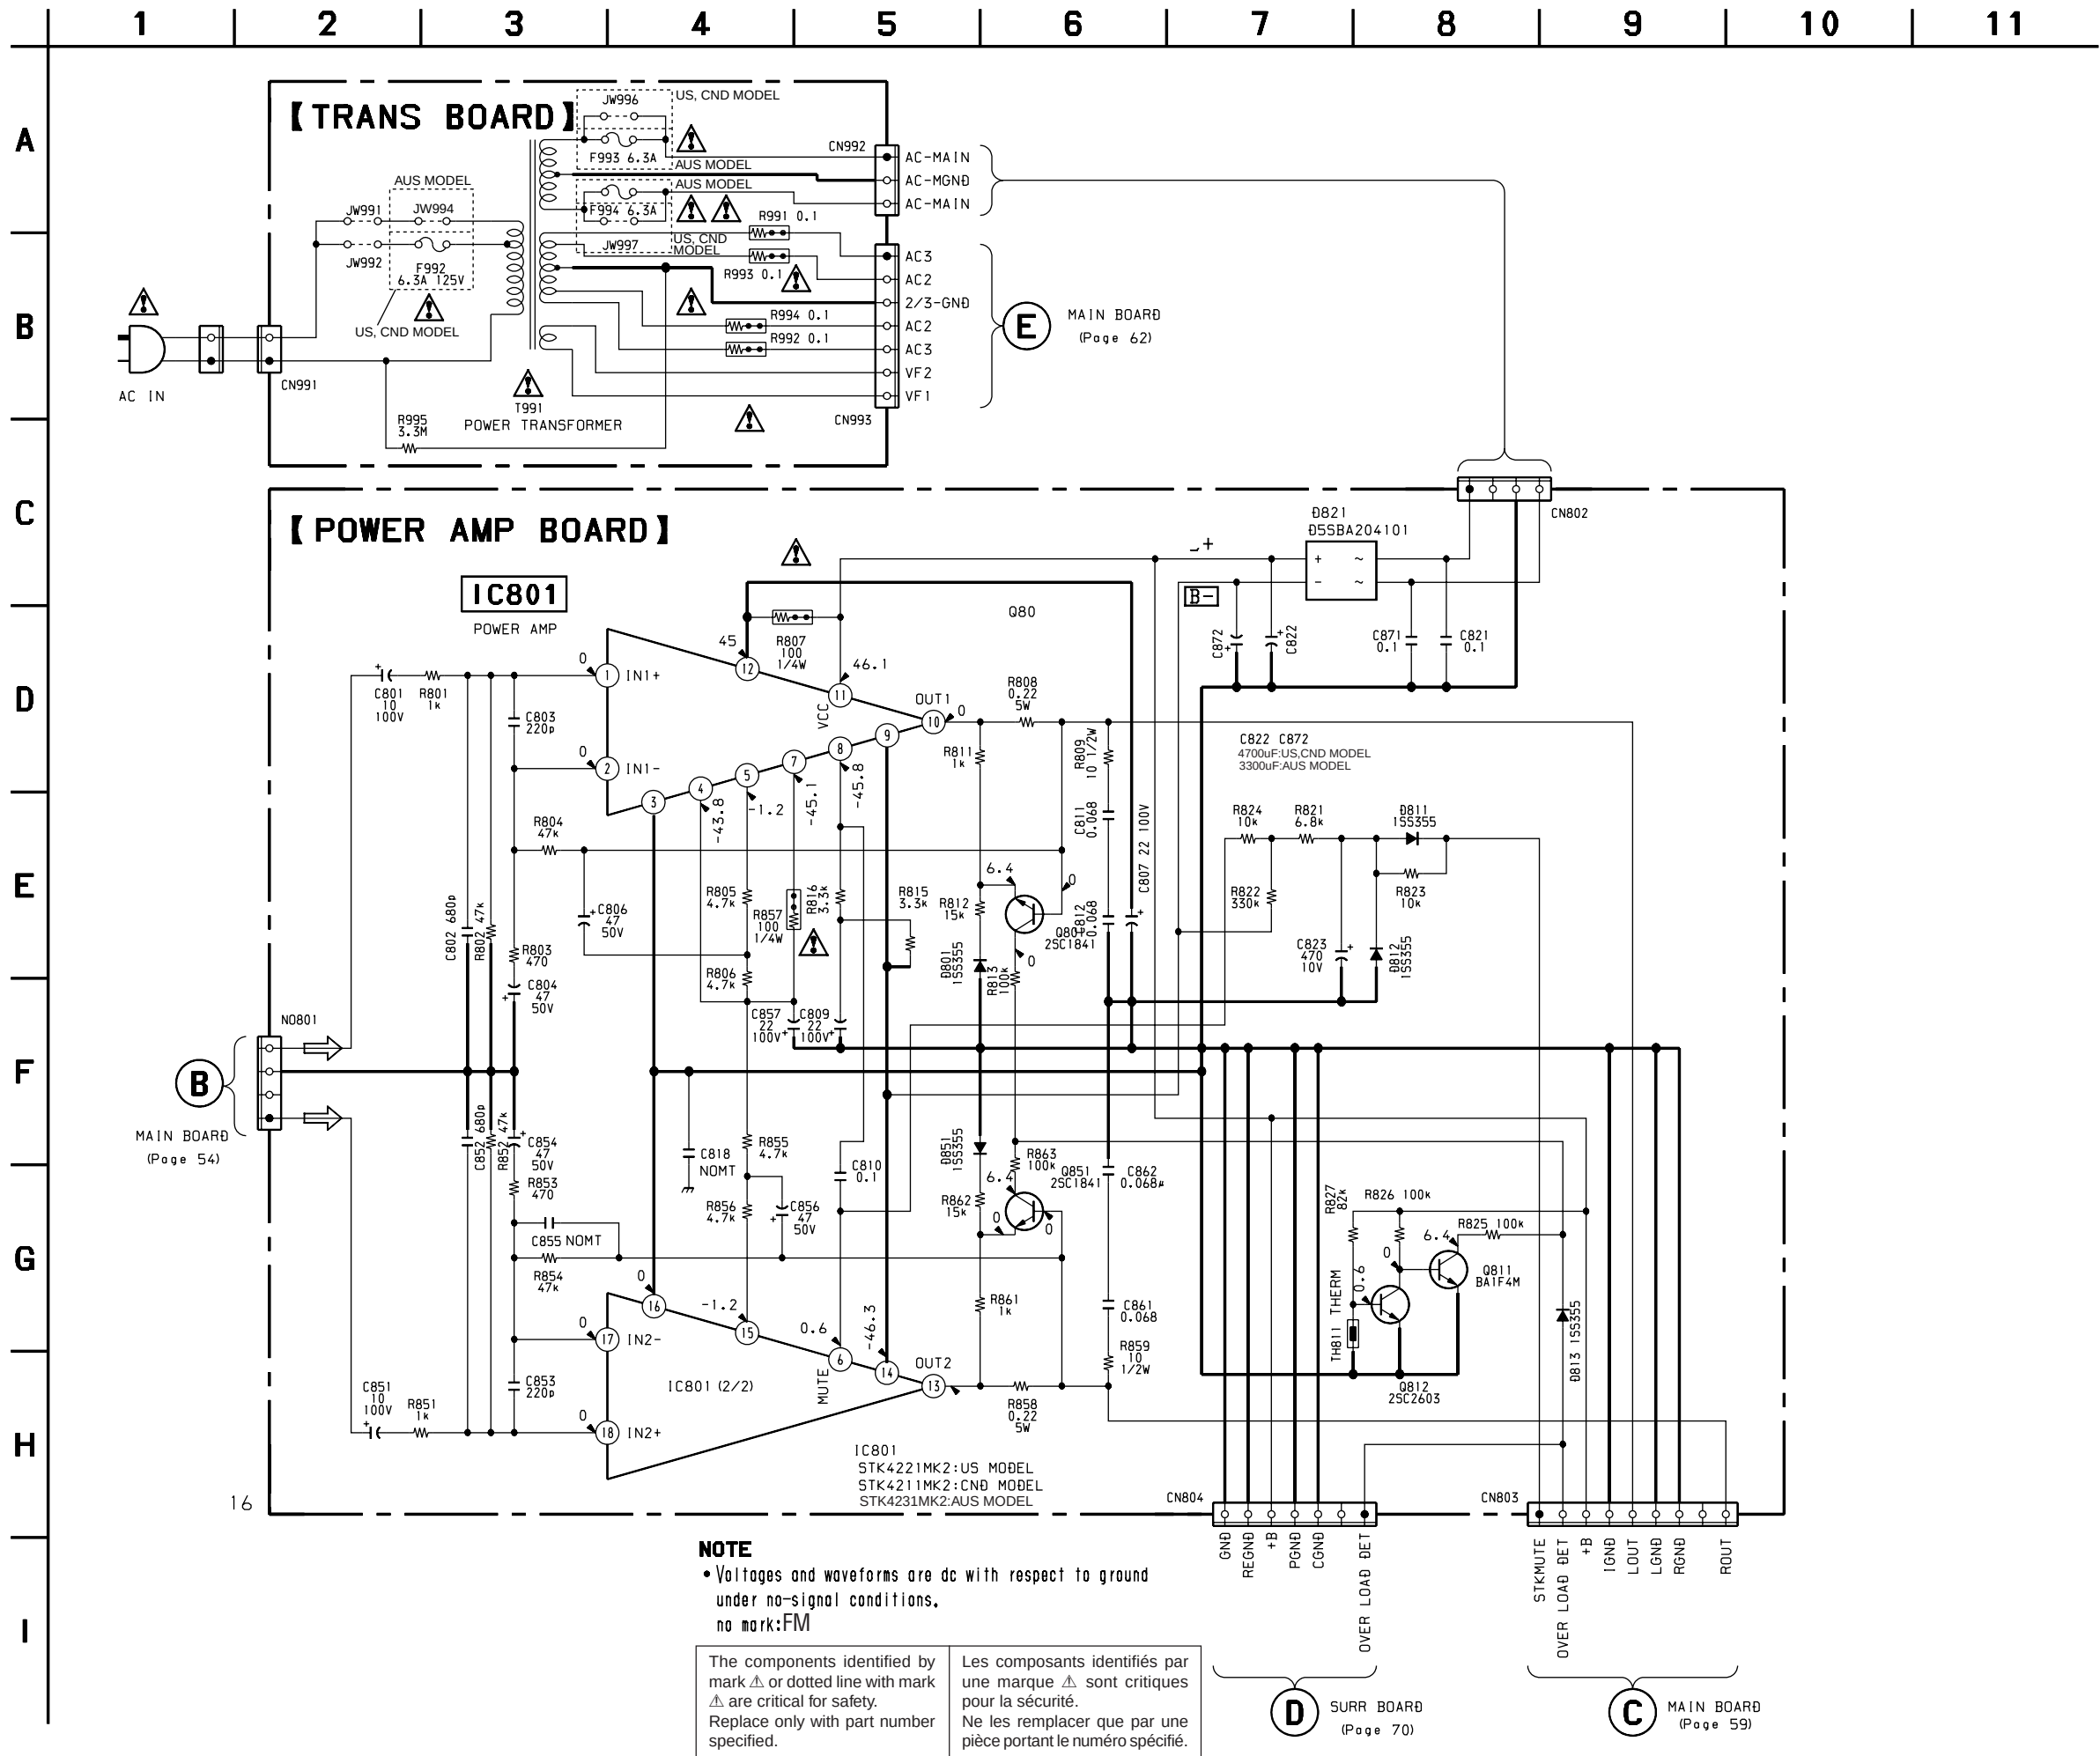


6-22. PRINTED WIRING BOARD POWER SECTION

- See page 33 for Circuit Boards Location.

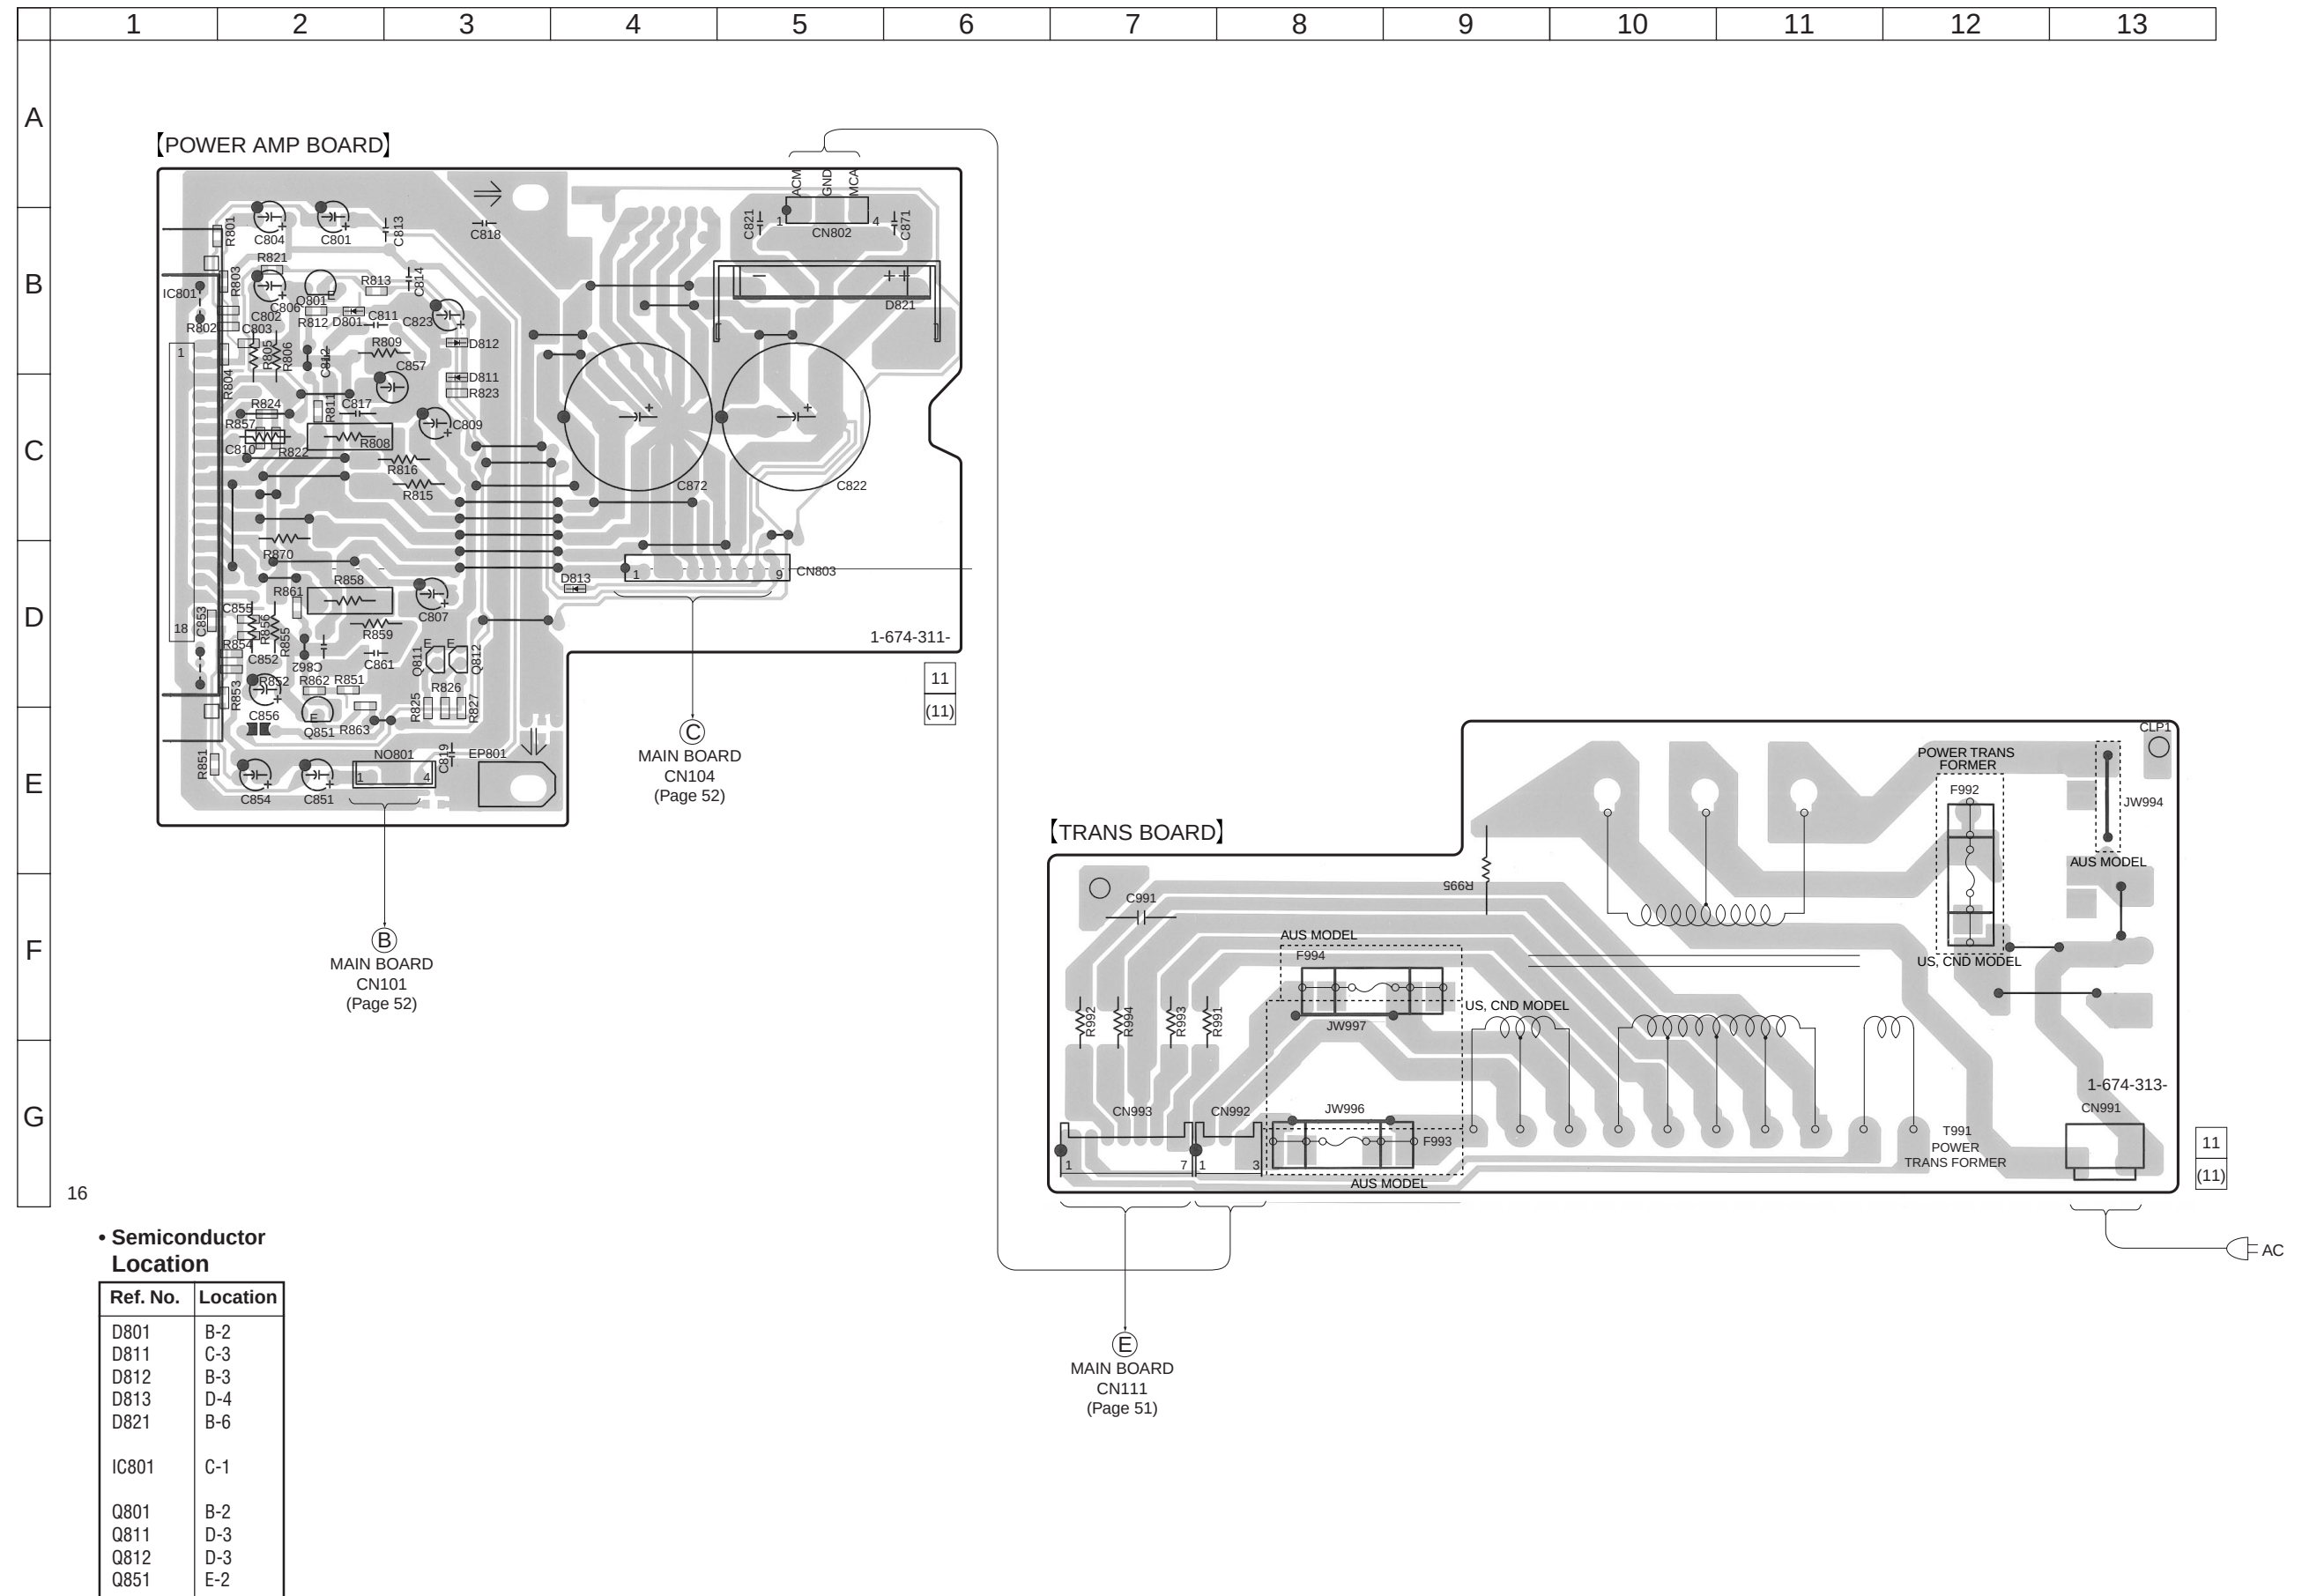


6-23. WAVEFORMS


– MAIN Section –

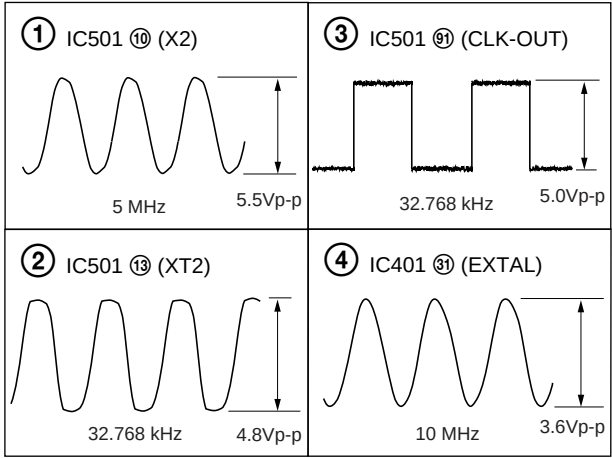

– PANEL Section –

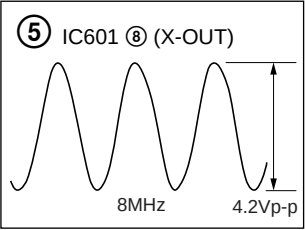

– MD Section –

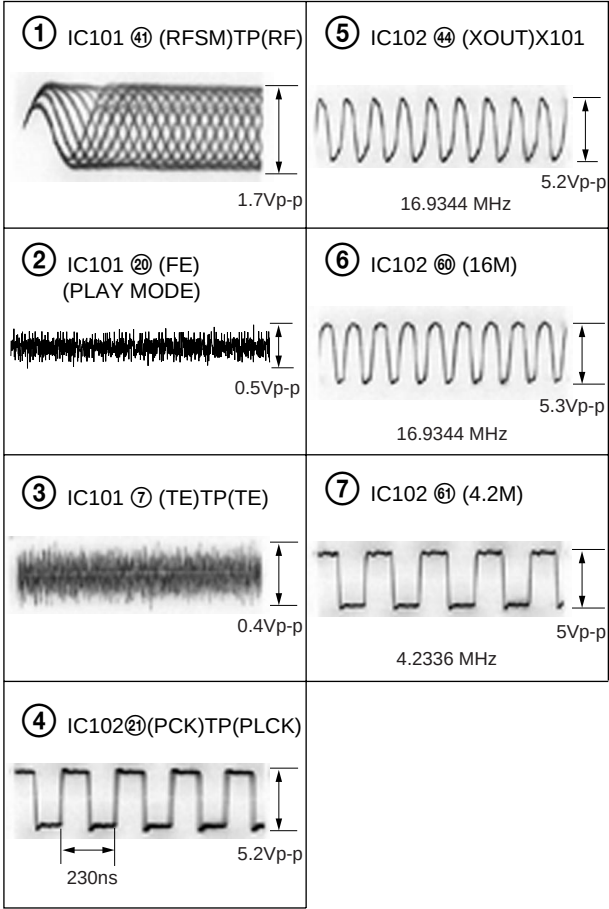

6-24. IC PIN FUNCTION DESCRIPTION
BD BOARD IC101 LA9240M (FOCUS/TRACKING/SLED SERVO, RF AMP)

Pin No.	Pin Name	I/O	Function
1	FIN2	I	Connected to the pick-up photodiode Added with FIN1 to create RF signal, subtracted with FIN1 to create FE signal
2	FIN1	I	Connected to the pick-up photodiode
3	E	I	Connected to the pick-up photodiode Subtracted with F to create TE signal
4	F	I	Connected to the pick-up photodiode
5	TB	I	DC component of the TE signal is input
6	TE–	I	Connects the TE signal gain setting resistor between TE pins
7	TE	O	TE signal output
8	TESI	I	TES (Track Error Sense) comparator input. The TE signal is band-passed and input
9	SCI	I	Shock detection input
10	TH	I	Tracking gain time constant setting
11	TA	O	TA amplifier output
12	TD–	I	Creates a tracking phase compensation constant between TD and VR pins
13	TD	O	Tracking phase compensation setting
14	JP	I	Tracking jump signal (kick pulse) amplitude setting
15	TO	O	Tracking control signal output
16	FD	O	Focusing control signal output
17	FD–	I	Creates a focusing phase compensation constant between FD and FA pins
18	FA	O	Creates a focusing phase compensation constant between FD- and FA- pins
19	FA–	I	Creates a focusing phase compensation constant between FA and FE pins
20	FE	O	FE signal output
21	FE–	I	Connects the FE signal gain setting resistor between TE pins
22	AGND	—	Analog signal Ground
23	SP	O	Single end output of CV+ and CV- pin signal
24	SPI	I	Spindle amplifier input
25	SPG	I	Gain setting resistor is connected when the spindle 12cm mode
26	SP–	I	Works together with the SPD pin to connect to the spindle phase compensation constant
27	SPD	O	Spindle control signal output
28	SLEQ	I	Sled phase compensation constant is connected
29	SLD	O	Sled control signal output
30	SL–	I	Sled feeding signal is input from the microprocessor
31	SL+	I	Sled feeding signal is input from the microprocessor
32	JP–	I	Tracking jump signal is input from the DSP
33	JP+	I	Tracking jump signal is input from the DSP
34	TGL	I	Tracking gain control signal is input from the DSP Gain becomes low when TGL is “H”
35	TOFF	I	Tracking off control signal is input from the DSP Tracking becomes off when TOFF is “H”
36	TES	O	Outputs TES signal to the DSP
37	HFL	O	HFL (High Frequency Level) is used to determine whether the main beam is positioned on a pit or a mirror

Pin No.	Pin Name	I/O	Function
38	SLOF	I	Sled servo off control input
39	CV-	I	CLV error signal is input from the digital signal processor
40	CV+	I	CLV error signal is input from the digital signal processor
41	RFSM	O	RF output
42	RFS-	I	Works together with the RFSM pin to set the RF gain and the 3T compensation constant for the EFM signal
43	SLC	O	SLI (Slice Level Control) is output to control a data slice level of the RF waveform by the digital signal processor
44	SLI	I	Input pin for controlling a data slice level by the digital signal processor
45	DGND	—	Digital Ground
46	FSC	O	Focus search smoothing capacitor output
47	TBC	I	TBC (Tracking Balance Control) sets a EF balance variable range
48	NC	—	Not used
49	DEF	O	Defect detection output for a disc
50	CLK	I	Reference clock input The 4.23 MHz of the digital signal processor is input
51	CL	I	Microprocessor command clock input
52	DAT	I	Microprocessor command data input
53	CE	I	Microprocessor command chip enable input
54	DRF	O	DRF (Defect RF) outputs a RF level detection
55	FSS	I	FSS (Focus Search Select) is a switching pin for the focus search mode ($\pm$ search/+search for a reference voltage)
56	VCC2	—	Servo system and digital system VCC
57	RFFI	I	Reference voltage bus control is connected
58	VR	O	Reference voltage output
59	LF2	I	Constant setting for a disc defect detection
60	PH1	I	Connected to the capacitor for the RF signal peak hold
61	BH1	I	Connected to the capacitor for the RF signal bottom hold
62	LDD	O	APC circuit output
63	LDS	I	APC circuit input
64	VCC1	—	RF system VCC

- Abbreviation
EFM : Eight to Fourteen Modulation
APC : Auto Power Control

BD BOARD IC102 LC78622E (DIGITAL SIGNAL PROCESSOR)

Pin No.	Pin Name	I/O	Function
1	DEFI	I	Defect detection signal (DEF) input (Be sure to connect to 0 when not in use)
2	TAI	I	PLL test input to incorporates a pull-down resistor (Be sure to connect to 0V)
3	PDO	O	PLL phase comparison output for external VCO control
4	VVSS	—	PLL ground for the built-in VCO (Be sure to connect to 0 when not in use)
5	ISET	I	Connected to a current adjusting resistor for the PDO output
6	VVDD	—	Built-in VCO power supply
7	FR	I	Adjusts the VCO frequency range
8	VSS	—	Digital Ground to be sure to connect to 0
9	EFMO	O	Slice level control to EFM signal output
10	EFMIN	I	Slice level control to EFM signal input
11	TEST2	I	Test input to incorporates a pull-down resistor (Be sure to connect to 0V)
12	CLV+	O	Disc motor control output (3-value output available depending on the command)
13	CLV-	O	
14	V/P	O	Rough servo/phase control automatic switching monitor output “H”:rough servo, ‘L’:phase servo
15	HFL	I	Tracking detection signal input (Schmidt input)
16	TES	I	Tracking error signal input (Schmidt input)
17	TOFF	O	Tracking OFF output
18	TGL	O	Tracking gain switching output (Raises gain when “L”)
19	JP+	O	Track jump control output (3-value output available depending on the command)
20	JP-	O	
21	PCK	O	EFM data playback clock monitor (4.3218 MHz when phase is locked)
22	FSEQ	O	Sync signal detection output (“H” when a sync signal detected from the EFM signal and that generated internally coincide)
23	VDD	—	Digital power supply
24	CONT1	I/O	General purpose output 1. Performs control using a serial data command from the microprocessor (When not in use, connect to 0V by setting to an input or set to an open state by setting to an output)
25	CONT2	I/O	General purpose output 2. Performs control using a serial data command from the microprocessor (When not in use, connect to 0V by setting to an input or set to an open state by setting to an output)
26	CONT3	I/O	General purpose output 3. Performs control using a serial data command from the microprocessor (When not in use, connect to 0V by setting to an input or set to an open state by setting to an output)
27	CONT4	I/O	General purpose output 4. Performs control using a serial data command from the microprocessor (When not in use, connect to 0V by setting to an input or set to an open state by setting to an output)
28	CONT5	I/O	General purpose output 5. Performs control using a serial data command from the microprocessor (When not in use, connect to 0V by setting to an input or set to an open state by setting to an output)

• Abbreviation

PLL : Phase Locked Loop

EFM : Eight to Fourteen Modulation

Pin No.	Pin Name	I/O	Function
29	EMPH	O	Deemphasis monitor The deemphasis disc is being played back when “H”
30	C2F	O	C2 flag output
31	DOUT	O	Digital OUT output (EIAJ format)
32	TEST3	I	Test input Incorporates a pull-down resistor Be sure to connect to 0V
33	TEST4	I	Test input Incorporates a pull-down resistor Be sure to connect to 0V
34	NC	—	Not used Be sure to use it in an open state
35	MUTEL	O	L channel 1-bit DAC L channel mute output
36	LVDD	—	L channel 1-bit DAC L channel power supply
37	LCHO	O	L channel 1-bit DAC L channel output
38	LVSS	—	L channel 1-bit DAC L channel ground Be sure to connect to 0V
39	RVSS	—	R channel 1-bit DAC R channel ground Be sure to connect to 0V
40	RCHO	O	R channel 1-bit DAC R channel output
41	RVDD	—	R channel 1-bit DAC R channel power supply
42	MUTER	O	R channel 1-bit DAC R channel mute output
43	XVDD	—	Power supply for the crystal oscillator
44	XOUT	O	Connected to the 16.9344 MHz crystal oscillator
45	XIN	I	
46	XVSS	—	Ground for the crystal oscillator Be sure to connect to 0V
47	SBSY	O	Sync signal output for the subcode block
48	EFLG	O	C1, C2, single correction, and double correction monitor
49	PW	O	Subcode P, Q, R, S, T, U, W output
50	SFSY	O	Subcode frame sync signal output
			Rises when the subcode is in a standby
51	SBCK	I	Subcode read clock input Schmidt input (Connect to 0V when not in use)
52	FSX	O	7.35 kHz sync signal output divided from the crystal oscillation
53	WRQ	O	Subcode Q output standby output
54	RWC	I	Read/write control input Schmidt input
55	SQOUT	O	Subcode Q output
56	COIN	I	Command input from the microprocessor
57	CQCK	I	Command input fetching clock input or subcode extracting clock input from SQOUT Schmidt input
58	RES	I	LC78622 reset input Temporarily set to “L” when the power is turned ON
59	TEST11	O	Test output Use it in an open state (Normally, “L” output)
60	16M	O	16.9344 MHz output
61	4.2M	O	4.2336 MHz output
62	TEST5	I	Test input. Incorporates a pull-down resistor. Be sure to connect to 0V
63	CS	I	Chip select input Incorporates a pull-down resistor Be sure to connect to 0V when not in control
64	TEST1	I	Test input Does not incorporate a pull-down resistor Be sure to connect to 0V

Note) Supply the same potential to each power supply pin (VDD, VVDD, LVDD, RVDD, XVDD).

MAIN BOARD IC401 CXP84632-031Q (CD CHANGER CONTROL)

Pin No.	Pin Name	I/O	Function
1	—	—	Not used
2	ICSW	O	IC reset signal output
3	—	—	Not used
4	HHOUT	O	Plus one LED signal output
5	—	—	Not used
6 to 13	D0 to D7	I/O	SRAM data I/O
14 to 28	A0 to A14	O	SRAM address output
29	/WE	O	SRAM write enable output
30	RESET	I	Reset signal input
31	10MHz	O	X'tal(10MHz)
32	10MHz	I	X'tal(10MHz)
33	VSS	—	Ground
34, 35	—	—	Not used
36	AVSS	—	Analog ground
37	AVREF	I	Analog refernce voltage input
38 to 41	—	—	Not used
42	D-SENS	I	Disc detect sensor signal input
43 to 46	—	—	Not used
47	SLED-P	O	Sled motor control signal output
48	CLK	O	Clock signal output for LC78622E
49	SUBQ	I	CD sub-code input from LC78622E
50	DATA	O	Command output for LC78622E
51 to 53	—	—	Not used
54	FOK	I	DRF(FOK) signal input from LC78622E
55	WRQ	I	Sub-code synchronizing signal input from LC78622E
56	—	—	Not used
57	TGL	I	Tracking gain control signal input from LC78622E
58	RWC	O	RWC(latch) output for LC78622E
59	SLED-M	O	Sled motor control output
60	—	—	Not used
61 to 63	TSENS1 to TSENS3	I	Table sensor input
64	DQSY	I	Data synchronizing signal input from decoder
65	TCLK	O	Clock output for decoder
66	TDATA	I	Data input from decoder
67	TMODE	O	System down signal output for decoder
68	—	—	Not used
69	DOORSW	I	Front cover close detect input
70	OUTSW	I	Loading motor out detect input
71	INSW	I	Loading motor in detect input
72	VDD	—	Power supply(+5V)
73	—	—	Not used
74	TBLR	O	Table motor clock wise turn signal output
75	TBLL	O	Table motor counter clock wise turn signal output
76	LODOUT	O	Loading motor out direction signal output
77	LODIN	O	Loading motor in direction signal output
78	IICCLK	I	Serial data clock input
79	—	—	Not used
80	IICDAT	I/O	Serial data I/O

MAIN BOARD IC501 uPD780016AYGF-011-3BA (MAIN CONTROL)

Pin No.	Pin Name	I/O	Function
1	LINE-MUTE	O	Line mute signal output
2	DBFB-H/L	O	DBFB H/L select signal output
3	442-LT	O	Latch signal output for IC101(M62442FP)
4	—	—	Not used
5	POWER	O	Power control signal output
6	F-RELAY	O	Main speaker relay control signal output
7	R-RELAY	O	Surround speaker relay control signal output(Not used)
8	PL-RELAY	O	Surround speaker relay control signal output
9	VSS	—	Ground
10	X2	O	X'tal(5MHz)
11	X1	I	X'tal(5MHz)
12	VDD	—	Power supply(+5V)
13	XT2	O	X'tal(32.768kHz)
14	XT1	I	X'tal(32.768kHz)
15	RESET	I	Reset signal input
16	AC-CUT	I	AC check input
17	CAPM-CNT1P	I	Capstan motor control 1(+) signal output
18	SCOR	O	Subcode data request signal output(Not used)
19	SOFT-TEST	O	Software test port
20	CAPM-CNT2P	I	Capstan motor control 2(+) signal output(Not used)
21	RDS-INT	I	Serial data transfer clock input
22	RDS-DATA	I	Serial data input
23	VDD	—	Power supply(+5V)
24	AVREF	I	Analog reference voltage input
25	ADJ	I	CD adjust point port
26	A-SHUT	I	Deck-A reel pulse detector
27	B-SHUT	I	Deck-B reel pulse detector
28	B-HALF	I	Half detector signal input
29	—	—	Not used
30	SPEC-IN	I	Versin select signal input
31	AMS-IN	I	AMS signal input
32	—	—	Not used
33	AVSS	—	Analog ground
34	SQ-DATA-IN	I	Sub code Q data input(Not used)
35	—	—	Not used
36	SQ-CLK	I	Sub code Q data clock input(Not used)
37	SW-ON/OFF	O	Super woofer ON/OFF control output(Not used)
38	SW-MODE	O	Super woofer mode control output(Not used)
39	—	—	Not used
40	VSS	—	Ground
41	VOL-LAT	O	Latch signal 2 output for IC201(LV1041M)
42	PL-LAT	O	Latch signal 1 output for IC201(LV1041M)
43	COM-DIN	I	Common serial data input(Not used)
44	COM-DOUT	O	Common serial data output(Not used)
45	COM-CLK	O	Common serial clock output(Not used)
46	CD-POWER	O	CD power ON/OFF control output
47	CD-DATA	O	CD data output(Not used)
48	CD CLK	O	CD clock output(Not used)
49	PL-CLK	O	Clock signal output for IC201(LV1041M)
50	PL-DATA	O	Data signal output for IC201(LV1041M)

Pin No.	Pin Name	I/O	Function
51	442-CLK	O	Clock signal output for IC101(M62442FP)
52	442-DATA	O	Data signal output for IC101(M62442FP)
53	CENTER-MUTE	O	Center speaker mute signal output
54	—	—	Not used
55	IIC-DATA	O	Serial data output
56	IIC-CLK	O	Serial data clock output
57	XRST	O	CD reset signal output(Not used)
58	XLT	O	CD latch signal output(Not used)
59	FOCUS-SW	O	Focus switching signal output(Not used)
60	TBL-L	O	Table motor control signal output(Not used)
61	TBL-R	O	Table motor control signal output(Not used)
62	—	—	Not used
63	LOAD-OUT	O	Loading motor control signal output(Not used)
64	LOAD-IN	O	Loading motor control signal output(Not used)
65	ST-CLK	O	Tuner clock output
66	ST-DIN	I	Tuner data input
67	ST-DOUT	O	Tuner data output
68	ST-CE	O	Tuner chip enable output
69	TUNED	I	Tuned detection for tuner
70	STEREO	I	Stereo detection for tuner
71	VSS	—	Ground
72	ST-MUTE	O	Tuner mute signal output
73	SENS2	I	BD condition signal input(Not used)
74	SENS	I	BD condition signal input(Not used)
75	DISC-SENS	I	CD detection signal input(Not used)
76	T-SENS	I	CD table detection signal input(Not used)
77	CAPM-CNT2P	O	Capstan motor control 2(+) signal output(Not used)
78	ENC3	I	Disctray address detect encoder input(Not used)
79	ENC2	I	Disctray address detect encoder input(Not used)
80	ENC1	I	Disctray address detect encoder input(Not used)
81	OUT-OPEN	I	Out switch signal input(Not used)
82	CAP-M-H/L	O	Capstan motor High/Nomal speed select signal output(Not used)
83	B-TRG	O	B-deck trigger motor control signal output
84	A-TRG	O	A-deck trigger motor control signal output
85	CAPM-CNT1M	O	Capstan motor control 1(-) signal output
86	CAPM-CNT2M	O	Capstan motor control 2(-) signal output
87	TC-MUTE	O	TC mute control signal output
88	R/PB/PAS	I	REC/PB/PASS selection output
89	NR-ON/OFF	O	NR ON/OFF signal output
90	REC-MUTE	O	REC mute signal output
91	CLOCK-OUT	O	Clock check output
92	BIAS	O	Bias control signal output
93	EQ-H/N	O	Equalizer High/Normal control output
94	PB-A/B	O	PB deck A/B select output
95	A-PLAY-SW	I	Deck A play detect input
96	B-PLAY-SW	I	Deck B play detect input
97	TC-RELAY	O	Relay control output
98	A-HALF	I	Deck A cassette detect input
99	ALC	O	ALC control output
100	STK-MUTE	O	Power amp mute signal output


PANEL BOARD IC601TMP87CM74AF-6660 (DISPLAY CONTROL)

Pin No.	Pin Name	I/O	Function
1 to 6	LED3 to LED8	O	LED driver output
7	VSS	—	Ground
8	XOUT	O	X'tal(5MHz)
9	XIN	I	X'tal(5MHz)
10	RESET	I	Reset signal input
11,12	LED9,LED10	O	LED driver output
13	TEST	—	Not used
14 to 18	LED11 to LED15	O	LED driver output
19,20	VOLA,VOLB	I	Rotary encoder pulse input for Volume
21,22	JOGA,JOGB	I	Rotary encoder pulse input for Jog
23	SCL(IIC)	I	Serial data clock input
24	SDA(IIC)	I	Serial data input
25	LED SELECT	O	LED select signal output
26 to 29	KEY0 to KEY3	I	Key input
30	MODEL	I	Model No. input
31	LED16	O	LED driver output
32	L+R	I	Spectrum analyzer(high frequency)input
33	SIRCS	I	Remote commander signal input
34 to 37	SPEANA0 to SPEANA3	I	Spectrum analyzer signal input
38	AVSS	—	Ground
39	VAREF	—	Analog reference voltage input
40	VDD	—	Power supply(+5V)
41 to 53	GRID1 to GRID13	O	Fluorescent disply tube gride signal output
54 to 77	SEG1 to SEG24	O	Fluorescent disply tube segment signal output
78	VKK	—	—
79,80	LED1,LED2	O	LED driver output

IC603 (PANEL BOARD) BA3833F-E2



IC201 (SURR BOARD) LV1041M

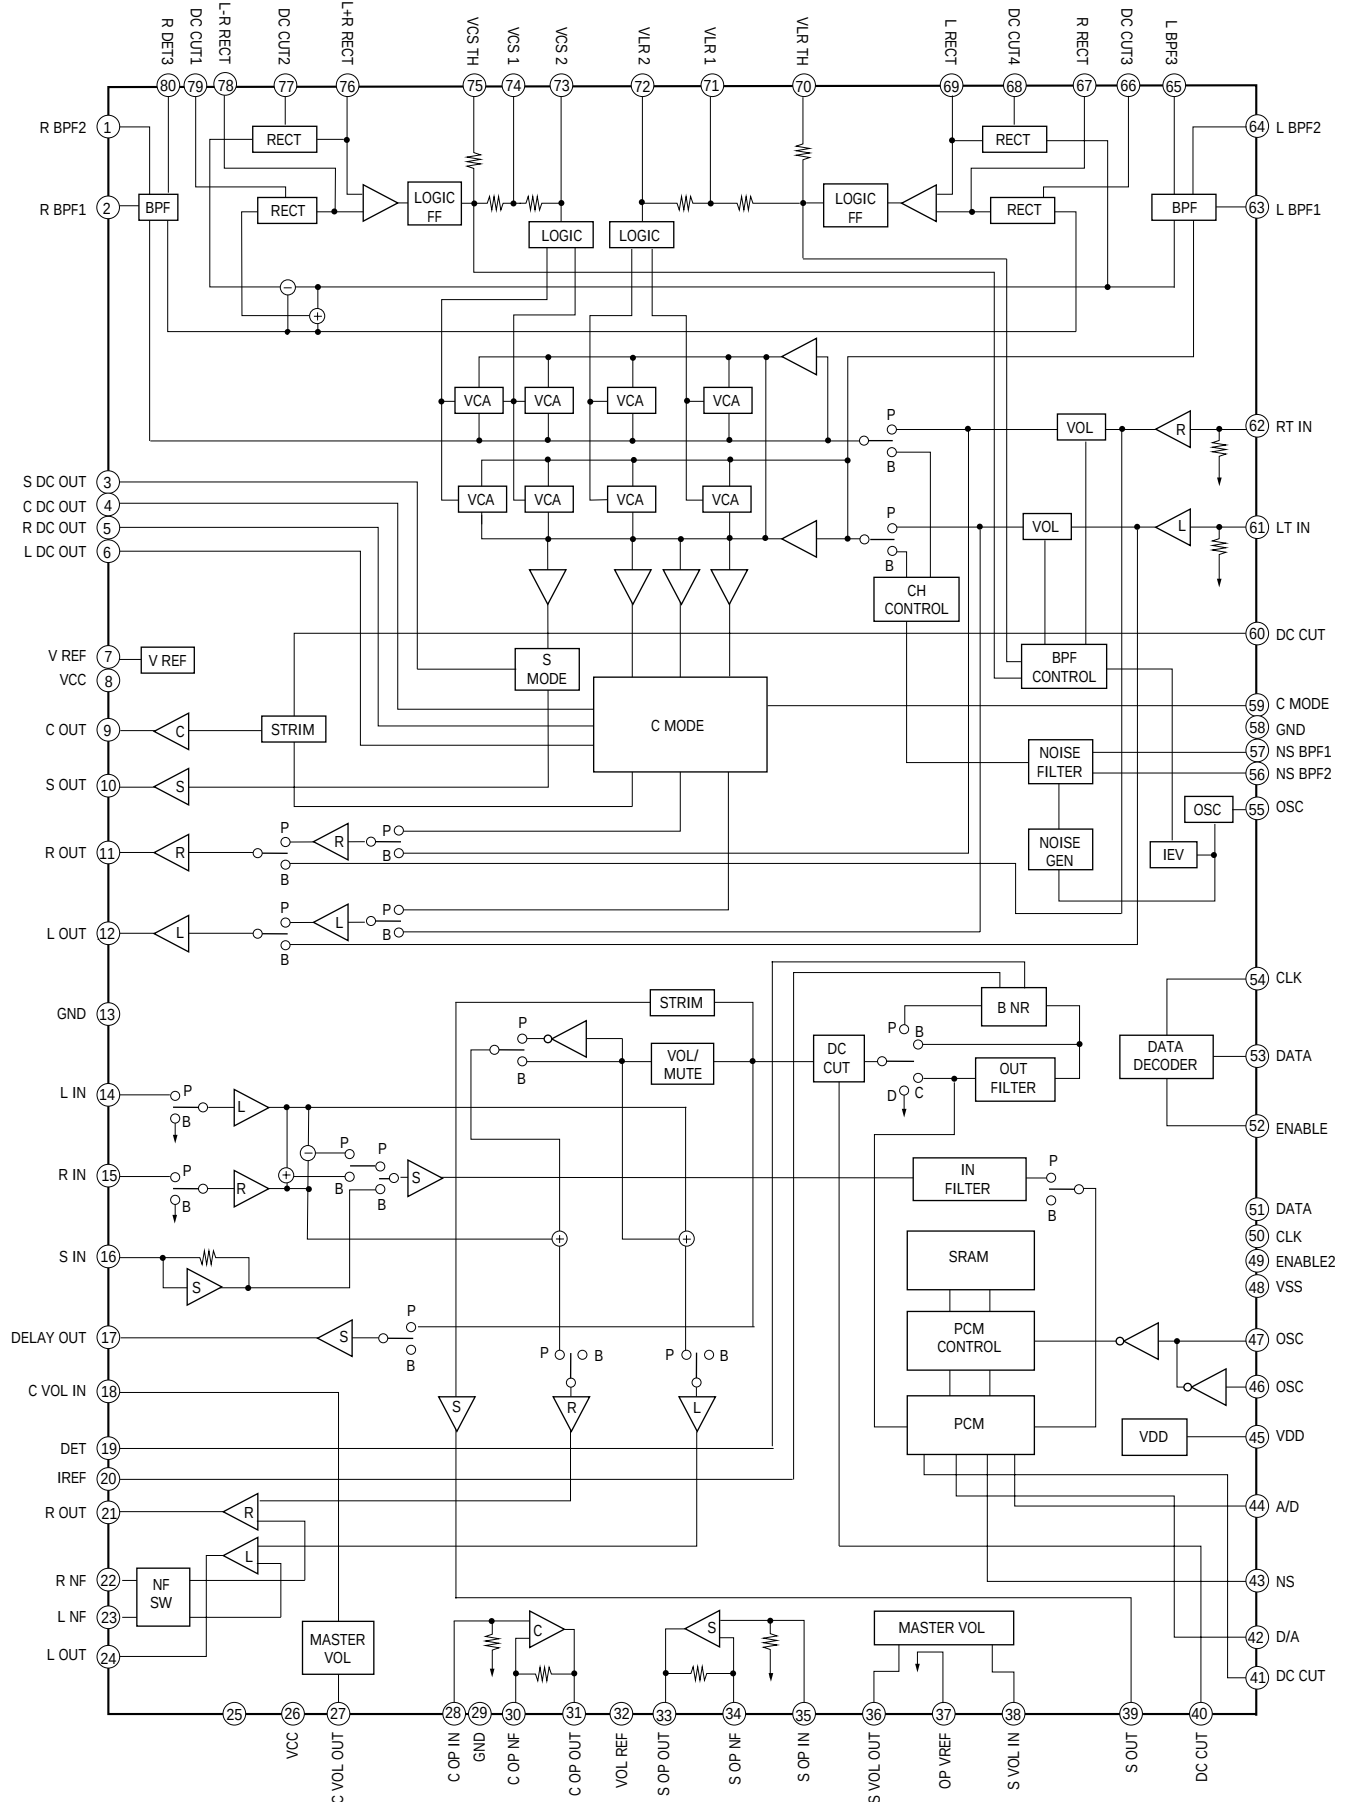

SECTION 7 EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation
CND: Canadian model
AUS: Australian model
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. CASE SECTION

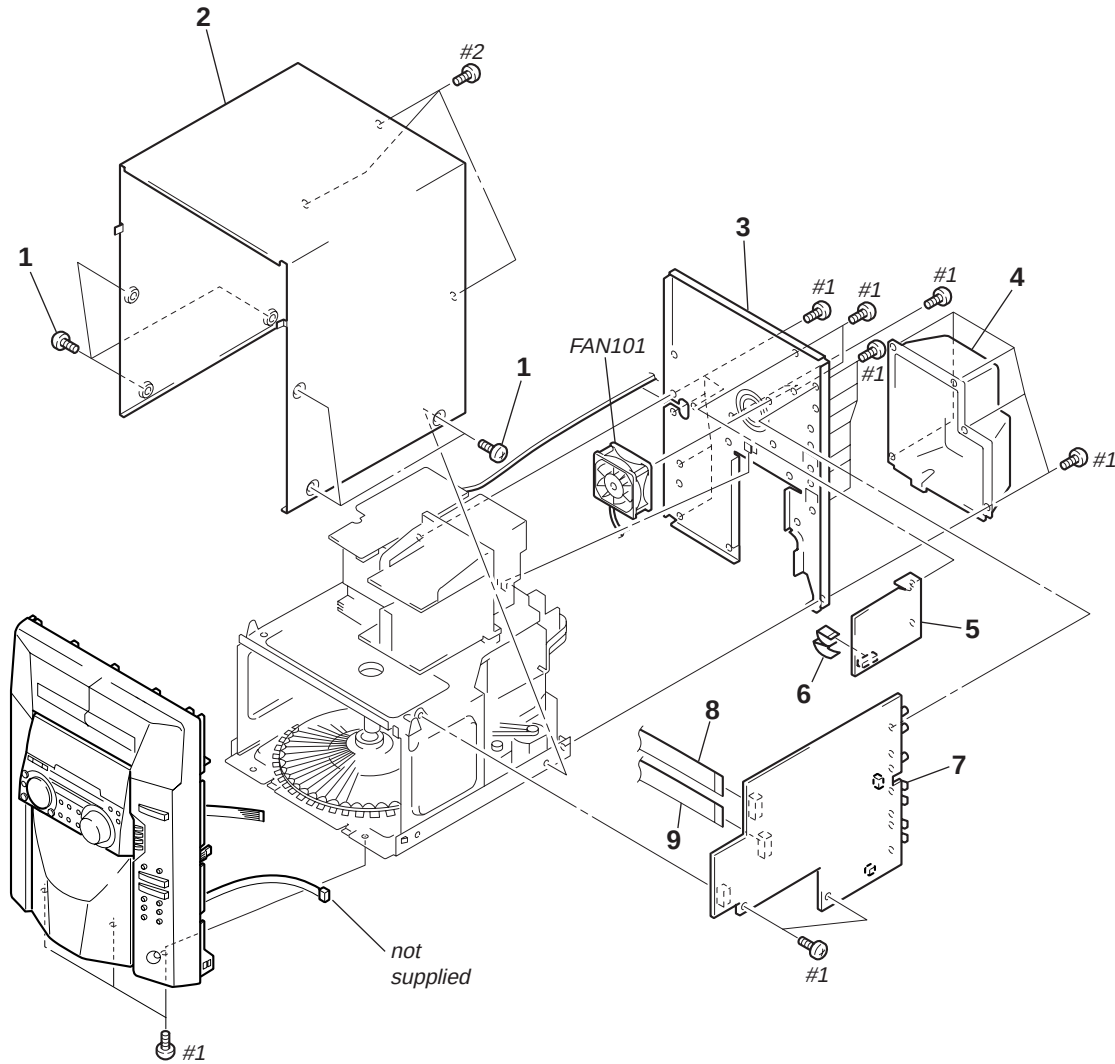


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	3-363-099-11	SCREW(CASE 3 TP2)		6	1-769-972-11	WIRE(FLAT TYPE) (13 CORE)	
* 2	4-999-792-01	CASE		7	A-4426-562-A	MAIN BOARD, COMPLETE(US)	
3	4-221-076-01	PANEL, BACK(US)		7	A-4426-563-A	MAIN BOARD, COMPLETE(CND)	
3	4-221-076-11	PANEL, BACK(CND)		7	A-4426-564-A	MAIN BOARD, COMPLETE(AUS)	
3	4-221-076-41	PANEL, BACK(AUS)		8	1-765-332-11	WIRE(FLAT TYPE) (15 CORE)	
* 4	4-990-365-11	COVER		9	1-773-055-11	WIRE(FLAT TYPE) (17 CORE)	
5	A-4424-239-A	TUNER UNIT(US,CND)		FAN101	1-698-792-11	FAN, DC	
5	A-4424-240-A	TUNER UNIT(AUS)					

7-2. FRONT PANEL SECTION

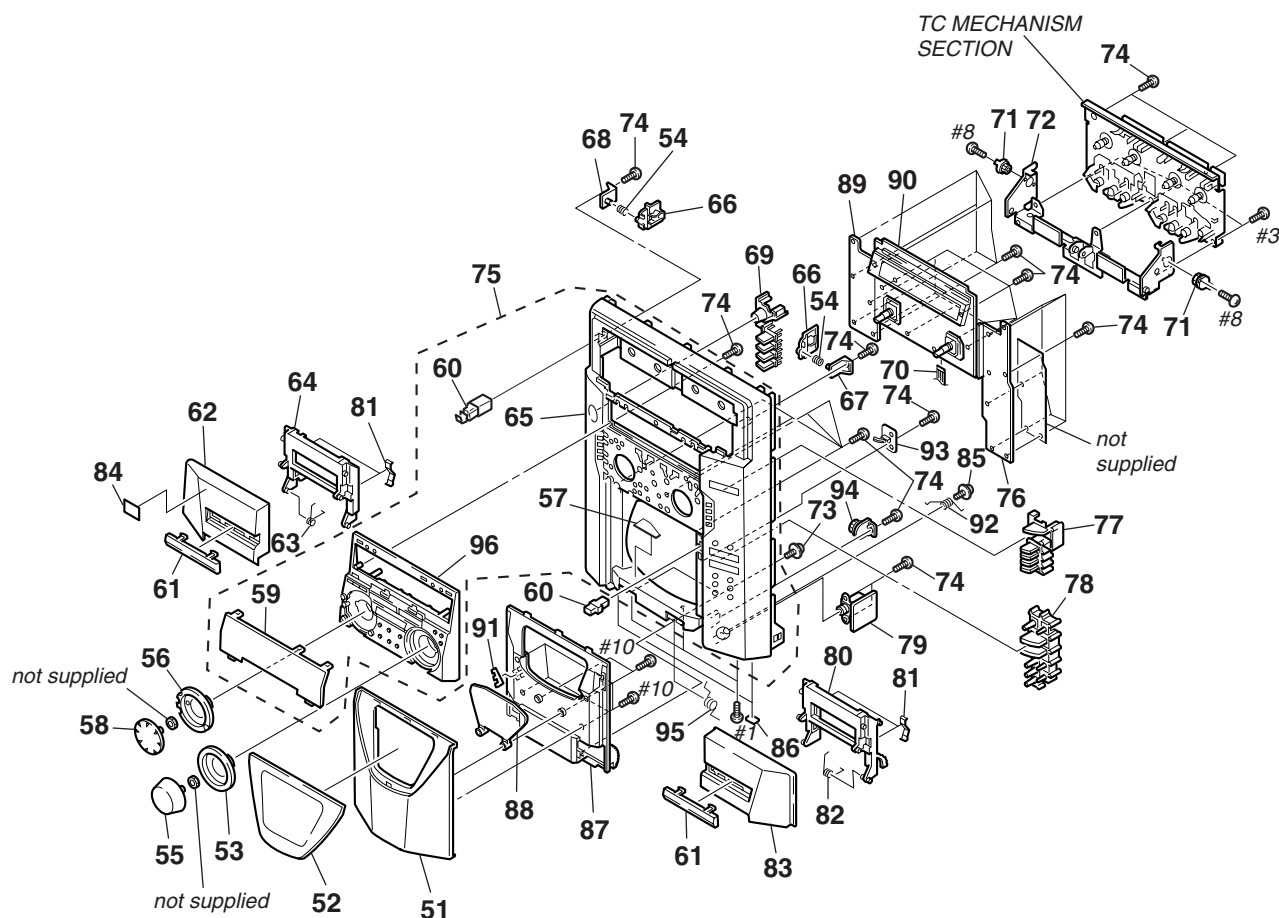

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-222-507-01	CDDOOR (FRONT)		74	4-951-620-01	SCREW (2.6 × 8), +BVTP	
52	4-222-508-01	PLATE (CD DOOR)		75	A-4411-806-A	FRONT PANEL ASSY	
53	4-222-483-01	PING(VOLUME)		76	A-4426-605-A	FUNC BOARD, COMPLETE	
54	4-222-537-01	SPRING (LOCK), COMPRESSION		77	4-222-495-01	BUTTON (FUNCTION)	
55	4-222-486-01	KNOB(VOLUME)		78	X-4952-106-1	BUTTON (GROUP) ASSY	
56	4-222-482-01	RING(SELECTOR)		79	1-674-315-11	HP/MIC BOARD	
* 57	4-991-854-01	LABEL (DISC)		80	4-222-514-01	HOLDER (R), CASSETTE	
58	4-222-485-01	KNOB(SELECTOR)		81	4-959-229-11	DETENT, CASSETTE	
59	4-222-516-01	WINDOW (FL)		82	4-999-687-01	SPRING (B DECK)	
60	4-989-312-01	LATCH, NS		83	4-222-488-01	LID(R), CASSETTE	
61	4-222-487-01	WINDOW (CASSETTE)		84	4-962-708-71	EMBLEM (4-A), SONY	
62	4-222-536-01	LID(L), CASSETTE		85	4-933-134-61	SCREW (+PTPWH M2.6 × 6)	
63	4-999-686-01	SPRING (A DECK)		86	4-977-358-31	CUSHION	
64	4-222-513-01	HOLDER (L), CASSETTE		87	4-222-509-01	CD DOOR (REAR)	
65	4-222-481-01	CABINET, FRONT		88	4-222-510-01	PLATE (CD DOOR LENS)	
66	4-222-505-01	HOLDER LOCK		89	1-674-312-11	SW/POWER BOARD	
67	4-222-503-01	BRACKET, (LOCK L)		90	A-4426-571-A	PANEL BOARD, COMPLETE	
68	4-222-506-01	BRACKET, (LOCK R)		91	1-674-316-11	DOOR LED BOARD	
69	X-4952-105-1	BUTTON (POWER) ASSY		92	4-222-490-01	SPRING (DOOR 2), TORSION	
70	1-769-920-11	WIRE(FLAT TYPE) (9 CORE)		93	1-674-314-11	CD DOOR BOARD	
* 71	3-973-975-21	DAMPER, OIL		94	3-354-963-01	DAMPER	
* 72	4-999-677-01	BRACKET (TC)		95	4-222-501-01	SPRING (DOOR 1), TORSION	
73	4-957-577-31	SCREW PTP WH (2.6 × 8) (DIA. 10)		96	X-4952-104-1	SUB PANEL ASSY	

7-3. CHASSIS SECTION

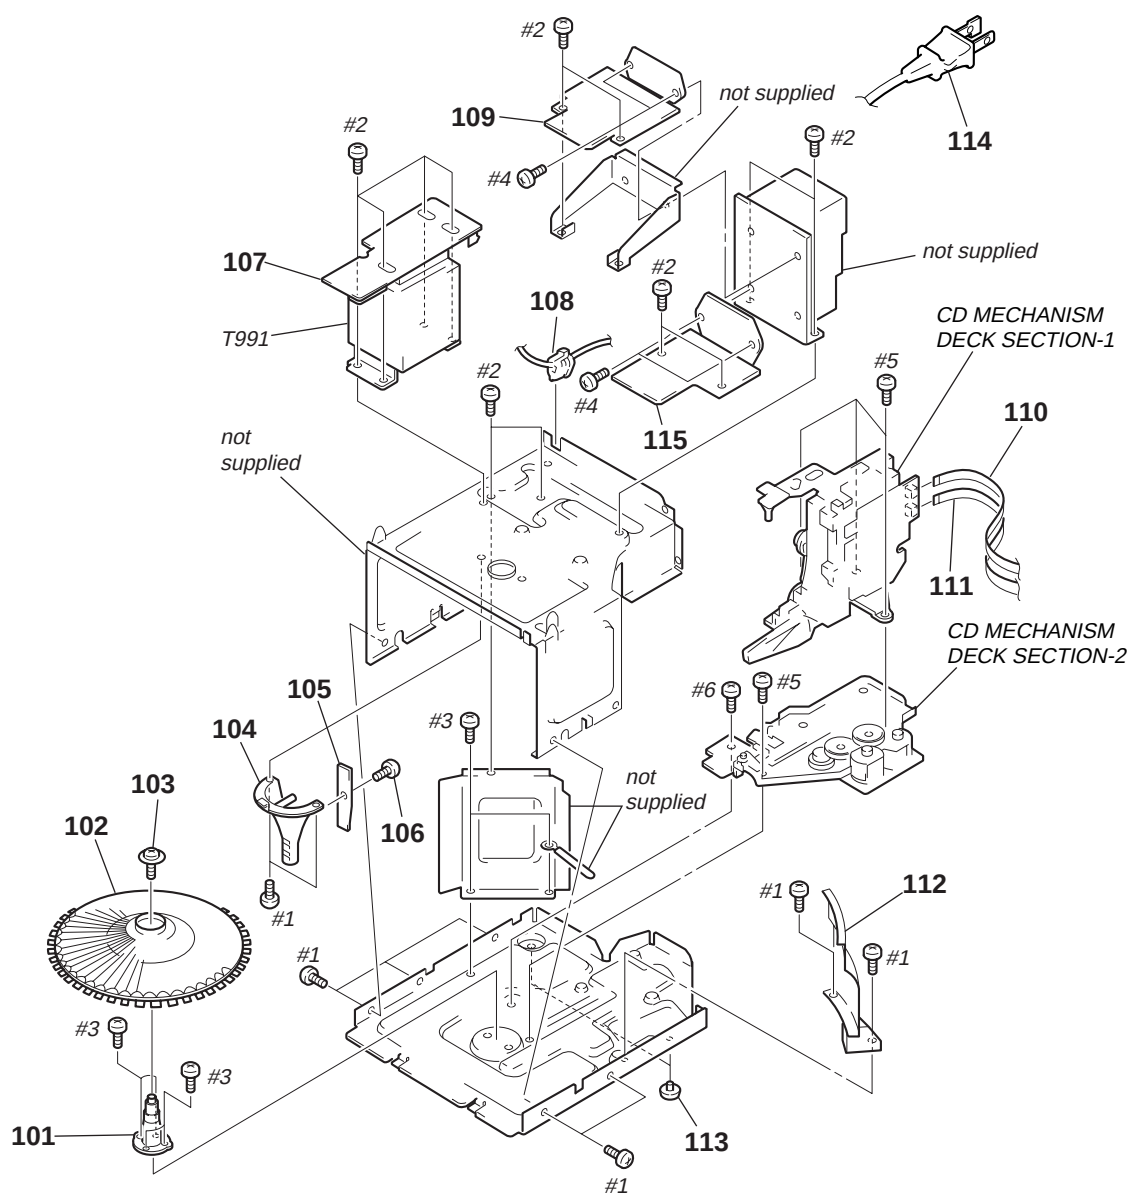


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	4-988-439-01	HOLDER, TABLE		* 112	4-990-370-11	COVER (CD)	
102	4-988-434-01	TABLE (50)		113	4-965-822-01	FOOT	
103	4-957-577-31	SCREW PTP WH (2.6 × 8) (DIA. 10)		△ 114	1-775-790-31	CORD, POWER(AUS)	
* 104	4-990-371-11	HOLDER (LED)		△ 114	1-783-531-11	CORD, POWER(US,CND)	
* 105	1-669-645-11	CD LED BOARD		△ 114	1-783-531-21	CORD, POWER(US,CND)	
106	4-951-620-01	SCREW (2.6 × 8), +BVTP		115	A-4426-574-A	POWER AMP BOARD,COMPLETE(US)	
107	1-674-313-11	TRANS BOARD		115	A-4426-575-A	POWER AMP BOARD,COMPLETE(CND)	
108	3-703-244-00	BUSHING (2104), CORD		115	A-4426-576-A	POWER AMP BOARD,COMPLETE(AUS)	
* 109	A-4407-823-A	SURR BOARD,COMPLETE		△ T991	1-431-840-21	TRANSFORMER, POWER(US)	
110	1-782-558-21	WIRE (FLAT TYPE) (16 CORE)		△ T991	1-431-841-21	TRANSFORMER, POWER(CND)	
111	1-782-559-21	WIRE (FLAT TYPE) (9 CORE)		△ T991	1-431-842-21	TRANSFORMER, POWER(AUS)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-4. MECHANISM DECK SECTION-1 (CDM-46B1)

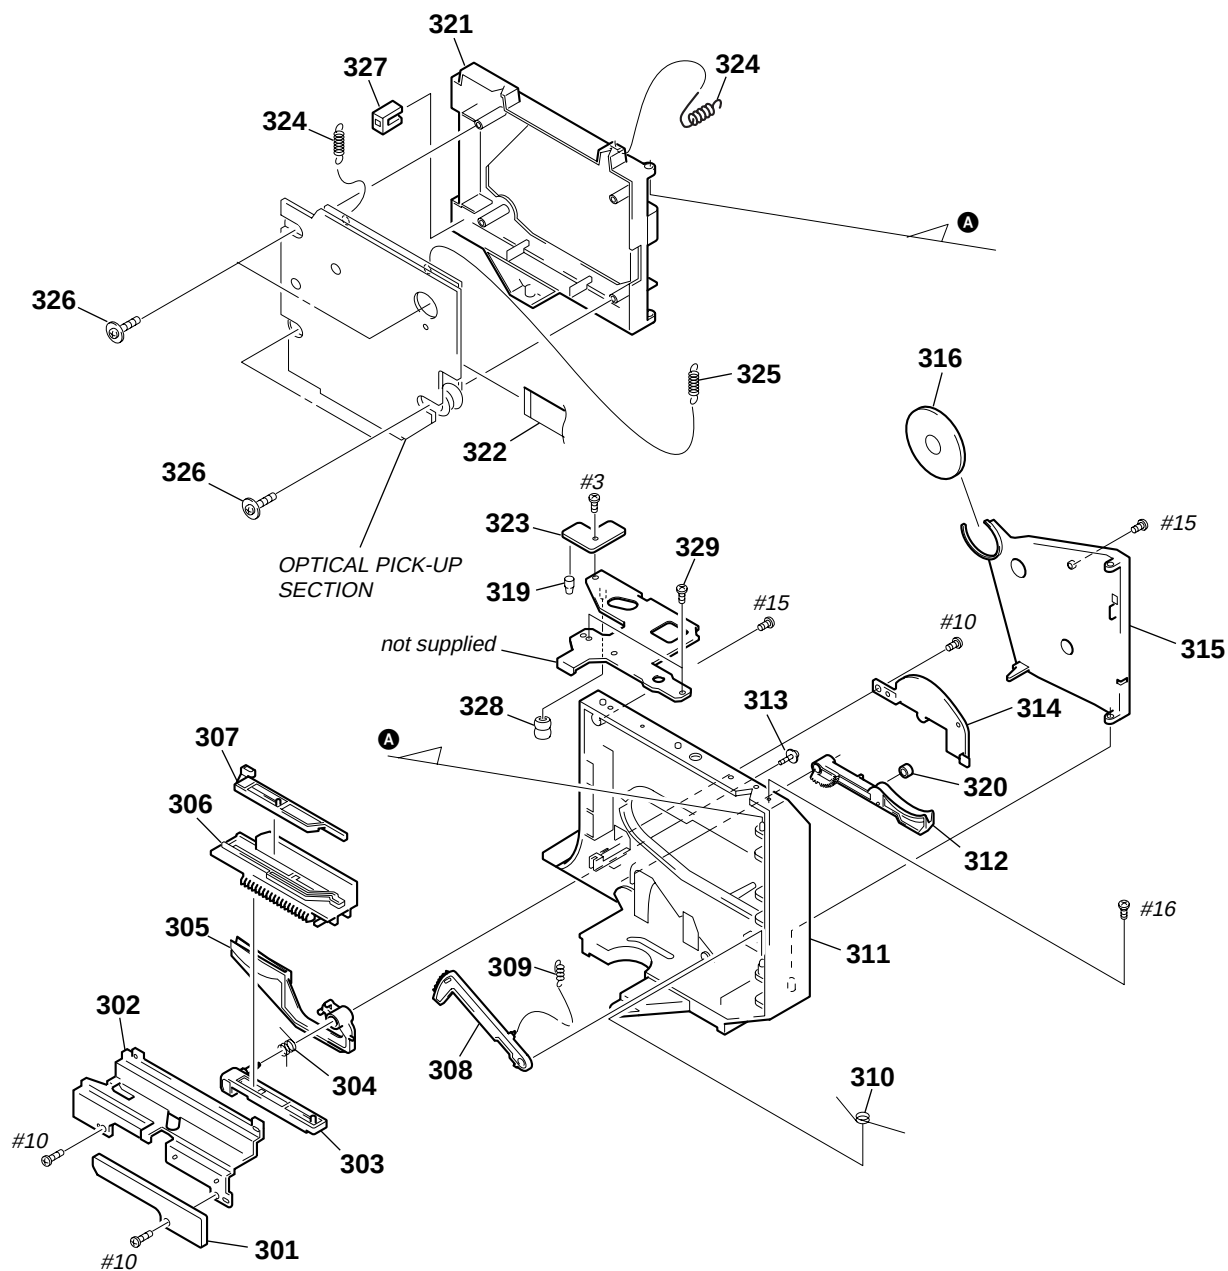


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 301	1-663-975-11	DOOR SW BOARD		* 315	4-988-421-01	HOLDER (MAGNET)	
* 302	4-988-427-01	COVER, CAM		316	A-4672-522-A	MAGNET ASSY	
303	4-988-420-01	SLIDER (LOADING)		* 319	4-976-473-01	HOLDER (LED-S)	
304	4-988-436-01	SPRING (LOADING), TORSION		320	4-988-431-01	ROLLER (DISC)	
305	4-988-418-01	HOLDER (A), DISC		321	X-4948-019-1	HOLDER ASSY, BU	
* 306	4-988-417-01	SLIDER (CAM)		322	1-777-874-11	WIRE (FLAT TYPE) (16 CORE)	
307	4-988-433-01	SLIDER (LOCK)		* 323	1-663-973-11	DISC SENSOR (S) BOARD	
308	X-4948-020-1	LEVER (LOADING) ASSY		324	4-988-440-01	SPRING (F-1), TENSION	
309	4-988-438-01	SPRING (LEVER), TENSION		325	4-988-441-01	SPRING (F-2), TENSION	
310	4-988-437-01	SPRING (HOLDER), TORSION		326	4-957-577-21	SCREW PTP WH (2.6X8) (DIA. 10)	
* 311	4-988-416-01	BASE, LOADING		327	4-992-413-02	STOPPER	
312	4-988-419-01	HOLDER (B), DISC		328	3-910-095-31	RUBBER, VIBRATION PROOF	
313	4-992-069-01	SCREW (+PTWH) (M2) (DIA. 7)		329	4-951-620-01	SCREW (2.6X8), +BVTP	
* 314	4-988-454-01	COVER (LEVER)					

7-5. MECHANISM DECK SECTION-2 (CDM-46B1)

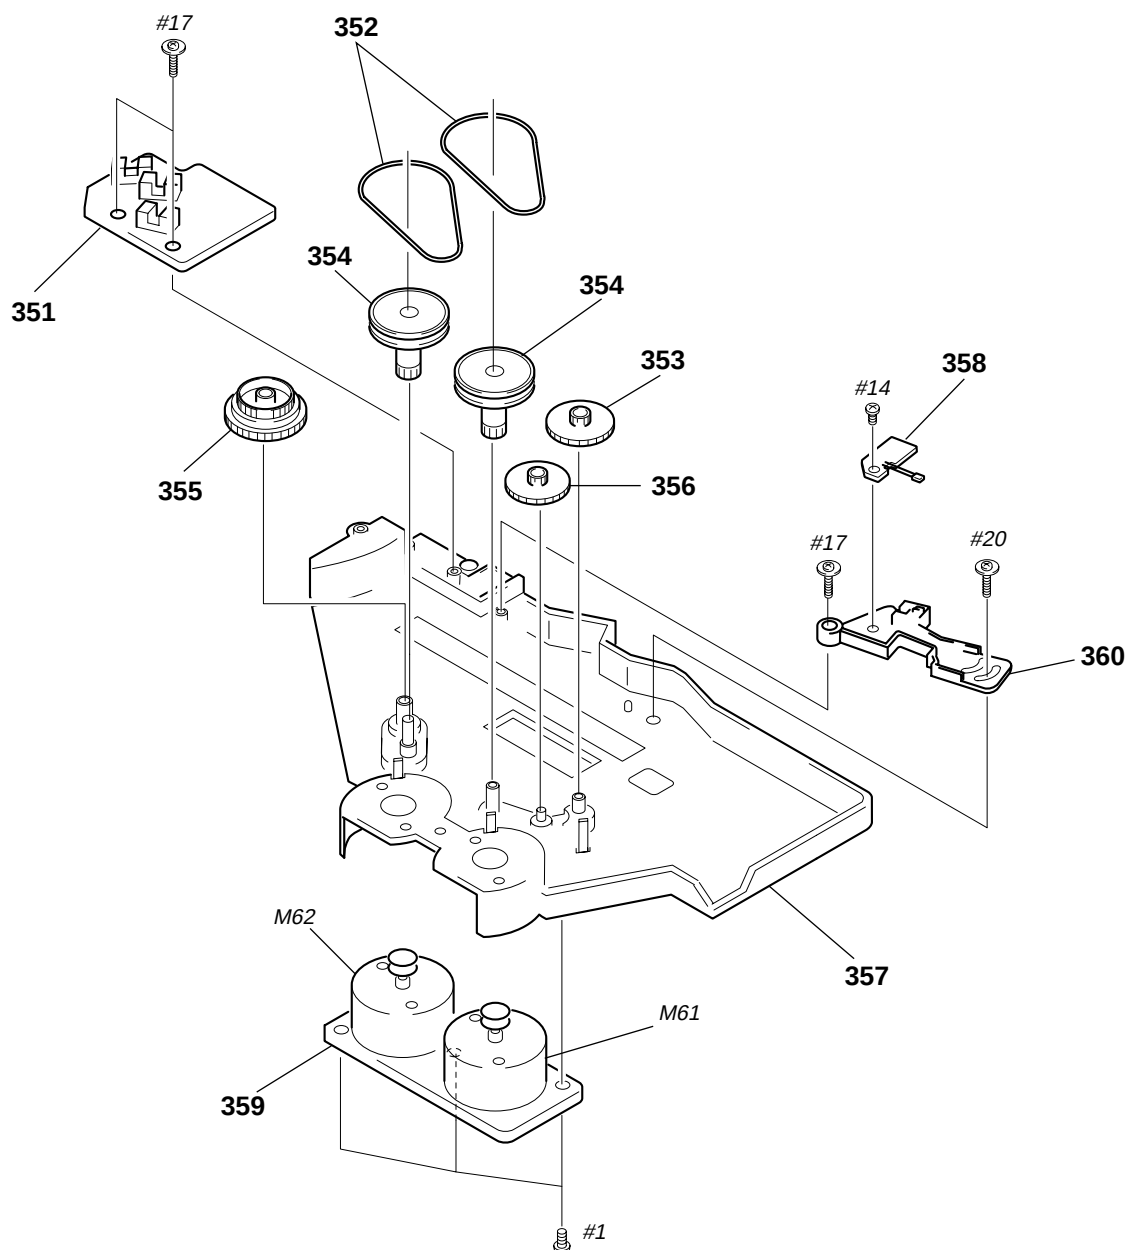

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 351	1-663-971-11	TABLE SENSOR BOARD		* 357	4-988-426-01	BASE (CDM)	
352	4-988-414-01	BELT		* 358	1-663-972-11	DISC SENSOR (R) BOARD	
353	4-988-423-01	GEAR (A) (LOADING)		* 359	1-663-974-11	CDMOTOR BOARD	
354	4-988-425-01	PULLEY		* 360	4-990-669-01	HOLDER (SENSOR)	
355	4-988-424-01	GEAR (TABLE)		M61	X-4948-434-1	MOTOR ASSY(LOADING)	
356	4-988-432-01	GEAR (B) (LOADING)		M62	X-4948-434-1	MOTOR ASSY(TABLE)	

7-6. OPTICAL PICK UP SECTION (KSS-213BA/F-NP)

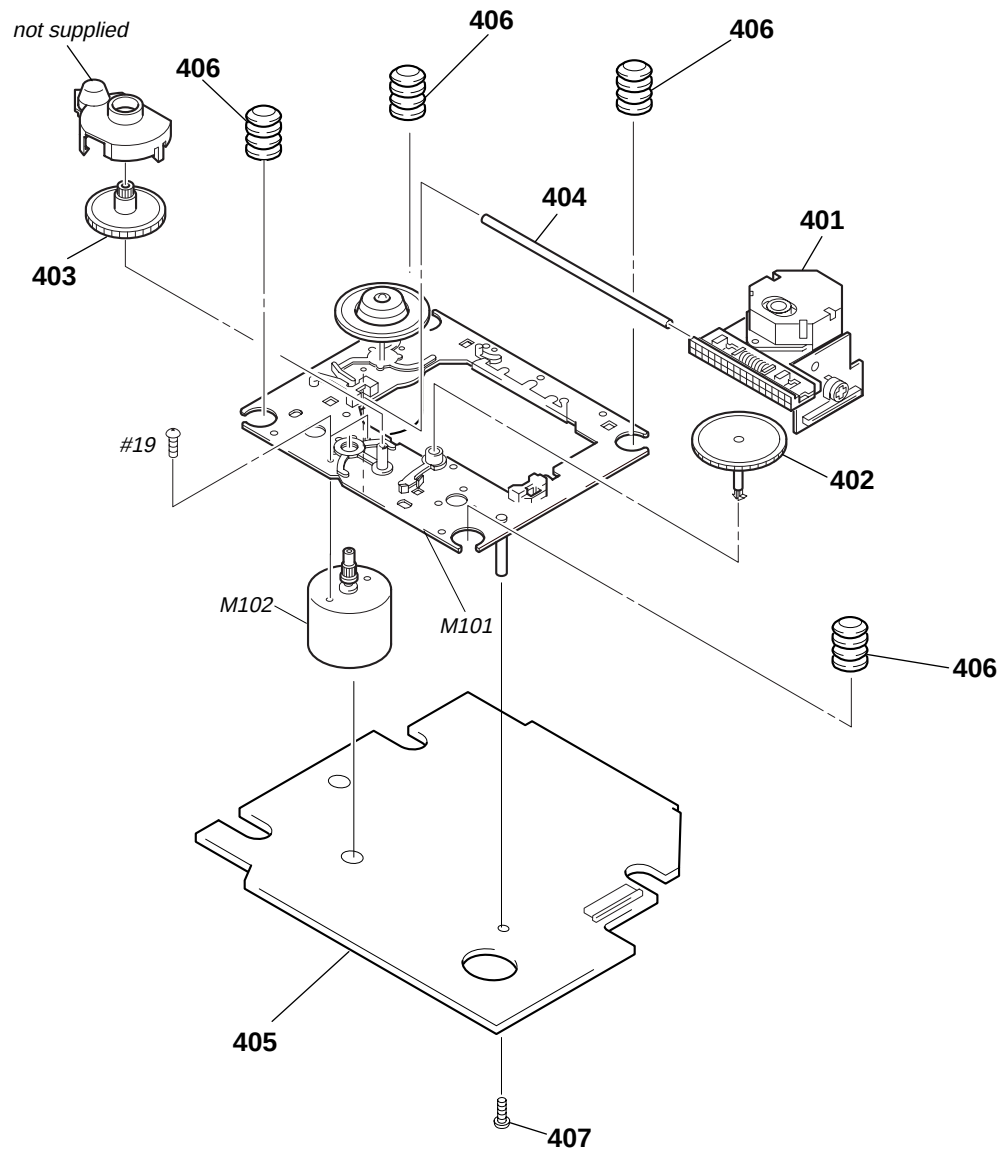


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
△ 401	8-848-379-31	DEVICE,OPTICAL KSS-213BA/F-NP		* 406	4-992-054-01	RUBBER, VIBRATION PROOF	
402	2-626-907-01	GEAR(A)(S)		407	4-996-243-01	SCREW (M2), +PSW	
403	2-627-003-02	GEAR(B)(RP)		M101	X-2646-110-1	T.T CHASSIS ASSY(MG)(F)(SPINDLE)	
404	2-626-908-01	SHAFT,SLED		M102	X-2625-769-1	MOTOR GEAR ASSY(MB)(RP)(SLED)	
* 405	A-4699-869-A	BD BOARD, COMPLETE					

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

7-7. TC MECHANISM SECTION 1(TCM230AWR2/230PWR2)

*NOTE: Two types of parts which are not interchangeable are available for the Head deck (A) ASSY and Head deck (B) ASSY.
When replacing the parts, refer to the following figure, and use the appropriate part.

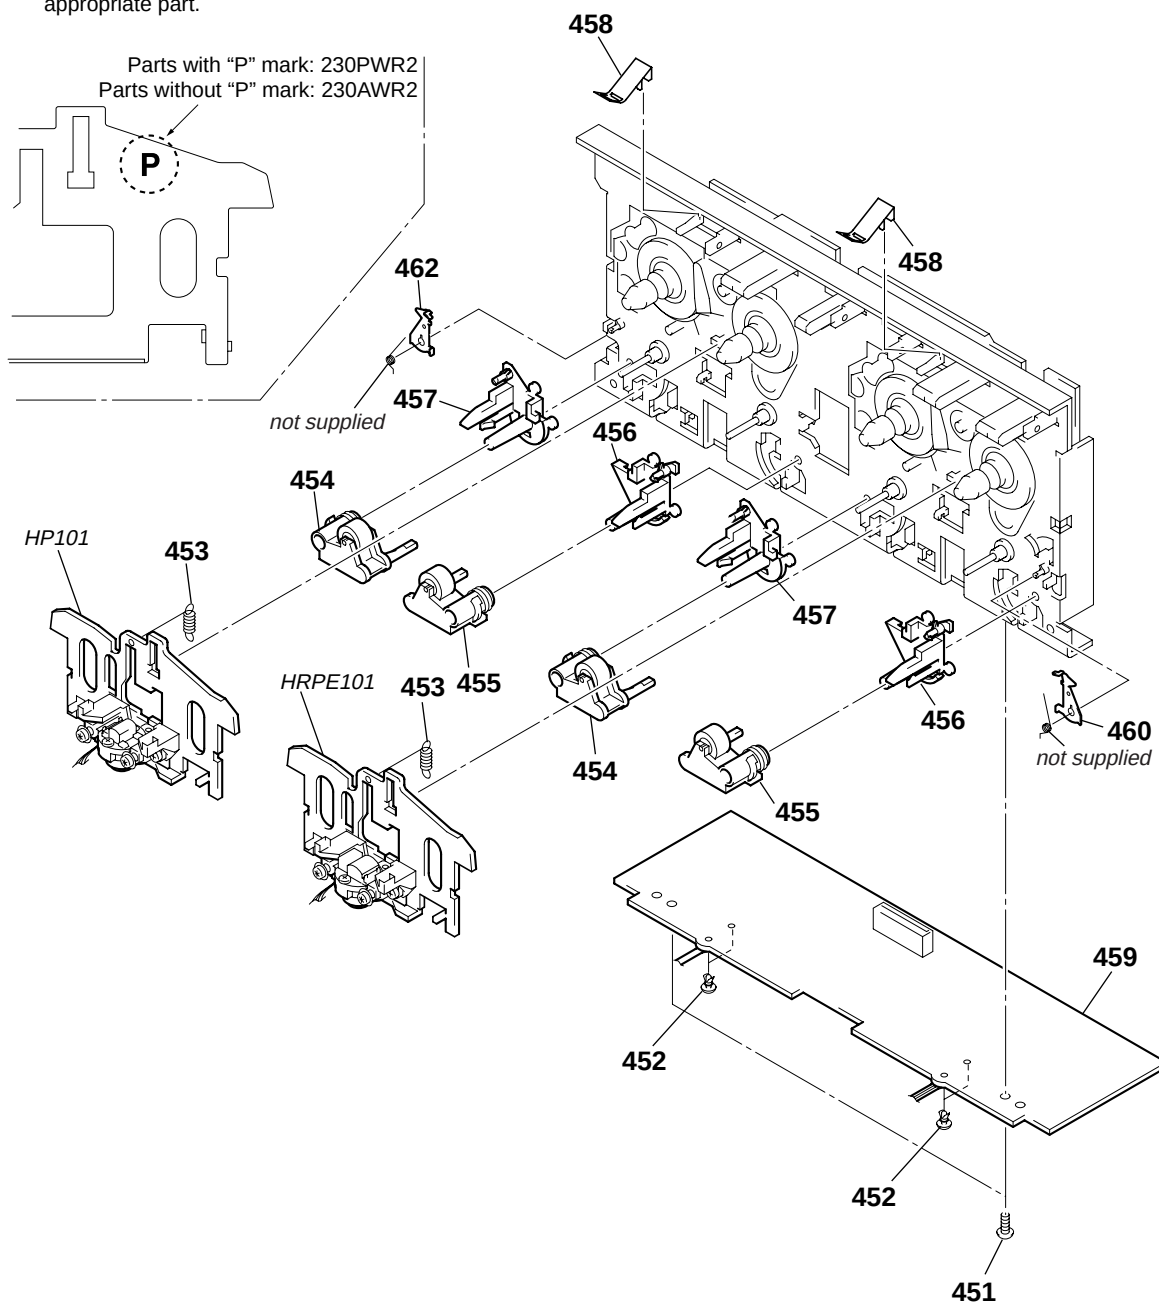


Ref. No.	Part No.	Description	Remarks
451	3-376-464-11	SCREW(+PTT 2.6X6),GROUND POINT	
452	3-911-116-42	RIVET, PUSH	
453	3-016-574-11	SPRING (HEAD), TENSION	
454	X-3374-156-4	PINCH LEVER (REV) ASSY	
455	X-3374-155-4	PINCH LEVER (FWD) ASSY	
456	3-016-564-01	BASE (PINCH LEVER FWD)	
457	3-016-565-01	BASE (PINCH LEVER REV)	
458	3-026-892-01	SPRING (CASSETTE), LEAF	

Ref. No.	Part No.	Description	Remarks
459	A-2007-731-A	AUDIO BOARD,COMPLETE	
460	3-016-573-01	LEVER (EJECT PREVENTION R)	
462	3-016-572-01	LEVER (EJECT PREVENTION L)	
HP101	A-2056-681-B	DECK (A) ASSY, HEAD(230AWR2)(*NOTE)	
HP101	A-2056-683-B	DECK (A) ASSY, HEAD(230PWR2)(*NOTE)	
HRPE10	A-2056-682-B	DECK (B) ASSY, HEAD(230AWR2)(*NOTE)	
HRPE101A	A-2056-684-B	DECK (B) ASSY, HEAD(230PWR2)(*NOTE)	

7-8. TC MECHANISM SECTION 2(TCM230AWR2/230PWR2)

*NOTE: Two types of parts which are not interchangeable are available for the mechanical block assembly. When replacing the parts, refer to the following figure, and use the appropriate part.

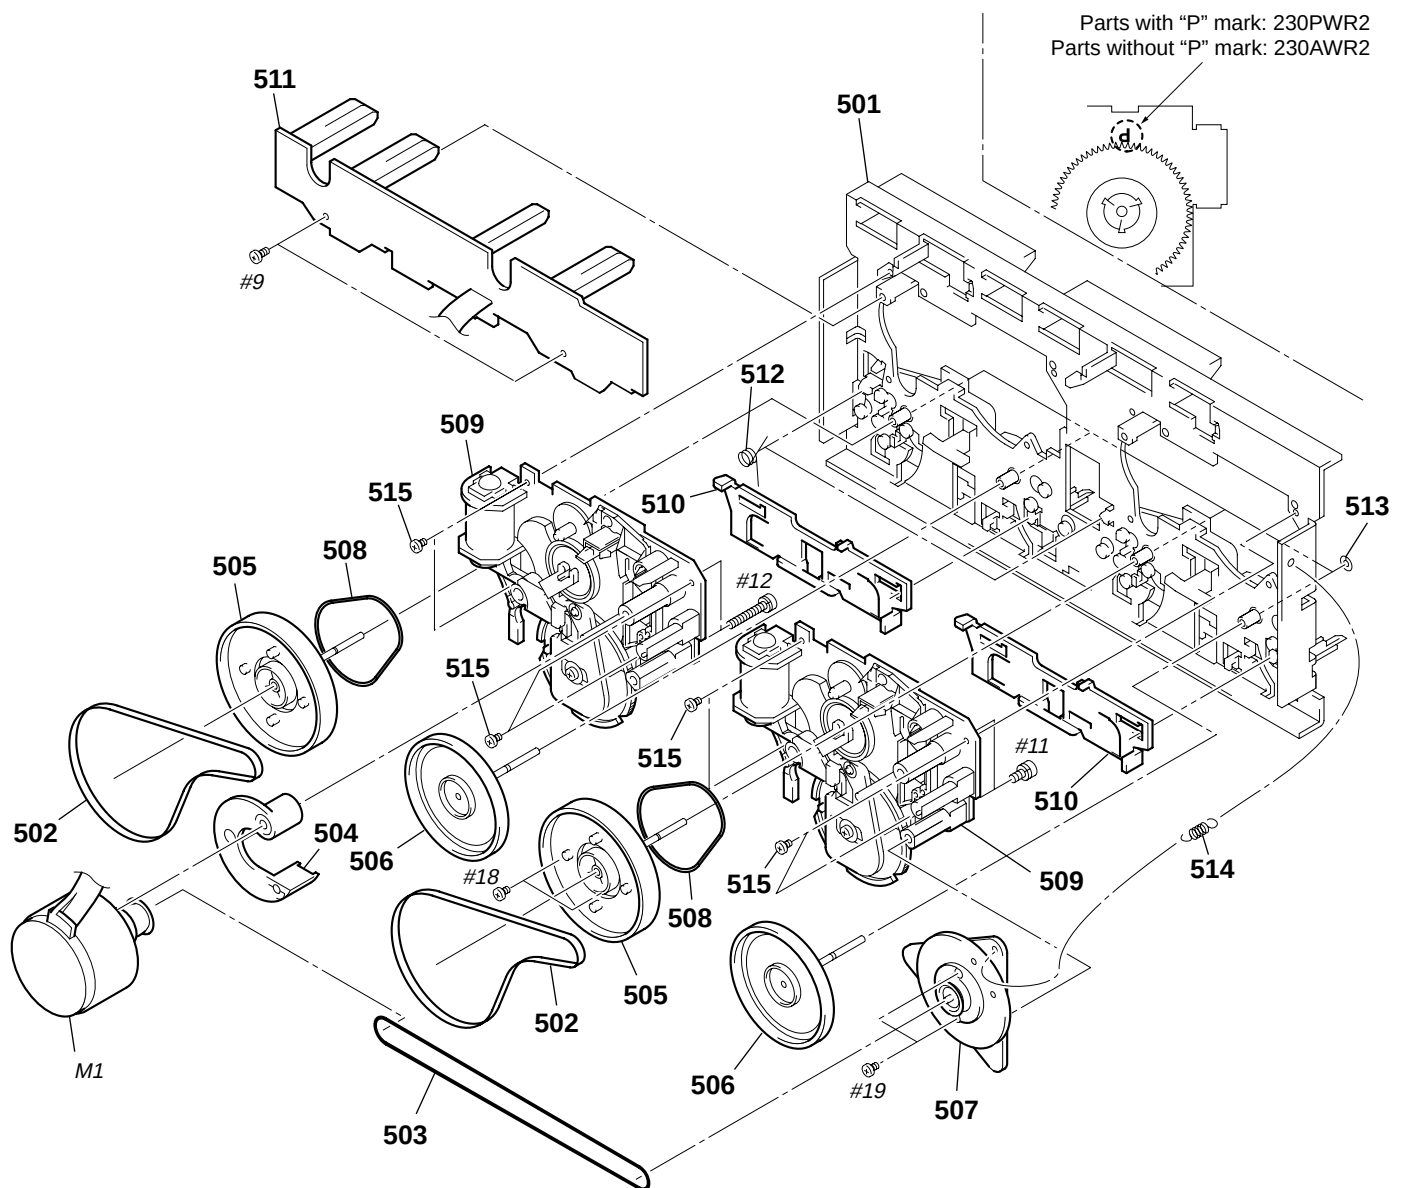

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 501	X-3374-214-3	CHASSIS ASSY, MAIN		509	A-2004-630-A	MECHANICAL BLOCK ASSY(230PWR2)(*NOTE)	
502	3-016-570-01	BELT (CAPSTAN)		510	3-016-566-01	SLIDER, REVERSE	
503	3-016-569-01	BELT (TENSION)		511	A-2007-732-A	LEAF SW BOARD, COMPLETE	
504	3-017-360-01	BRACKET (MOTOR)		512	3-016-575-11	SPRING, TORSION	
505	X-3376-497-2	FLYWHEEL (FWD) ASSY		513	3-019-208-01	WASHER, STOPPER	
506	X-3374-235-1	FLYWHEEL (REV) ASSY		514	3-027-453-01	SPRING (GROUND), TENSION	
507	X-3374-238-1	PULLEY ASSY, TENSION		515	3-030-823-01	SCREW (+BVT) (2X3.5)	
508	3-024-405-01	BELT (FR2)		M1	A-2004-628-A	MOTOR ASSY, CAPSTAN	
509	A-2004-629-A	MECHANICAL BLOCK ASSY(230AWR2)(*NOTE)					

AUDIO

SECTION 8 ELECTRICAL PARTS LIST

NOTE:

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifié.

- Abbreviation
CND : Canadian
AUS : Australian

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	A-2007-731-A	AUDIO BOARD, COMPLETE *****				< IC >	
		< CAPACITOR >		IC601	8-759-111-44	IC UPC4570C-1	
C301	1-162-289-31	CERAMIC 390PF 10% 50V		IC602	8-759-143-54	IC UPC1330HA	
C302	1-126-968-11	ELECT 100uF 20% 6.3V		IC611	8-759-111-44	IC UPC4570C-1	
C303	1-162-282-31	CERAMIC 100PF 10% 50V				< COIL >	
C304	1-130-483-00	MYLAR 0.01uF 5% 50V		L331	1-410-780-11	INDUCTOR 27mH	
C305	1-107-715-11	ELECT 22uF 20% 16V		L431	1-410-780-11	INDUCTOR 27mH	
				L601	1-414-193-41	INDUCTOR 220uH	
C311	1-162-289-31	CERAMIC 390PF 10% 50V		L602	1-414-193-41	INDUCTOR 220uH	
C313	1-162-282-31	CERAMIC 100PF 10% 50V				< TRANSISTOR >	
C314	1-130-487-00	MYLAR 0.022uF 5% 50V		Q621	8-729-142-46	TRANSISTOR 2SC2001-LK	
C315	1-126-233-11	ELECT 22uF 20% 50V		Q622	8-729-142-46	TRANSISTOR 2SC2001-LK	
C331	1-137-427-11	FILM 120PF 5% 50V		Q623	8-729-801-93	TRANSISTOR 2SD1387	
						< RESISTOR >	
C332	1-162-288-31	CERAMIC 330PF 10% 50V		R301	1-247-881-00	CARBON 120K 5% 1/4W	
C333	1-162-209-31	CERAMIC 27PF 5% 50V		R302	1-249-409-11	CARBON 220 5% 1/4W	F
C401	1-162-289-31	CERAMIC 390PF 10% 50V		R303	1-249-433-11	CARBON 22K 5% 1/4W	
C402	1-126-968-11	ELECT 100uF 20% 6.3V		R304	1-247-889-00	CARBON 270K 5% 1/4W	
C403	1-162-282-31	CERAMIC 100PF 10% 50V		R305	1-247-858-11	CARBON 13K 5% 1/4W	
C404	1-130-483-00	MYLAR 0.01uF 5% 50V		R311	1-247-881-00	CARBON 120K 5% 1/4W	
C405	1-107-715-11	ELECT 22uF 20% 16V		R312	1-247-807-31	CARBON 100 5% 1/4W	
C411	1-162-289-31	CERAMIC 390PF 10% 50V		R314	1-247-882-11	CARBON 130K 5% 1/4W	
C413	1-162-282-31	CERAMIC 100PF 10% 50V		R315	1-247-850-11	CARBON 6.2K 5% 1/4W	
C414	1-130-487-00	MYLAR 0.022uF 5% 50V		R331	1-249-430-11	CARBON 12K 5% 1/4W	
C415	1-126-233-11	ELECT 22uF 20% 50V		R401	1-247-881-00	CARBON 120K 5% 1/4W	
C431	1-137-427-11	FILM 120PF 5% 50V		R402	1-249-409-11	CARBON 220 5% 1/4W	F
C432	1-162-288-31	CERAMIC 330PF 10% 50V		R403	1-249-433-11	CARBON 22K 5% 1/4W	
C433	1-162-209-31	CERAMIC 27PF 5% 50V		R404	1-247-889-00	CARBON 270K 5% 1/4W	
C601	1-104-396-11	ELECT 10uF 20% 16V		R405	1-247-858-11	CARBON 13K 5% 1/4W	
C602	1-104-396-11	ELECT 10uF 20% 16V		R411	1-247-881-00	CARBON 120K 5% 1/4W	
C611	1-104-396-11	ELECT 10uF 20% 16V		R412	1-247-807-31	CARBON 100 5% 1/4W	
C612	1-104-396-11	ELECT 10uF 20% 16V		R414	1-247-882-11	CARBON 130K 5% 1/4W	
C621	1-137-150-11	FILM 0.01uF 5% 100V		R415	1-247-850-11	CARBON 6.2K 5% 1/4W	
C622	1-126-961-11	ELECT 2.2uF 20% 50V		R431	1-249-430-11	CARBON 12K 5% 1/4W	
C623	1-136-155-00	FILM 0.015uF 5% 50V		R601	1-249-409-11	CARBON 220 5% 1/4W	F
C624	1-130-481-00	MYLAR 0.0068uF 5% 50V		R602	1-249-409-11	CARBON 220 5% 1/4W	F
C625	1-130-481-00	MYLAR 0.0068uF 5% 50V		R608	1-249-409-11	CARBON 220 5% 1/4W	F
C627	1-124-903-11	ELECT 1uF 20% 50V		R609	1-249-433-11	CARBON 22K 5% 1/4W	
C628	1-136-153-00	FILM 0.01uF 5% 50V		R611	1-249-409-11	CARBON 220 5% 1/4W	F
C642	1-104-664-11	ELECT 47uF 20% 16V		R612	1-249-409-11	CARBON 220 5% 1/4W	F
				R621	1-212-851-00	FUSIBLE 5.6 5% 1/4W	F
				R622	1-212-851-00	FUSIBLE 5.6 5% 1/4W	F
				R623	1-249-432-11	CARBON 18K 5% 1/4W	
				R624	1-249-432-11	CARBON 18K 5% 1/4W	
		< CONNECTOR >					
CN601	1-568-834-11	SOCKET, CONNECTOR 15P					

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R625	1-249-429-11	CARBON 10K 5%	1/4W	C156	1-163-085-00	CERAMIC CHIP 2PF	50V
		< VARIABLE RESISTOR >		C157	1-164-232-11	CERAMIC CHIP 0.01uF	50V
RV301	1-238-598-11	RES, ADJ, CARBON 2.2K		C158	1-163-038-91	CERAMIC CHIP 0.1uF	25V
RV311	1-238-598-11	RES, ADJ, CARBON 2.2K		C159	1-163-101-00	CERAMIC CHIP 22PF 5%	50V
RV341	1-241-768-11	RES, ADJ, CARBON 220K		C160	1-163-117-00	CERAMIC CHIP 100PF 5%	50V
RV401	1-238-598-11	RES, ADJ, CARBON 2.2K		C161	1-163-038-91	CERAMIC CHIP 0.1uF	25V
RV411	1-238-598-11	RES, ADJ, CARBON 2.2K		C162	1-163-038-91	CERAMIC CHIP 0.1uF	25V
				C163	1-163-038-91	CERAMIC CHIP 0.1uF	25V
				C164	1-163-227-11	CERAMIC CHIP 10PF 0.5PF 50V	
RV441	1-241-768-11	RES, ADJ, CARBON 220K		C165	1-163-227-11	CERAMIC CHIP 10PF 0.5PF 50V	
		< TRANSFORMER >		C166	1-124-443-00	ELECT 100uF 20%	10V
T621	1-423-980-11	TRANSFORMER, BIAS OSCILLATION		C167	1-163-038-91	CERAMIC CHIP 0.1uF	25V
*****				C171	1-163-038-91	CERAMIC CHIP 0.1uF	25V
*	A-4699-869-A	BD BOARD, COMPLETE		C172	1-126-177-11	ELECT 100uF 20%	10V
		*****		C173	1-124-589-11	ELECT 47uF 20%	16V
		< CAPACITOR >		C174	1-163-038-91	CERAMIC CHIP 0.1uF	25V
C101	1-163-038-91	CERAMIC CHIP 0.1uF	25V	C175	1-163-038-91	CERAMIC CHIP 0.1uF	25V
C102	1-163-038-91	CERAMIC CHIP 0.1uF	25V	C181	1-104-664-11	ELECT 47uF 20%	16V
C103	1-164-489-11	CERAMIC CHIP 0.22uF 10%	16V	C182	1-104-664-11	ELECT 47uF 20%	16V
C104	1-163-003-11	CERAMIC CHIP 330PF 10%	50V	C183	1-163-003-11	CERAMIC CHIP 330PF 10%	50V
C105	1-163-023-00	CERAMIC CHIP 0.015uF 5%	50V	C184	1-163-003-11	CERAMIC CHIP 330PF 10%	50V
						< CONNECTOR >	
C106	1-110-501-11	CERAMIC CHIP 0.33uF 10%	16V	CN101	1-770-173-11	CONNECTOR, FFC/FPC 16P	
C107	1-163-989-11	CERAMIC CHIP 0.033uF 10%	25V	CN102	1-691-894-21	SOCKET, CONNECTOR 16P	
C108	1-164-492-11	CERAMIC CHIP 0.15uF 10%	16V	* CN103	1-568-852-11	SOCKET, CONNECTOR 8P	
C109	1-164-161-11	CERAMIC CHIP 0.0022uF 10%	100V			< DIODE >	
C110	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V				
				D151	8-719-991-33	DIODE 1SS133T-77	
C111	1-163-989-11	CERAMIC CHIP 0.033uF 10%	25V			< IC >	
C112	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V	IC101	8-759-449-64	IC LA9240M	
C113	1-164-492-11	CERAMIC CHIP 0.15uF 10%	16V	IC102	8-759-449-65	IC LC78622E	
C114	1-164-492-11	CERAMIC CHIP 0.15uF 10%	16V	IC103	8-759-449-66	IC LA6541	
C115	1-164-232-11	CERAMIC CHIP 0.01uF	50V	IC104	8-759-428-57	IC LC89170M	
C116	1-164-232-11	CERAMIC CHIP 0.01uF	50V			< JUMPER RESISTOR >	
C117	1-163-001-11	CERAMIC CHIP 220PF 10%	50V	JW1	1-216-295-91	SHORT 0	
C118	1-107-823-11	CERAMIC CHIP 0.47uF 10%	16V	JW2	1-216-295-91	SHORT 0	
C119	1-164-489-11	CERAMIC CHIP 0.22uF 10%	16V	JW4	1-216-295-91	SHORT 0	
C120	1-124-234-00	ELECT 22uF 20%	16V	JW5	1-216-295-91	SHORT 0	
				JW6	1-216-295-91	SHORT 0	
C121	1-164-182-11	CERAMIC CHIP 0.0033uF 10%	50V	JW7	1-216-295-91	SHORT 0	
C122	1-126-963-11	ELECT 4.7uF 20%	50V	JW8	1-216-295-91	SHORT 0	
C123	1-163-038-91	CERAMIC CHIP 0.1uF	25V	JW9	1-216-295-91	SHORT 0	
C124	1-104-396-11	ELECT 10uF 20%	16V	JW10	1-216-295-91	SHORT 0	
C125	1-126-177-11	ELECT 100uF 20%	10V			< TRANSISTOR >	
C126	1-126-177-11	ELECT 100uF 20%	10V	Q101	8-729-230-45	TRANSISTOR 2SC2458TP-YGR	
C127	1-163-989-11	CERAMIC CHIP 0.033uF 10%	25V	Q102	8-729-119-78	TRANSISTOR 2SC403SP-51	
C128	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V	Q103	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C129	1-110-501-11	CERAMIC CHIP 0.33uF 10%	16V			< RESISTOR >	
C130	1-124-443-00	ELECT 100uF 20%	10V	R101	1-216-097-91	RES,CHIP 100K 5%	1/10W
C131	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V	R102	1-216-093-00	METAL CHIP 68K 5%	1/10W
C132	1-163-038-91	CERAMIC CHIP 0.1uF	25V	R103	1-216-093-00	METAL CHIP 68K 5%	1/10W
C133	1-163-038-91	CERAMIC CHIP 0.1uF	25V	R104	1-216-093-00	METAL CHIP 68K 5%	1/10W
C141	1-163-038-91	CERAMIC CHIP 0.1uF	25V	R105	1-216-093-00	METAL CHIP 68K 5%	1/10W
C142	1-164-505-11	CERAMIC CHIP 2.2uF	16V				
C151	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V				
C152	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V				
C153	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V				
C154	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V				
C155	1-163-093-00	CERAMIC CHIP 10PF 5%	50V				

BD

CD DOOR

CD LED

CD MOTOR

DISC SENSOR (R)

DISC SENSOR (S)

Ref. No.	Part No.	Description	Remarks			
R106	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R107	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R108	1-216-068-00	METAL CHIP	6.2K	5%	1/10W	
R109	1-216-076-00	METAL CHIP	13K	5%	1/10W	
R110	1-216-093-00	METAL CHIP	68K	5%	1/10W	
R111	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R112	1-216-101-00	METAL CHIP	150K	5%	1/10W	
R113	1-216-099-00	METAL CHIP	120K	5%	1/10W	
R114	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	
R115	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R116	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R117	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R118	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R119	1-216-064-00	METAL CHIP	4.3K	5%	1/10W	
R120	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R121	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
R122	1-216-083-00	METAL CHIP	27K	5%	1/10W	
R123	1-216-099-00	METAL CHIP	120K	5%	1/10W	
R124	1-216-093-00	METAL CHIP	68K	5%	1/10W	
R125	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R126	1-216-037-00	METAL CHIP	330	5%	1/10W	
R127	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R128	1-216-077-00	METAL CHIP	15K	5%	1/10W	
R129	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R130	1-216-113-00	METAL CHIP	470K	5%	1/10W	
R131	1-216-113-00	METAL CHIP	470K	5%	1/10W	
R132	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R133	1-216-113-00	METAL CHIP	470K	5%	1/10W	
R134	1-216-113-00	METAL CHIP	470K	5%	1/10W	
R135	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R136	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R137	1-216-009-00	METAL CHIP	22	5%	1/10W	
R138	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R141	1-216-083-00	METAL CHIP	27K	5%	1/10W	
R151	1-216-045-00	METAL CHIP	680	5%	1/10W	
R152	1-216-093-00	METAL CHIP	68K	5%	1/10W	
R153	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	
R154	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R155	1-216-089-91	RES,CHIP	47K	5%	1/10W	
R156	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R157	1-216-077-00	METAL CHIP	15K	5%	1/10W	
R158	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R159	1-216-083-00	METAL CHIP	27K	5%	1/10W	
R160	1-216-037-00	METAL CHIP	330	5%	1/10W	
R161	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R162	1-216-037-00	METAL CHIP	330	5%	1/10W	
R163	1-216-049-91	RES,CHIP	1K	5%	1/10W	
R164	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R165	1-216-025-91	RES,CHIP	100	5%	1/10W	
R166	1-216-025-91	RES,CHIP	100	5%	1/10W	
R171	1-216-025-91	RES,CHIP	100	5%	1/10W	
R172	1-216-025-91	RES,CHIP	100	5%	1/10W	
R173	1-216-025-91	RES,CHIP	100	5%	1/10W	
R174	1-216-025-91	RES,CHIP	100	5%	1/10W	
R181	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R182	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R183	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R184	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R191	1-216-025-91	RES,CHIP	100	5%	1/10W	
R192	1-216-041-00	METAL CHIP	470	5%	1/10W	

Ref. No.	Part No.	Description	Remarks			
R193	1-216-041-00	METAL CHIP	470	5%	1/10W	
R194	1-216-025-91	RES,CHIP	100	5%	1/10W	
R195	1-216-041-00	METAL CHIP	470	5%	1/10W	
R196	1-216-025-91	RES,CHIP	100	5%	1/10W	
R197	1-216-025-91	RES,CHIP	100	5%	1/10W	
< SWITCH >						
S101	1-572-085-11	SWITCH, LEAF (LIMIT SW)				
< VIBRATOR >						
X101	1-577-576-21	VIBRATOR, CRYSTAL 16.93MHZ				

	1-674-314-11	CD DOOR BOARD				

< SWITCH >						
S413	1-762-386-11	SWITCH, PUSH (CD DOOR)				

*	1-669-645-11	CD LED BOARD				

< LED >						
D637	8-719-058-64	LED SEL5823A				
D638	8-719-058-64	LED SEL5823A				
D639	8-719-058-03	LED SEL5423E				
D640	8-719-058-04	LED SEL5223S				
< RESISTOR >						
R653	1-249-402-11	CARBON	56	5%	1/4W	F
R654	1-249-402-11	CARBON	56	5%	1/4W	F

*	1-663-974-11	CD MOTOR BOARD				

< CONNECTOR >						
CN61	1-506-469-11	PIN, CONNECTOR 4P				

*	1-663-972-11	DISC SENSOR (R) BOARD				

*	4-990-669-01	HOLDER (SENSOR)				
	7-685-132-19	SCREW +BTP 2.6 × 5 TYPE2 N-S				
< TRANSISTOR >						
Q51	8-729-926-31	PHOTO TRANSISTOR PT483F1S				

*	1-663-973-11	DISC SENSOR (S) BOARD				

*	4-976-473-01	HOLDER (LED-S)				
< CONNECTOR >						
* CN53	1-568-951-11	PIN, CONNECTOR 2P				
< DIODE >						
D51	8-719-055-84	DIODE GL-528VS1				

DISC SENSOR (S)							DOOR LED						
DOOR SW				FUNC		HP/MIC		LEAF SW					
Ref. No.	Part No.	Description	Remarks				Ref. No.	Part No.	Description	Remarks			
< RESISTOR >							< SWITCH >						
R54	1-249-409-11	CARBON 220 5% 1/4W F	*****				S631	1-762-875-21	SWITCH, KEYBOARD(FUNCTION)				
							S632	1-762-875-21	SWITCH, KEYBOARD(CONTINUE)				
	1-674-316-11	DOOR LED BOARD *****					S633	1-762-875-21	SWITCH, KEYBOARD(SHUFFLE)				
							S634	1-762-875-21	SWITCH, KEYBOARD(PROGRAM)				
							S635	1-762-875-21	SWITCH, KEYBOARD(REPEAT)				
							S636	1-762-875-21	SWITCH, KEYBOARD(CD PLUS ONE)				
							S637	1-762-875-21	SWITCH, KEYBOARD(LOOP)				
D633	8-719-075-49	LED FY3864X-J300K	*****				S638	1-762-875-21	SWITCH, KEYBOARD(FLASH)				
							S639	1-762-875-21	SWITCH, KEYBOARD(GROUP ENTRY)				
*	1-663-975-11	DOOR SW BOARD *****					S640	1-762-875-21	SWITCH, KEYBOARD(1)				
							S641	1-762-875-21	SWITCH, KEYBOARD(2)				
							S642	1-762-875-21	SWITCH, KEYBOARD(3)				
							S643	1-762-875-21	SWITCH, KEYBOARD(4)				
* CN54	1-568-941-11	PIN, CONNECTOR 3P	*****				S644	1-762-875-21	SWITCH, KEYBOARD(5)				
							1-674-315-11	HP/MIC BOARD *****					
S51	1-571-958-11	SWITCH, PUSH (1 KEY)(UP)											
S52	1-571-958-11	SWITCH, PUSH (1 KEY)(DOWN)	*****						< JACK >				
							J781	1-793-096-11	JACK (LARGE TYPE) (PHONES)	*****			
A-4426-605-A		FUNC BOARD, COMPLETE *****					*	A-2007-732-A	LEAF SW BOARD, COMPLETE *****				
CN604	1-506-481-11	PIN, CONNECTOR 2P							< CAPACITOR >				
D619	8-719-074-81	LED MAA3864X-J300(CD PLUS ONE)											
D620	8-719-074-80	LED MVR3864X-J300K(1)											
D621	8-719-074-80	LED MVR3864X-J300K(2)											
D622	8-719-074-80	LED MVR3864X-J300K(3)					CN1001	1-568-860-11	SOCKET, CONNECTOR 17P				
D623	8-719-074-80	LED MVR3864X-J300K(4)											
									< DIODE >				
D624	8-719-074-80	LED MVR3864X-J300K(5)					D1001	8-719-911-19	DIODE 1SS119				
							D1002	8-719-911-19	DIODE 1SS119				
									< IC >				
R639	1-216-027-00	METAL CHIP 120 5% 1/10W					IC1001	8-749-014-38	IC PHOTO INTERRUPTER SG-264				
R640	1-216-029-00	METAL CHIP 150 5% 1/10W					IC1002	8-749-014-38	IC PHOTO INTERRUPTER SG-264				
R641	1-216-029-00	METAL CHIP 150 5% 1/10W											
R642	1-216-029-00	METAL CHIP 150 5% 1/10W											
R643	1-216-029-00	METAL CHIP 150 5% 1/10W											
									< TRANSISTOR >				
R644	1-216-029-00	METAL CHIP 150 5% 1/10W					Q1001	8-729-900-65	TRANSISTOR DTA144ES				
R652	1-216-025-91	RES,CHIP 100 5% 1/10W											
R652	1-216-029-00	METAL CHIP 150 5% 1/10W											
R686	1-216-033-00	METAL CHIP 220 5% 1/10W											
R687	1-216-035-00	METAL CHIP 270 5% 1/10W											
R688	1-216-039-00	METAL CHIP 390 5% 1/10W											
R689	1-216-041-00	METAL CHIP 470 5% 1/10W											
R690	1-216-045-00	METAL CHIP 680 5% 1/10W											
R691	1-216-047-91	RES,CHIP 820 5% 1/10W											
R692	1-216-051-00	METAL CHIP 1.2K 5% 1/10W											
R693	1-216-053-00	METAL CHIP 1.5K 5% 1/10W					R907	1-247-879-11	CARBON 100K 5% 1/4W				
R694	1-216-057-00	METAL CHIP 2.2K 5% 1/10W					R1001	1-249-409-11	CARBON 220 5% 1/4W F				
R695	1-216-061-00	METAL CHIP 3.3K 5% 1/10W					R1002	1-249-409-11	CARBON 220 5% 1/4W F				
R696	1-216-065-91	RES,CHIP 4.7K 5% 1/10W					R1003	1-249-414-11	CARBON 560 5% 1/4W F				
R697	1-216-069-00	METAL CHIP 6.8K 5% 1/10W					R1004	1-247-834-11	CARBON 1.3K 5% 1/4W				
								</					

Ref. No.	Part No.	Description	Remarks			
< VARIABLE RESISTOR >						
RV1001	1-241-785-11	RES, ADJ, CARBON 10K				
RV1002	1-241-785-11	RES, ADJ, CARBON 10K				
< SWITCH >						
S1001	1-570-953-11	SWITCH, PUSH (1 KEY) (A PLAY)				
S1002	1-570-953-11	SWITCH, PUSH (1 KEY) (B PLAY)				
S1003	1-771-333-11	SWITCH, LEAF (A HALF)				
S1004	1-771-205-11	SWITCH, LEAF (A 120/70)				
S1005	1-771-205-11	SWITCH, LEAF (REC A)				
S1006	1-771-333-11	SWITCH, LEAF (B HALF)				
S1008	1-771-205-11	SWITCH, LEAF (B 120/70)				
S1009	1-771-205-11	SWITCH, LEAF (REC B)				

A-4426-562-A	MAIN BOARD, COMPLETE(US)					

A-4426-563-A	MAIN BOARD, COMPLETE(CND)					

A-4426-564-A	MAIN BOARD, COMPLETE(AUS)					

< CAPACITOR >						
C101	1-162-286-21	CERAMIC	220PF	10%	50V	
C102	1-162-286-21	CERAMIC	220PF	10%	50V	
C104	1-126-934-11	ELECT	220uF	20%	16V	
C111	1-137-195-11	FILM	0.56uF	5%	50V	
C112	1-136-158-00	FILM	0.027uF	5%	50V	
C113	1-136-167-00	FILM	0.15uF	5%	50V	
C114	1-130-480-00	MYLAR	0.0056uF	5%	50V	
C115	1-130-489-00	MYLAR	0.033uF	5%	50V	
C116	1-130-473-00	MYLAR	0.0015uF	5%	50V	
C117	1-136-153-00	FILM	0.01uF	5%	50V	
C118	1-162-288-31	CERAMIC	330PF	10%	50V	
C119	1-130-479-00	MYLAR	0.0047uF	5%	50V	
C120	1-136-153-00	FILM	0.01uF	5%	50V	
C121	1-126-964-11	ELECT	10uF	20%	50V	
C122	1-162-291-31	CERAMIC	560PF	10%	50V	
C123	1-136-165-00	FILM	0.1uF	5%	50V	
C124	1-136-165-00	FILM	0.1uF	5%	50V	
C125	1-126-964-11	ELECT	10uF	20%	50V	
C131	1-104-664-11	ELECT	47uF	20%	16V	
C132	1-104-664-11	ELECT	47uF	20%	16V	
C135	1-126-964-11	ELECT	10uF	20%	50V	
C136	1-164-159-21	CERAMIC	0.1uF		50V	
C141	1-126-959-11	ELECT	0.47uF	20%	50V	
C151	1-162-286-21	CERAMIC	220PF	10%	50V	
C152	1-162-286-21	CERAMIC	220PF	10%	50V	
C161	1-137-195-11	FILM	0.56uF	5%	50V	
C162	1-136-158-00	FILM	0.027uF	5%	50V	
C163	1-136-167-00	FILM	0.15uF	5%	50V	
C164	1-130-480-00	MYLAR	0.0056uF	5%	50V	
C165	1-130-489-00	MYLAR	0.033uF	5%	50V	
C166	1-130-473-00	MYLAR	0.0015uF	5%	50V	
C167	1-136-153-00	FILM	0.01uF	5%	50V	
C168	1-162-288-31	CERAMIC	330PF	10%	50V	
C169	1-130-479-00	MYLAR	0.0047uF	5%	50V	
C170	1-136-153-00	FILM	0.01uF	5%	50V	

Ref. No.	Part No.	Description				Remarks
C171	1-126-964-11	ELECT	10uF	20%	50V	
C172	1-162-291-31	CERAMIC	560PF	10%	50V	
C173	1-136-165-00	FILM	0.1uF	5%	50V	
C174	1-136-165-00	FILM	0.1uF	5%	50V	
C175	1-126-964-11	ELECT	10uF	20%	50V	
C176	1-136-495-11	FILM	0.068uF	5%	50V	
C177	1-136-153-00	FILM	0.01uF	5%	50V	
C191	1-126-964-11	ELECT	10uF	20%	50V	
C192	1-162-292-31	CERAMIC	680PF	10%	50V	
C193	1-126-964-11	ELECT	10uF	20%	50V	
C194	1-162-286-21	CERAMIC	220PF	10%	50V	
C195	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C196	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C301	1-126-960-11	ELECT	1uF	20%	50V	
C302	1-130-479-00	MYLAR	0.0047uF	5%	50V	
C303	1-136-165-00	FILM	0.1uF	5%	50V	
C304	1-136-165-00	FILM	0.1uF	5%	50V	
C305	1-126-964-11	ELECT	10uF	20%	50V	
C306	1-126-960-11	ELECT	1uF	20%	50V	
C307	1-126-959-11	ELECT	0.47uF	20%	50V	
C308	1-126-964-11	ELECT	10uF	20%	50V	
C309	1-136-173-00	FILM	0.47uF	5%	50V	
C310	1-162-290-31	CERAMIC	470PF	10%	50V	
C311	1-126-964-11	ELECT	10uF	20%	50V	
C312	1-126-959-11	ELECT	0.47uF	20%	50V	
C313	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C314	1-126-964-11	ELECT	10uF	20%	50V	
C315	1-126-963-11	ELECT	4.7uF	20%	50V	
C316	1-104-665-11	ELECT	100uF	20%	10V	
C317	1-104-665-11	ELECT	100uF	20%	10V	
C320	1-162-290-31	CERAMIC	470PF	10%	50V	
C331	1-164-159-21	CERAMIC	0.1uF		50V	
C332	1-164-159-21	CERAMIC	0.1uF		50V	
C351	1-126-960-11	ELECT	1uF	20%	50V	
C352	1-130-479-00	MYLAR	0.0047uF	5%	50V	
C353	1-136-165-00	FILM	0.1uF	5%	50V	
C354	1-136-165-00	FILM	0.1uF	5%	50V	
C355	1-126-964-11	ELECT	10uF	20%	50V	
C356	1-126-960-11	ELECT	1uF	20%	50V	
C357	1-126-959-11	ELECT	0.47uF	20%	50V	
C358	1-126-964-11	ELECT	10uF	20%	50V	
C359	1-136-173-00	FILM	0.47uF	5%	50V	
C401	1-104-665-11	ELECT	100uF	20%	10V	
C402	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C403	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C405	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C406	1-104-665-11	ELECT	100uF	20%	10V	
C410	1-104-665-11	ELECT	100uF	20%	10V	
C411	1-110-489-11	CAPACITOR	1F		5.5V	
C412	1-164-159-21	CERAMIC	0.1uF		50V	
C413	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C442	1-124-252-00	ELECT	0.33uF	20%	50V	
C443	1-130-477-00	MYLAR	0.0033uF	5%	50V	
C444	1-130-477-00	MYLAR	0.0033uF	5%	50V	
C451	1-126-934-11	ELECT	220uF	20%	10V	
C453	1-164-159-21	CERAMIC	0.1uF		50V	
C455	1-164-159-11	CERAMIC	0.1uF		50V	(US,AUS)
C456	1-164-159-21	CERAMIC	0.1uF		50V	
C457	1-164-159-21	CERAMIC	0.1uF		50V	
C458	1-164-159-21	CERAMIC	0.1uF		50V	

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
C460	1-164-159-21	CERAMIC	0.1uF		50V		C953	1-104-666-11	ELECT	220uF	20%	25V	
C461	1-126-964-11	ELECT	10uF	20%	50V		C955	1-126-940-11	ELECT	330uF	20%	16V	
C462	1-162-294-31	CERAMIC	0.001uF	10%	50V								
C463	1-162-294-31	CERAMIC	0.001uF	10%	50V				< CONNECTOR >				
C492	1-124-252-00	ELECT	0.33uF	20%	50V								
							* CN101	1-564-506-11	PLUG, CONNECTOR 3P				
C493	1-130-477-00	MYLAR	0.0033uF	5%	50V		* CN102	1-568-832-11	SOCKET, CONNECTOR 13P				
C494	1-130-477-00	MYLAR	0.0033uF	5%	50V		CN102	1-784-774-41	CONNECTOR, FFC 13P				
C499	1-161-494-00	CERAMIC	0.022uF		25V		CN106	1-784-776-41	CONNECTOR, FFC 15P				
					(US,AUS)		CN107	1-784-778-41	CONNECTOR, FFC 17P				
C501	1-104-664-11	ELECT	47uF	20%	10V								
C502	1-164-159-21	CERAMIC	0.1uF		50V		* CN108	1-568-954-11	PIN, CONNECTOR 5P				
							* CN110	1-564-506-11	PLUG, CONNECTOR 3P				
C503	1-136-173-00	FILM	0.47uF	5%	50V		* CN301	1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P				
C504	1-126-926-11	ELECT	1000uF	20%	10V		CN401	1-784-738-41	CONNECTOR, FFC 16P				
C505	1-162-306-11	CERAMIC	0.01uF	30%	16V		CN402	1-784-731-41	CONNECTOR, FFC 9P				
C506	1-136-165-00	FILM	0.1uF	5%	50V								
C507	1-164-159-21	CERAMIC	0.1uF		50V		* CN403	1-568-951-11	PIN, CONNECTOR 2P				
							* CN451	1-568-955-11	PIN, CONNECTOR 6P				
C508	1-104-665-11	ELECT	100uF	20%	10V		* CN453	1-568-951-11	PIN, CONNECTOR 2P				
C509	1-164-027-11	CERAMIC	22PF	5%	50V		CN454	1-506-468-11	PIN, CONNECTOR 3P				
C510	1-164-027-11	CERAMIC	22PF	5%	50V		CN461	1-506-469-11	PIN, CONNECTOR 4P				
C512	1-164-159-21	CERAMIC	0.1uF		50V								
C513	1-136-165-00	FILM	0.1uF	5%	50V		CN501	1-784-770-41	CONNECTOR, FFC 9P				
							CN607	1-506-481-11	PIN, CONNECTOR 2P				
C571	1-109-889-11	ELECT	1uF	20%	50V								
C701	1-136-495-11	FILM	0.068uF	5%	50V				< DIODE >				
C702	1-136-495-11	FILM	0.068uF	5%	50V								
C711	1-136-495-11	FILM	0.068uF	5%	50V		D141	8-719-991-33	DIODE 1SS133T-77				
C712	1-136-495-11	FILM	0.068uF	5%	50V		D333	8-719-991-33	DIODE 1SS133T-77				
							D401	8-719-024-99	DIODE 11ES2-NTA2B				
C721	1-128-555-91	ELECT	470uF	20%	63V		D402	8-719-991-33	DIODE 1SS133T-77				
C731	1-126-934-11	ELECT	220uF	20%	10V		D411	8-719-991-33	DIODE 1SS133T-77				
C732	1-104-665-11	ELECT	100uF	20%	10V								
C733	1-126-960-11	ELECT	1uF	20%	50V		D501	8-719-024-99	DIODE 11ES2-NTA2B				
C734	1-104-665-11	ELECT	100uF	20%	10V		D502	8-719-024-99	DIODE 11ES2-NTA2B				
							D503	8-719-991-33	DIODE 1SS133T-77				
C751	1-136-495-11	FILM	0.068uF	5%	50V		D504	8-719-991-33	DIODE 1SS133T-77				
C752	1-136-495-11	FILM	0.068uF	5%	50V		D505	8-719-991-33	DIODE 1SS133T-77				
C756	1-126-963-11	ELECT	4.7uF	20%	50V								
C757	1-164-159-21	CERAMIC	0.1uF		50V		D506	8-719-991-33	DIODE 1SS133T-77				
C761	1-136-495-11	FILM	0.068uF	5%	50V		D637	8-719-058-64	DIODE SEL5823A-TP15				
							D638	8-719-058-64	DIODE SEL5823A-TP15				
C762	1-136-495-11	FILM	0.068uF	5%	50V		D639	8-719-058-03	DIODE SEL5423E-TP15				
C771	1-128-555-91	ELECT	470uF	20%	63V		D640	8-719-058-04	DIODE SEL5223S-TP15				
C901	1-136-165-00	FILM	0.1uF	5%	50V								
C902	1-128-548-11	ELECT	4700uF	20%	25V		D701	8-719-991-33	DIODE 1SS133T-77				
C903	1-104-666-11	ELECT	220uF	20%	25V		D702	8-719-991-33	DIODE 1SS133T-77				
							D703	8-719-024-99	DIODE 11ES2-NTA2B				
C904	1-104-664-11	ELECT	47uF	20%	16V		D704	8-719-024-99	DIODE 11ES2-NTA2B				
C905	1-126-940-11	ELECT	330uF	20%	16V		D705	8-719-024-99	DIODE 11ES2-NTA2B				
C908	1-162-301-11	CERAMIC	0.0015uF	30%	16V								
C909	1-126-964-11	ELECT	10uF	20%	50V		D712	8-719-991-33	DIODE 1SS133T-77				
C910	1-104-665-11	ELECT	100uF	20%	10V		D731	8-719-991-33	DIODE 1SS133T-77				
							D732	8-719-991-33	DIODE 1SS133T-77				
C911	1-126-964-11	ELECT	10uF	20%	50V		D733	8-719-991-33	DIODE 1SS133T-77				
C912	1-126-926-11	ELECT	1000uF	20%	10V		D751	8-719-991-33	DIODE 1SS133T-77				
C913	1-126-943-11	ELECT	2200uF	20%	25V								
C914	1-126-964-11	ELECT	10uF	20%	50V		D901	8-719-024-99	DIODE 11ES2-NTA2B				
C915	1-126-767-11	ELECT	1000uF	20%	16V		D902	8-719-024-99	DIODE 11ES2-NTA2B				
							D903	8-719-024-99	DIODE 11ES2-NTA2B				
C916	1-126-964-11	ELECT	10uF	20%	50V		D904	8-719-024-99	DIODE 11ES2-NTA2B				
C917	1-126-768-11	ELECT	2200uF	20%	16V		D905	8-719-933-36	DIODE HZS6B1LTA				
C918	1-126-968-11	ELECT	100uF	20%	50V								
C919	1-126-968-11	ELECT	100uF	20%	50V		D906	8-719-991-33	DIODE 1SS133T-77				
C921	1-126-947-11	ELECT	47uF	20%	35V		D907	8-719-024-99	DIODE 11ES2-NTA2B				
							D908	8-719-024-99	DIODE 11ES2-NTA2B				
C922	1-164-159-21	CERAMIC	0.1uF		50V		D909	8-719-024-99	DIODE 11ES2-NTA2B				
C923	1-164-159-21	CERAMIC	0.1uF		50V		D910	8-719-024-99	DIODE 11ES2-NTA2B				
C924	1-126-934-11	ELECT	220uF	20%	10V								
C951	1-136-165-00	FILM	0.1uF	5%	50V								
C952	1-126-943-11	ELECT	2200uF	20%	25V								

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D911	8-719-934-25	DIODE HZS33-1LTA		Q163	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
D912	8-719-921-44	DIODE MTZJ-T-72-5.1C		Q191	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
D913	8-719-991-33	DIODE 1SS133T-77		Q331	8-729-116-59	TRANSISTOR 2SB1068TP	
D914	8-719-024-99	DIODE 11ES2-NTA2B		Q332	8-729-029-66	TRANSISTOR DTC114ESA-TP	
D917	8-719-991-33	DIODE 1SS133T-77		Q333	8-729-116-59	TRANSISTOR 2SB1068TP	
< TERMINAL >				Q334	8-729-029-66	TRANSISTOR DTC114ESA-TP	
EP401	1-537-771-21	TERMINAL BOARD, GROUND		Q335	8-729-029-66	TRANSISTOR DTC114ESA-TP	
EP901	1-537-771-21	TERMINAL BOARD, GROUND (US,AUS)		Q336	8-729-116-59	TRANSISTOR 2SB1068TP	
< FERRITE BEAD >				Q337	8-729-045-21	TRANSISTOR 2SD1513TP-LK	
FB401	1-412-473-41	INDUCTOR 0UH		Q338	8-729-900-63	TRANSISTOR BN1F4M-TP	
FB402	1-412-473-41	INDUCTOR 0UH		Q339	8-729-029-66	TRANSISTOR DTC114ESA-TP	
FB403	1-412-473-41	INDUCTOR 0UH		Q340	8-729-116-59	TRANSISTOR 2SB1068TP	
FB404	1-412-473-41	INDUCTOR 0UH		Q341	8-729-045-21	TRANSISTOR 2SD1513TP-LK	
FB405	1-412-473-41	INDUCTOR 0UH		Q342	8-729-900-63	TRANSISTOR BN1F4M-TP	
FB406	1-412-473-41	INDUCTOR 0UH		Q343	8-729-029-66	TRANSISTOR DTC114ESA-TP	
FB407	1-412-473-41	INDUCTOR 0UH		Q411	8-729-900-36	TRANSISTOR BA1F4M-TP	
FB408	1-412-473-41	INDUCTOR 0UH		Q501	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
FB409	1-412-473-41	INDUCTOR 0UH		Q505	8-729-900-63	TRANSISTOR BN1F4M-TP(US,AUS)	
< IC >				Q571	8-729-900-63	TRANSISTOR BN1F4M-TP	
IC101	8-759-495-24	IC M62442FP-TP		Q572	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
IC191	8-759-634-51	IC M5218AP		Q575	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
IC301	8-759-495-26	IC HA12215F		Q701	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
IC401	8-752-896-35	IC CXP84632-031Q		Q702	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
IC402	8-749-923-04	IC TOTX178A(CD DIGITAL)		Q703	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
IC411	8-759-463-99	IC M5M5256DFP-70XL(CD DIGITAL)		Q704	8-729-111-29	TRANSISTOR 2SD1616-TP-LK	
IC441	8-759-634-51	IC M5218AP		Q711	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
IC461	8-759-356-03	IC BA6780		Q712	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
IC501	8-759-574-49	IC uPD780016AYGF-024-3BA		Q713	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
IC502	8-759-635-63	IC M51943BSL-TP		Q731	8-729-900-63	TRANSISTOR BN1F4M-TP	
IC701	8-759-111-68	IC uPC1237HA		Q732	8-729-900-63	TRANSISTOR BN1F4M-TP	
IC901	8-759-604-86	IC M5F7807L		Q733	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
IC902	8-759-231-53	IC M5F7805L		Q901	8-729-209-15	TRANSISTOR 2SD2012	
IC903	8-759-391-87	IC BA78M12P		Q902	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
IC904	8-759-604-38	IC M5F78M10L		Q903	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
< JACK >				Q905	8-729-040-20	TRANSISTOR RT1P137L-TP	
J101	1-573-028-31	JACK, PIN 4P(VIDEO/MD AUDIO)		Q906	8-729-422-57	TRANSISTOR BN1A4M-TP	
J191	1-770-377-31	JACK, PIN 1P(SUPER WOOFER)		Q907	8-729-040-20	TRANSISTOR RT1P137L-TP	
< COIL >				Q908	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
L101	1-410-521-11	INDUCTOR 100uH		Q910	8-729-030-19	TRANSISTOR 2SB1640(TP)	
L401	1-410-509-11	INDUCTOR 10uH		Q911	8-729-141-83	TRANSISTOR 2SB1375	
L402	1-410-509-11	INDUCTOR 10uH		Q912	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
L457	1-410-509-11	INDUCTOR 10uH		Q913	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
L501	1-410-509-11	INDUCTOR 10uH		Q914	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
L701	1-420-872-00	COIL, AIR-CORE		Q915	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
L711	1-420-872-00	COIL, AIR-CORE		Q916	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
L751	1-420-872-00	COIL, AIR-CORE		Q951	8-729-141-83	TRANSISTOR 2SB1375	
L761	1-420-872-00	COIL, AIR-CORE		Q952	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
< TRANSISTOR >				< RESISTOR >			
Q111	8-729-620-05	TRANSISTOR 2SC2603TP-EF		R101	1-249-417-11	CARBON 1K 5%	1/4W F
Q112	8-729-620-05	TRANSISTOR 2SC2603TP-EF		R102	1-249-417-11	CARBON 1K 5%	1/4W F
Q113	8-729-141-30	TRANSISTOR 2SC3623ATP-LK		R111	1-247-826-00	CARBON 620 5%	1/4W
Q161	8-729-620-05	TRANSISTOR 2SC2603TP-EF		R112	1-247-903-00	CARBON 1M 5%	1/4W
Q162	8-729-620-05	TRANSISTOR 2SC2603TP-EF		R113	1-247-903-00	CARBON 1M 5%	1/4W
				R114	1-249-419-11	CARBON 1.5K 5%	1/4W F
				R115	1-247-863-91	CARBON 22K 5%	1/4W
				R116	1-247-887-00	CARBON 220K 5%	1/4W
				R117	1-249-429-11	CARBON 10K 5%	1/4W
				R118	1-249-437-11	CARBON 47K 5%	1/4W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R119	1-249-421-11	CARBON	2.2K	5%	1/4W F	R326	1-249-437-11	CARBON	47K	5%	1/4W
R120	1-249-441-11	CARBON	100K	5%	1/4W	R327	1-249-437-11	CARBON	47K	5%	1/4W
R121	1-249-429-11	CARBON	10K	5%	1/4W	R328	1-247-876-11	CARBON	75K	5%	1/4W
R123	1-249-437-11	CARBON	47K	5%	1/4W	R329	1-249-417-11	CARBON	1K	5%	1/4W F
R124	1-249-421-11	CARBON	2.2K	5%	1/4W F	R330	1-249-425-11	CARBON	4.7K	5%	1/4W F
R125	1-249-429-11	CARBON	10K	5%	1/4W	R331	1-249-425-11	CARBON	4.7K	5%	1/4W F
R128	1-249-421-11	CARBON	2.2K	5%	1/4W F	R332	1-249-415-11	CARBON	680	5%	1/4W F
R131	1-247-807-31	CARBON	100	5%	1/4W	R333	1-249-421-11	CARBON	2.2K	5%	1/4W F
R132	1-247-807-31	CARBON	100	5%	1/4W	R334	1-249-415-11	CARBON	680	5%	1/4W F
R133	1-247-807-31	CARBON	100	5%	1/4W	R335	1-249-421-11	CARBON	2.2K	5%	1/4W F
R141	1-247-863-91	CARBON	22K	5%	1/4W	R336	1-249-437-11	CARBON	47K	5%	1/4W
R142	1-247-863-91	CARBON	22K	5%	1/4W	R337	1-249-411-11	CARBON	330	5%	1/4W
R143	1-249-417-11	CARBON	1K	5%	1/4W F	R338	1-249-411-11	CARBON	330	5%	1/4W
R144	1-249-441-11	CARBON	100K	5%	1/4W	R339	1-249-437-11	CARBON	47K	5%	1/4W
R145	1-247-903-00	CARBON	1M	5%	1/4W	R340	1-249-437-11	CARBON	47K	5%	1/4W
R151	1-249-417-11	CARBON	1K	5%	1/4W F	R341	1-249-411-11	CARBON	330	5%	1/4W
R152	1-249-417-11	CARBON	1K	5%	1/4W F	R342	1-249-437-11	CARBON	47K	5%	1/4W
R161	1-247-826-00	CARBON	620	5%	1/4W	R343	1-249-417-11	CARBON	1K	5%	1/4W F
R162	1-247-903-00	CARBON	1M	5%	1/4W	R351	1-249-435-11	CARBON	33K	5%	1/4W
R163	1-247-903-00	CARBON	1M	5%	1/4W	R352	1-249-421-11	CARBON	2.2K	5%	1/4W F
R164	1-249-419-11	CARBON	1.5K	5%	1/4W F	R353	1-247-807-31	CARBON	100	5%	1/4W
R165	1-247-863-91	CARBON	22K	5%	1/4W	R354	1-247-807-31	CARBON	100	5%	1/4W
R166	1-247-887-00	CARBON	220K	5%	1/4W	R355	1-249-421-11	CARBON	2.2K	5%	1/4W F
R167	1-249-429-11	CARBON	10K	5%	1/4W	R356	1-249-428-11	CARBON	8.2K	5%	1/4W F
R168	1-249-437-11	CARBON	47K	5%	1/4W	R357	1-249-425-11	CARBON	4.7K	5%	1/4W F
R169	1-249-421-11	CARBON	2.2K	5%	1/4W F	R358	1-249-425-11	CARBON	4.7K	5%	1/4W F
R170	1-249-441-11	CARBON	100K	5%	1/4W	R359	1-249-435-11	CARBON	33K	5%	1/4W
R171	1-249-429-11	CARBON	10K	5%	1/4W	R401	1-249-437-11	CARBON	47K	5%	1/4W
R173	1-249-437-11	CARBON	47K	5%	1/4W	R405	1-249-429-11	CARBON	10K	5%	1/4W
R178	1-249-421-11	CARBON	2.2K	5%	1/4W F	R411	1-249-437-11	CARBON	47K	5%	1/4W
R191	1-249-437-11	CARBON	47K	5%	1/4W	R412	1-249-437-11	CARBON	47K	5%	1/4W
R192	1-249-437-11	CARBON	47K	5%	1/4W	R414	1-249-429-11	CARBON	10K	5%	1/4W
R193	1-249-437-11	CARBON	47K	5%	1/4W	R415	1-249-435-11	CARBON	33K	5%	1/4W
R194	1-247-843-11	CARBON	3.3K	5%	1/4W	R416	1-249-437-11	CARBON	47K	5%	1/4W
R195	1-249-429-11	CARBON	10K	5%	1/4W	R417	1-249-437-11	CARBON	47K	5%	1/4W
R196	1-249-417-11	CARBON	1K	5%	1/4W F	R418	1-249-437-11	CARBON	47K	5%	1/4W
R197	1-249-441-11	CARBON	100K	5%	1/4W	R419	1-249-425-11	CARBON	4.7K	5%	1/4W F
R198	1-249-417-11	CARBON	1K	5%	1/4W F	R433	1-249-437-11	CARBON	47K	5%	1/4W
R199	1-249-429-11	CARBON	10K	5%	1/4W	R434	1-249-437-11	CARBON	47K	5%	1/4W
R301	1-249-435-11	CARBON	33K	5%	1/4W	R441	1-249-419-11	CARBON	1.5K	5%	1/4W F
R302	1-249-421-11	CARBON	2.2K	5%	1/4W F	R442	1-249-435-11	CARBON	33K	5%	1/4W
R303	1-247-807-31	CARBON	100	5%	1/4W	R443	1-249-429-11	CARBON	10K	5%	1/4W
R304	1-247-807-31	CARBON	100	5%	1/4W	R444	1-249-429-11	CARBON	10K	5%	1/4W
R305	1-249-421-11	CARBON	2.2K	5%	1/4W F	R446	1-249-420-11	CARBON	1.8K	5%	1/4W F
R306	1-249-428-11	CARBON	8.2K	5%	1/4W F	R451	1-247-807-31	CARBON	100	5%	1/4W
R307	1-249-425-11	CARBON	4.7K	5%	1/4W F	R461	1-249-382-11	CARBON	1.2	5%	1/6W F
R308	1-249-425-11	CARBON	4.7K	5%	1/4W F	R462	1-249-382-11	CARBON	1.2	5%	1/6W F
R309	1-247-863-91	CARBON	22K	5%	1/4W	R463	1-249-429-11	CARBON	10K	5%	1/4W
R311	1-247-903-00	CARBON	1M	5%	1/4W	R464	1-247-850-11	CARBON	6.2K	5%	1/4W
R312	1-247-883-00	CARBON	150K	5%	1/4W	R465	1-249-429-11	CARBON	10K	5%	1/4W
R313	1-249-441-11	CARBON	100K	5%	1/4W	R466	1-249-428-11	CARBON	8.2K	5%	1/4W F
R315	1-249-429-11	CARBON	10K	5%	1/4W	R491	1-249-419-11	CARBON	1.5K	5%	1/4W F
R316	1-249-432-11	CARBON	18K	5%	1/4W	R492	1-249-435-11	CARBON	33K	5%	1/4W
R317	1-249-429-11	CARBON	10K	5%	1/4W	R493	1-249-429-11	CARBON	10K	5%	1/4W
R318	1-249-429-11	CARBON	10K	5%	1/4W	R494	1-249-429-11	CARBON	10K	5%	1/4W
R319	1-247-893-11	CARBON	390K	5%	1/4W	R496	1-249-420-11	CARBON	1.8K	5%	1/4W F
R321	1-249-422-11	CARBON	2.7K	5%	1/4W F	R501	1-249-413-11	CARBON	470	5%	1/4W F
R322	1-249-428-11	CARBON	8.2K	5%	1/4W F	R502	1-249-425-11	CARBON	4.7K	5%	1/4W F
R324	1-247-876-11	CARBON	75K	5%	1/4W	R503	1-249-437-11	CARBON	47K	5%	1/4W
R325	1-249-437-11	CARBON	47K	5%	1/4W	R504	1-249-437-11	CARBON	47K	5%	1/4W

MAIN

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R505	1-249-429-11	CARBON	10K	5%	1/4W	△ R709	1-216-457-00	METAL OXIDE	1.2K	5%	2W F
R507	1-247-897-11	CARBON	560K	5%	1/4W						(CND)
R508	1-249-425-11	CARBON	4.7K	5%	1/4W F	△ R709	1-215-893-11	METAL OXIDE	1.5K	5%	2W F
R511	1-249-425-11	CARBON	4.7K	5%	1/4W F						(US)
					(AUS)	△ R709	1-215-892-11	METAL OXIDE	1K	5%	2W F
R512	1-249-427-11	CARBON	6.8K	5%	1/4W F						(AUS)
					(AUS)	R711	1-247-791-91	CARBON	22	5%	1/4W
						R712	1-247-791-91	CARBON	22	5%	1/4W
R524	1-249-429-11	CARBON	10K	5%	1/4W						
R526	1-249-429-11	CARBON	10K	5%	1/4W	R713	1-247-791-91	CARBON	22	5%	1/4W
R527	1-247-807-31	CARBON	100	5%	1/4W	R714	1-247-791-91	CARBON	22	5%	1/4W
R528	1-247-807-31	CARBON	100	5%	1/4W	R716	1-249-437-11	CARBON	47K	5%	1/4W
R529	1-247-807-31	CARBON	100	5%	1/4W	R717	1-249-429-11	CARBON	10K	5%	1/4W
						R718	1-249-429-11	CARBON	10K	5%	1/4W
R530	1-247-807-31	CARBON	100	5%	1/4W						
R531	1-247-807-31	CARBON	100	5%	1/4W	△ R719	1-215-893-11	METAL OXIDE	1.5K	5%	2W F
R532	1-247-807-31	CARBON	100	5%	1/4W						(US,AUS)
R537	1-249-421-11	CARBON	2.2K	5%	1/4W F	△ R719	1-216-457-00	METAL OXIDE	1.2K	5%	2W F
					(US,AUS)						(CND)
R538	1-249-441-11	CARBON	100K	5%	1/4W	R720	1-249-437-11	CARBON	47K	5%	1/4W
					(US,AUS)	R721	1-247-815-91	CARBON	220	5%	1/4W
						R722	1-247-815-91	CARBON	220	5%	1/4W
R539	1-247-807-31	CARBON	100	5%	1/4W						
R540	1-247-807-31	CARBON	100	5%	1/4W	R723	1-247-815-91	CARBON	220	5%	1/4W
R541	1-247-807-31	CARBON	100	5%	1/4W	R724	1-247-815-91	CARBON	220	5%	1/4W
R542	1-247-807-31	CARBON	100	5%	1/4W	R726	1-247-807-31	CARBON	100	5%	1/4W
R543	1-247-807-31	CARBON	100	5%	1/4W	R727	1-247-807-31	CARBON	100	5%	1/4W
						R728	1-247-807-31	CARBON	100	5%	1/4W
R544	1-249-429-11	CARBON	10K	5%	1/4W						
R545	1-247-807-31	CARBON	100	5%	1/4W	R729	1-247-807-31	CARBON	100	5%	1/4W
R546	1-247-843-11	CARBON	3.3K	5%	1/4W	R730	1-247-863-91	CARBON	22K	5%	1/4W
R547	1-247-807-31	CARBON	100	5%	1/4W	R731	1-249-438-11	CARBON	56K	5%	1/4W
R560	1-249-429-11	CARBON	10K	5%	1/4W	R732	1-249-437-11	CARBON	47K	5%	1/4W
						R734	1-249-429-11	CARBON	10K	5%	1/4W
R561	1-247-807-31	CARBON	100	5%	1/4W						
R562	1-247-807-31	CARBON	100	5%	1/4W	R735	1-249-425-11	CARBON	4.7K	5%	1/4W F
R563	1-247-807-31	CARBON	100	5%	1/4W	R736	1-249-425-11	CARBON	4.7K	5%	1/4W F
R564	1-247-807-31	CARBON	100	5%	1/4W	R737	1-247-791-91	CARBON	22	5%	1/4W
R565	1-247-807-31	CARBON	100	5%	1/4W	R738	1-249-435-11	CARBON	33K	5%	1/4W
						R739	1-249-429-11	CARBON	10K	5%	1/4W
R566	1-247-807-31	CARBON	100	5%	1/4W						
R567	1-247-807-31	CARBON	100	5%	1/4W	R740	1-249-429-11	CARBON	10K	5%	1/4W
R571	1-249-421-11	CARBON	2.2K	5%	1/4W F	R741	1-249-429-11	CARBON	10K	5%	1/4W
R572	1-249-441-11	CARBON	100K	5%	1/4W	R742	1-249-429-11	CARBON	10K	5%	1/4W
R575	1-249-429-11	CARBON	10K	5%	1/4W	R751	1-247-791-91	CARBON	22	5%	1/4W
					(CND)	R752	1-247-791-91	CARBON	22	5%	1/4W
R576	1-249-429-11	CARBON	10K	5%	1/4W	R753	1-247-791-91	CARBON	22	5%	1/4W
R577	1-249-433-11	CARBON	22K	5%	1/4W	R755	1-249-437-11	CARBON	47K	5%	1/4W
R580	1-249-437-11	CARBON	47K	5%	1/4W	R756	1-249-425-11	CARBON	4.7K	5%	1/4W F
R581	1-249-417-11	CARBON	1K	5%	1/4W F	R757	1-249-441-11	CARBON	100K	5%	1/4W
R653	1-249-402-11	CARBON	56	5%	1/4W F	R758	1-249-421-11	CARBON	2.2K	5%	1/4W F
R654	1-249-402-11	CARBON	56	5%	1/4W F	R761	1-247-791-91	CARBON	22	5%	1/4W
R700	1-247-863-91	CARBON	22K	5%	1/4W	R762	1-247-791-91	CARBON	22	5%	1/4W
R701	1-247-791-91	CARBON	22	5%	1/4W	R763	1-247-791-91	CARBON	22	5%	1/4W
R702	1-247-791-91	CARBON	22	5%	1/4W	R764	1-247-791-91	CARBON	22	5%	1/4W
R703	1-247-791-91	CARBON	22	5%	1/4W	R771	1-247-815-91	CARBON	220	5%	1/4W
R704	1-247-791-91	CARBON	22	5%	1/4W	R772	1-247-815-91	CARBON	220	5%	1/4W
R705	1-249-437-11	CARBON	47K	5%	1/4W	R773	1-247-815-91	CARBON	220	5%	1/4W
R706	1-249-437-11	CARBON	47K	5%	1/4W	R774	1-247-815-91	CARBON	220	5%	1/4W
R707	1-249-429-11	CARBON	10K	5%	1/4W	R776	1-247-807-31	CARBON	100	5%	1/4W
R708	1-249-429-11	CARBON	10K	5%	1/4W	R777	1-247-807-31	CARBON	100	5%	1/4W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
R778	1-247-807-31	CARBON	100	5%	1/4W		C616	1-165-319-11	CERAMIC CHIP	0.1uF			50V
R779	1-247-807-31	CARBON	100	5%	1/4W		C617	1-126-160-11	ELECT	1uF	20%		50V
R901	1-247-843-11	CARBON	3.3K	5%	1/4W		C621	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R902	1-249-415-11	CARBON	680	5%	1/4W F		C622	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R903	1-249-419-11	CARBON	1.5K	5%	1/4W F		C623	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R904	1-249-414-11	CARBON	560	5%	1/4W F		C624	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R905	1-249-425-11	CARBON	4.7K	5%	1/4W F		C625	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R906	1-247-843-11	CARBON	3.3K	5%	1/4W		C626	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R907	1-249-415-11	CARBON	680	5%	1/4W F		C627	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R908	1-249-429-11	CARBON	10K	5%	1/4W		C628	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R909	1-249-430-11	CARBON	12K	5%	1/4W		C629	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R910	1-249-429-11	CARBON	10K	5%	1/4W		C630	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R912	1-249-425-11	CARBON	4.7K	5%	1/4W F		C631	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R913	1-249-429-11	CARBON	10K	5%	1/4W		C632	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R914	1-247-815-91	CARBON	220	5%	1/4W		C633	1-163-001-11	CERAMIC CHIP	220PF	10%		50V
R915	1-247-815-91	CARBON	220	5%	1/4W		C641	1-164-182-11	CERAMIC CHIP	0.0033uF	10%		50V
R916	1-249-437-11	CARBON	47K	5%	1/4W		C642	1-126-157-11	ELECT	10uF	20%		16V
R917	1-249-437-11	CARBON	47K	5%	1/4W		C643	1-126-157-11	ELECT	10uF	20%		16V
R918	1-249-437-11	CARBON	47K	5%	1/4W		C644	1-124-584-00	ELECT	100uF	20%		10V
R919	1-249-425-11	CARBON	4.7K	5%	1/4W F		C645	1-165-319-11	CERAMIC CHIP	0.1uF			50V
R920	1-247-863-91	CARBON	22K	5%	1/4W		C651	1-163-031-11	CERAMIC CHIP	0.01uF			50V
R921	1-247-863-91	CARBON	22K	5%	1/4W		C652	1-163-031-11	CERAMIC CHIP	0.01uF			50V
R923	1-249-383-11	CARBON	1.5	5%	1/6W F		C918	1-165-319-11	CERAMIC CHIP	0.1uF			50V
R924	1-249-383-11	CARBON	1.5	5%	1/6W F								
		< VARIABLE RESISTOR >											
RV301	1-238-600-11	RES, ADJ, CARBON 10K					* CN601	1-568-852-11	SOCKET, CONNECTOR 9P				
RV351	1-238-600-11	RES, ADJ, CARBON 10K					CN601	1-784-731-11	CONNECTOR, FFC 9P				
							CN604	1-506-481-11	PIN, CONNECTOR 2P				
		< RELAY >											
RY701	1-515-920-11	RELAY (24V)											
RY711	1-515-920-11	RELAY (24V)											
		< TERMINAL >											
TM701	1-694-055-31	TERMINAL BOARD (SP)											
TM702	1-537-952-11	TERMINAL BOARD,PUSH(ANTENNA)2P											
		< VIBRATOR >											
X401	1-579-175-11	VIBRATOR, CERAMIC(10MHz)					D601	8-719-210-33	DIODE EC10DS2TE12L				
X501	1-760-489-11	VIBRATOR, CERAMIC(5MHz)					D602	8-719-058-24	DIODE RB501V-40TE-17				
X502	1-567-098-41	VIBRATOR, CRYSTAL(32.768MHz)					D611	8-719-074-81	DIODE MAA3864X-J300K (▶▶▶▶▶)				
*****							D612	8-719-074-81	DIODE MAA3864X-J300K (◀◀◀◀◀)				
	A-4426-571-A	PANEL BOARD, COMPLETE					D613	8-719-074-81	DIODE MAA3864X-J300K (DBFB)				

	4-222-479-01	HOLDER, FL TUBE					D614	8-719-074-81	DIODE MAA3864X-J300K (SUR)				
	4-222-480-01	SHEET(FL FILTER)					D615	8-719-074-82	DIODE MAY3864X-J300K (CD ◀)				
*	4-949-935-91	CUSHION (FL)					D616	8-719-074-80	DIODE MVR3864X-J300K (ENTER)				
		< CAPACITOR >					D625	8-719-074-83	DIODE MPG3864X-J300K (TAPE A ◀)				
							D626	8-719-074-83	DIODE MPG3864X-J300K (TAPE A ▶)				
C606	1-126-163-11	ELECT	4.7uF	20%	50V		D628	8-719-074-81	DIODE MAA3864X-J300K (SELECTOR)				
C607	1-165-319-11	CERAMIC CHIP	0.1uF		50V		D630	8-719-074-83	DIODE MPG3864X-J300K (TAPE B ◀)				
C608	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V		D631	8-719-074-83	DIODE MPG3864X-J300K (TAPE B ▶)				
C609	1-124-584-00	ELECT	100uF	20%	10V		D632	8-719-074-83	DIODE MPG3864X-J300K (CD ◻)				
C610	1-165-319-11	CERAMIC CHIP	0.1uF		50V								
		< FERRITE BEAD >											
C611	1-163-031-11	CERAMIC CHIP	0.01uF		50V		FB601	1-500-242-22	FERRITE 0UH				
C612	1-163-031-11	CERAMIC CHIP	0.01uF		50V		FB602	1-500-242-22	FERRITE 0UH				
C613	1-163-031-11	CERAMIC CHIP	0.01uF		50V		FB603	1-500-242-22	FERRITE 0UH				
C614	1-163-031-11	CERAMIC CHIP	0.01uF		50V								
C615	1-126-160-11	ELECT	1uF	20%	50V								
		< IC >											
							IC601	8-759-573-63	IC TMP87CM74AF-6763				
							IC602	8-759-332-18	IC GP1U27XB				
							IC603	8-759-495-25	IC BA3833F-E2				
		< COIL >											
							L601	1-408-777-00	INDUCTOR CHIP 10uH				
							L602	1-408-777-00	INDUCTOR CHIP 10uH				

PANEL

Ref. No.	Part No.	Description			Remarks
< TRANSISTOR >					
Q601	8-729-620-05	TRANSISTOR	2SC2603TP-EF		
Q602	8-729-119-76	TRANSISTOR	2SA1115TP-EF		
Q603	8-729-119-76	TRANSISTOR	2SA1115TP-EF		
Q604	8-729-900-36	TRANSISTOR	BA1F4M-TP		
Q608	8-729-900-36	TRANSISTOR	BA1F4M-TP		
Q609	8-729-900-36	TRANSISTOR	BA1F4M-TP		
Q610	8-729-900-36	TRANSISTOR	BA1F4M-TP		
Q611	8-729-119-76	TRANSISTOR	2SA1115TP-EF		
Q612	8-729-119-76	TRANSISTOR	2SA1115TP-EF		
Q621	8-729-620-05	TRANSISTOR	2SC2603TP-EF		
< RESISTOR >					
R601	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R602	1-216-081-00	METAL CHIP	22K	5%	1/10W
R603	1-216-121-91	RES,CHIP	1M	5%	1/10W
R604	1-216-085-00	METAL CHIP	33K	5%	1/10W
R605	1-216-085-00	METAL CHIP	33K	5%	1/10W
R606	1-216-085-00	METAL CHIP	33K	5%	1/10W
R607	1-216-073-00	METAL CHIP	10K	5%	1/10W
R608	1-216-073-00	METAL CHIP	10K	5%	1/10W
R609	1-216-073-00	METAL CHIP	10K	5%	1/10W
R610	1-216-073-00	METAL CHIP	10K	5%	1/10W
R611	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R612	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R613	1-216-025-91	RES,CHIP	100	5%	1/10W
R614	1-216-017-91	RES,CHIP	47	5%	1/10W
R615	1-216-009-91	RES,CHIP	22	5%	1/10W
R616	1-216-009-91	RES,CHIP	22	5%	1/10W
R617	1-216-081-00	METAL CHIP	22K	5%	1/10W
R618	1-216-107-00	METAL CHIP	270K	5%	1/10W
R619	1-216-097-91	RES,CHIP	100K	5%	1/10W
R620	1-216-089-91	RES,CHIP	47K	5%	1/10W
R621	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R622	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R623	1-216-073-00	METAL CHIP	10K	5%	1/10W
R624	1-216-097-91	RES,CHIP	100K	5%	1/10W
R625	1-216-089-91	RES,CHIP	47K	5%	1/10W
R626	1-216-033-00	METAL CHIP	220	5%	1/10W
R627	1-216-089-91	RES,CHIP	47K	5%	1/10W
R628	1-216-033-00	METAL CHIP	220	5%	1/10W
R629	1-216-099-00	METAL CHIP	120K	5%	1/10W
R633	1-216-027-00	METAL CHIP	120	5%	1/10W
R634	1-216-027-00	METAL CHIP	120	5%	1/10W
R635	1-216-027-00	METAL CHIP	120	5%	1/10W
R636	1-216-027-00	METAL CHIP	120	5%	1/10W
R637	1-216-027-00	METAL CHIP	120	5%	1/10W
R638	1-216-029-00	METAL CHIP	150	5%	1/10W
R645	1-216-033-00	METAL CHIP	220	5%	1/10W
R646	1-216-033-00	METAL CHIP	220	5%	1/10W
R648	1-216-033-00	METAL CHIP	220	5%	1/10W
R649	1-216-033-00	METAL CHIP	220	5%	1/10W
R650	1-216-033-00	METAL CHIP	220	5%	1/10W
R651	1-216-033-00	METAL CHIP	220	5%	1/10W
R655	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R661	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R662	1-216-033-00	METAL CHIP	220	5%	1/10W
R663	1-216-035-00	METAL CHIP	270	5%	1/10W

Ref. No.	Part No.	Description	Remarks			
R664	1-216-039-00	METAL CHIP	390	5%	1/10W	
R665	1-216-041-00	METAL CHIP	470	5%	1/10W	
R666	1-216-045-00	METAL CHIP	680	5%	1/10W	
R667	1-216-047-91	RES,CHIP	820	5%	1/10W	
R668	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	
R669	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R670	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	
R671	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R672	1-216-065-91	RES,CHIP	4.7K	5%	1/10W	
R673	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R674	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R675	1-216-079-00	METAL CHIP	18K	5%	1/10W	
R676	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	
R677	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R678	1-216-033-00	METAL CHIP	220	5%	1/10W	
R679	1-216-035-00	METAL CHIP	270	5%	1/10W	
R680	1-216-039-00	METAL CHIP	390	5%	1/10W	
R681	1-216-041-00	METAL CHIP	470	5%	1/10W	
R682	1-216-045-00	METAL CHIP	680	5%	1/10W	
R683	1-216-047-91	RES,CHIP	820	5%	1/10W	
R684	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	
R685	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
< SWITCH >						
S601	1-762-875-21	SWITCH, KEYBOARD (TAPE A ►)				
S602	1-762-875-21	SWITCH, KEYBOARD (TAPE A ◀)				
S603	1-762-875-21	SWITCH, KEYBOARD (TUNER/BAND)				
S604	1-762-875-21	SWITCH, KEYBOARD (DISPLAY/MEMO)				
S605	1-762-875-21	SWITCH, KEYBOARD (CLOCK/TIMER SET)				
S606	1-762-875-21	SWITCH, KEYBOARD (DISPLAY/MEMORY)				
S607	1-762-875-21	SWITCH, KEYBOARD (SEARCH)				
S608	1-762-875-21	SWITCH, KEYBOARD (SCAN)				
S609	1-762-875-21	SWITCH, KEYBOARD (INPUT)				
S610	1-762-875-21	SWITCH, KEYBOARD (CHECK)				
S611	1-762-875-21	SWITCH, KEYBOARD (CLEAR)				
S612	1-762-875-21	SWITCH, KEYBOARD (DELETE)				
S613	1-762-875-21	SWITCH, KEYBOARD (◀◀I◀◀)				
S614	1-762-875-21	SWITCH, KEYBOARD (FILE SELECT)				
S615	1-762-875-21	SWITCH, KEYBOARD (ENTER)				
S616	1-762-875-21	SWITCH, KEYBOARD (▶▶I▶▶)				
S617	1-762-875-21	SWITCH, KEYBOARD (TAPE B ◀)				
S618	1-762-875-21	SWITCH, KEYBOARD (TAPE B ►)				
S619	1-762-875-21	SWITCH, KEYBOARD (CD/PLAY)				
S620	1-762-875-21	SWITCH, KEYBOARD (GROOVE)				
S621	1-762-875-21	SWITCH, KEYBOARD (DBFB)				
S622	1-762-875-21	SWITCH, KEYBOARD (SUR)				
S623	1-762-875-21	SWITCH, KEYBOARD (STOP)				
S651	1-473-392-31	ENCODER, ROTARY (VOLUME)				
S652	1-473-534-11	ENCODER, ROTARY (SELECTOR)				

< VIBRATOR >

X601	1-579-952-21	VIBRATOR, CERAMIC (8MHz)	*****			
------	--------------	--------------------------	-------	--	--	--

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
A-4426-574-A		POWER AMP BOARD, COMPLETE (US)				< IC >	
A-4426-575-A		POWER AMP BOARD, COMPLETE (CND)		IC801	8-749-922-65	IC STK4221MK2 (US)	
A-4426-576-A		POWER AMP BOARD, COMPLETE (AUS)		IC801	8-749-921-04	IC STK4211MK2 (CND)	
				IC801	8-749-921-68	IC STK4231MK2 (AUS)	
						< TRANSISTOR >	
				Q801	8-729-140-84	TRANSISTOR 2SC1841TP-PAFAEA	
				Q811	8-729-900-36	TRANSISTOR BA1F4M-TP	
				Q812	8-729-620-05	TRANSISTOR 2SC2603TP-EF	
				Q851	8-729-140-84	TRANSISTOR 2SC1841TP-PAFAEA	
						< RESISTOR >	
C601	1-124-584-00	ELECT	100uF 20% 10V	R631	1-216-029-00	METAL CHIP	150 5% 1/10W
C602	1-165-319-11	CERAMIC CHIP	0.1uF 50V	R632	1-216-025-91	RES,CHIP	100 5% 1/10W
C603	1-126-157-11	ELECT	10uF 20% 16V	R647	1-216-033-00	METAL CHIP	220 5% 1/10W
C604	1-165-319-11	CERAMIC CHIP	0.1uF 50V	R656	1-216-033-00	METAL CHIP	220 5% 1/10W
C605	1-165-319-11	CERAMIC CHIP	0.1uF 50V	R657	1-216-035-00	METAL CHIP	270 5% 1/10W
C801	1-128-582-11	ELECT	10uF 20% 100V	R658	1-216-039-00	METAL CHIP	390 5% 1/10W
C802	1-163-007-11	CERAMIC CHIP	680PF 10% 50V	R659	1-216-041-00	METAL CHIP	470 5% 1/10W
C803	1-163-001-11	CERAMIC CHIP	220PF 10% 50V	R801	1-216-049-91	RES,CHIP	1K 5% 1/10W
C804	1-126-967-11	ELECT	47uF 20% 50V	R802	1-216-089-91	RES,CHIP	47K 5% 1/10W
C806	1-126-967-11	ELECT	47uF 20% 50V	R803	1-216-041-00	METAL CHIP	470 5% 1/10W
C807	1-128-560-11	ELECT	22uF 20% 100V	R804	1-216-089-91	RES,CHIP	47K 5% 1/10W
C809	1-128-560-11	ELECT	22uF 20% 100V	R805	1-249-425-11	CARBON	4.7K 5% 1/4W F
C810	1-163-038-91	CERAMIC CHIP	0.1uF 25V	R806	1-249-425-11	CARBON	4.7K 5% 1/4W F
C811	1-136-163-00	FILM	0.068uF 5% 50V	△ R807	1-212-881-11	FUSIBLE	100 5% 1/4W F
C812	1-136-163-00	FILM	0.068uF 5% 50V	R808	1-220-893-11	METAL	0.22 10% 5W
C821	1-106-220-00	MYLAR	0.1uF 5% 100V	R809	1-260-076-11	CARBON	10 5% 1/2W
C822	1-109-973-11	ELECT(BLOCK)	4700uF 20% 63V (US,CND)	R811	1-216-049-91	RES,CHIP	1K 5% 1/10W
C822	1-117-750-11	ELECT	3300uF 20% 63V (AUS)	R812	1-216-077-00	METAL CHIP	15K 5% 1/10W
C823	1-126-925-11	ELECT	470uF 20% 10V	R813	1-216-097-91	RES,CHIP	100K 5% 1/10W
C851	1-128-582-11	ELECT	10uF 20% 100V	R815	1-247-843-11	CARBON	3.3K 5% 1/4W
C852	1-163-007-11	CERAMIC CHIP	680PF 10% 50V	R816	1-247-843-11	CARBON	3.3K 5% 1/4W
C853	1-163-001-11	CERAMIC CHIP	220PF 10% 50V	R821	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
C854	1-126-967-11	ELECT	47uF 20% 50V	R822	1-216-109-00	METAL CHIP	330K 5% 1/10W
C856	1-126-967-11	ELECT	47uF 20% 50V	R823	1-216-073-00	METAL CHIP	10K 5% 1/10W
C857	1-128-560-11	ELECT	22uF 20% 100V	R824	1-216-073-00	METAL CHIP	10K 5% 1/10W
C861	1-136-163-00	FILM	0.068uF 5% 50V	R825	1-216-097-91	RES,CHIP	100K 5% 1/10W
C862	1-136-163-00	FILM	0.068uF 5% 50V	R826	1-216-097-91	RES,CHIP	100K 5% 1/10W
C871	1-106-220-00	MYLAR	0.1uF 5% 100V	R827	1-216-097-91	RES,CHIP	100K 5% 1/10W
C872	1-109-973-11	ELECT(BLOCK)	4700uF 20% 63V (US,CND)	R851	1-216-049-91	RES,CHIP	1K 5% 1/10W
C872	1-117-750-11	ELECT	3300uF 20% 63V (AUS)	R852	1-216-089-91	RES,CHIP	47K 5% 1/10W
				R853	1-216-041-00	METAL CHIP	470 5% 1/10W
				R854	1-216-089-91	RES,CHIP	47K 5% 1/10W
				R855	1-249-425-11	CARBON	4.7K 5% 1/4W F
				R856	1-249-425-11	CARBON	4.7K 5% 1/4W F
				△ R857	1-212-881-11	FUSIBLE	100 5% 1/4W F
				R858	1-220-893-11	METAL	0.22 10% 5W
				R859	1-260-076-11	CARBON	10 5% 1/2W
				R861	1-216-049-91	RES,CHIP	1K 5% 1/10W
				R862	1-216-077-00	METAL CHIP	15K 5% 1/10W
				R863	1-216-097-91	RES,CHIP	100K 5% 1/10W
						< THERMISTOR >	
				TH811	1-807-796-11	THERMISTOR	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SURR

Ref. No.	Part No.	Description	Remarks
*	A-4407-823-A	SURR BOARD, COMPLETE *****	
		< CAPACITOR >	
C201	1-136-165-00	FILM 0.1uF 5%	50V
C202	1-136-165-00	FILM 0.1uF 5%	50V
C203	1-126-964-11	ELECT 10uF 20%	50V
C204	1-126-964-11	ELECT 10uF 20%	50V
C205	1-126-964-11	ELECT 10uF 20%	50V
C206	1-126-964-11	ELECT 10uF 20%	50V
C207	1-126-934-11	ELECT 220uF 20%	10V
C209	1-164-159-21	CERAMIC 0.1uF	50V
C210	1-126-961-11	ELECT 2.2uF 20%	50V
C211	1-126-934-11	ELECT 220uF 20%	10V
C212	1-126-961-11	ELECT 2.2uF 20%	50V
C213	1-126-964-11	ELECT 10uF 20%	50V
C214	1-126-964-11	ELECT 10uF 20%	50V
C215	1-126-934-11	ELECT 220uF 20%	10V
C216	1-136-165-00	FILM 0.1uF 5%	50V
C217	1-136-165-00	FILM 0.1uF 5%	50V
C218	1-126-160-11	ELECT 1uF 20%	50V
C219	1-126-961-11	ELECT 2.2uF 20%	50V
C220	1-126-160-11	ELECT 1uF 20%	50V
C221	1-136-165-00	FILM 0.1uF 5%	50V
C222	1-126-961-11	ELECT 2.2uF 20%	50V
C223	1-124-252-00	ELECT 0.33uF 20%	50V
C224	1-126-959-11	ELECT 0.47uF 20%	50V
C225	1-136-164-00	FILM 0.082uF 5%	50V
C226	1-130-477-00	MYLAR 0.0033uF 5%	50V
C227	1-136-164-00	FILM 0.082uF 5%	50V
C228	1-164-159-21	CERAMIC 0.1uF	50V
C229	1-126-934-11	ELECT 220uF 20%	10V
C230	1-130-469-00	MYLAR 680PF 5%	50V
C231	1-136-161-00	FILM 0.047uF 5%	50V
C232	1-136-157-00	FILM 0.022uF 5%	50V
C233	1-136-173-00	FILM 0.47uF 5%	50V
C234	1-126-967-11	ELECT 47uF 20%	16V
C235	1-126-961-11	ELECT 2.2uF 20%	50V
C236	1-126-961-11	ELECT 2.2uF 20%	50V
C237	1-136-165-00	FILM 0.1uF 5%	50V
C238	1-136-165-00	FILM 0.1uF 5%	50V
C239	1-126-959-11	ELECT 0.47uF 20%	50V
C240	1-126-963-11	ELECT 4.7uF 20%	50V
C241	1-126-959-11	ELECT 0.47uF 20%	50V
C242	1-126-963-11	ELECT 4.7uF 20%	50V
C243	1-136-167-00	FILM 0.15uF 5%	50V
C244	1-126-962-11	ELECT 3.3uF 20%	50V
C245	1-136-167-00	FILM 0.15uF 5%	50V
C246	1-136-167-00	FILM 0.15uF 5%	50V
C247	1-126-962-11	ELECT 3.3uF 20%	50V
C248	1-136-167-00	FILM 0.15uF 5%	50V
C249	1-126-963-11	ELECT 4.7uF 20%	50V
C250	1-126-959-11	ELECT 0.47uF 20%	50V
C251	1-126-963-11	ELECT 4.7uF 20%	50V
C252	1-126-959-11	ELECT 0.47uF 20%	50V
C253	1-164-159-21	CERAMIC 0.1uF	50V
C254	1-124-903-11	ELECT 1uF 20%	50V
C255	1-124-903-11	ELECT 1uF 20%	50V
C256	1-124-903-11	ELECT 1uF 20%	50V

Ref. No.	Part No.	Description	Remarks
C298	1-126-935-11	ELECT 470uF 20%	16V
C299	1-137-198-11	CERAMIC 1uF 5%	50V
C831	1-126-963-11	ELECT 4.7uF 20%	50V
C832	1-162-292-31	CERAMIC 680PF 10%	50V
C833	1-162-286-21	CERAMIC 220PF 10%	50V
C834	1-126-967-11	ELECT 47uF 20%	50V
C836	1-126-967-11	ELECT 47uF 20%	50V
C837	1-126-968-11	ELECT 100uF 20%	50V
C839	1-126-965-11	ELECT 22uF 20%	50V
C841	1-136-163-00	FILM 0.068uF 5%	50V
C842	1-136-163-00	FILM 0.068uF 5%	50V
C845	1-104-664-11	ELECT 47uF 20%	25V
C846	1-162-294-31	CERAMIC 0.001uF 10%	50V
C881	1-126-963-11	ELECT 4.7uF 20%	50V
C882	1-162-292-31	CERAMIC 680PF 10%	50V
C883	1-162-286-21	CERAMIC 220PF 10%	50V
C884	1-126-967-11	ELECT 47uF 20%	50V
C886	1-126-967-11	ELECT 47uF 20%	50V
C887	1-126-968-11	ELECT 100uF 20%	50V
C891	1-136-163-00	FILM 0.068uF 5%	50V
C892	1-136-163-00	FILM 0.068uF 5%	50V
		< CONNECTOR >	
* CN201	1-568-935-11	PIN, CONNECTOR 8P	
* CN202	1-568-954-11	PIN, CONNECTOR 5P	
* CN831	1-564-509-11	PLUG, CONNECTOR 6P	
* CN832	1-564-507-11	PLUG, CONNECTOR 4P	
		< DIODE >	
D863	8-719-991-33	DIODE 1SS133T-77	
		< IC >	
IC201	8-759-526-39	IC LV1041M	
IC831	8-749-900-96	IC STK-4142MK2	
		< COIL >	
L241	1-410-521-11	INDUCTOR 100uH	
		< TRANSISTOR >	
Q291	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q292	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q831	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q834	8-729-119-78	TRANSISTOR 2SC403SP-51	
Q881	8-729-119-76	TRANSISTOR 2SA1175-HFE	
		< RESISTOR >	
R201	1-247-863-91	CARBON 22K 5%	1/4W
R202	1-247-863-91	CARBON 22K 5%	1/4W
R203	1-249-436-11	CARBON 39K 5%	1/4W
R204	1-247-903-00	CARBON 1M 5%	1/4W
R205	1-247-815-91	CARBON 220 5%	1/4W F
R206	1-247-807-31	CARBON 100 5%	1/4W
R207	1-247-807-31	CARBON 100 5%	1/4W
R208	1-247-807-31	CARBON 100 5%	1/4W
R209	1-247-807-31	CARBON 100 5%	1/4W
R257	1-249-417-11	CARBON 1K 5%	1/4W F

SURR

SW/POWER

TABLE SENSOR

TRANS

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R258	1-249-417-11	CARBON	1K	5%	1/4W F			< SWITCH >			
R259	1-249-437-11	CARBON	47K	5%	1/4W						
R260	1-249-437-11	CARBON	47K	5%	1/4W	S624	1-762-875-21	SWITCH, KEYBOARD(PRO LOGIC)			
R261	1-249-429-11	CARBON	10K	5%	1/4W	S625	1-762-875-21	SWITCH, KEYBOARD(POWER)			
R262	1-249-429-11	CARBON	10K	5%	1/4W	S626	1-762-875-21	SWITCH, KEYBOARD(HI-SPEED DUBBING)			
						S627	1-762-875-21	SWITCH, KEYBOARD(CD SYNCHRO)			
R263	1-249-437-11	CARBON	47K	5%	1/4W	S628	1-762-875-21	SWITCH, KEYBOARD(REC)			
R264	1-249-437-11	CARBON	47K	5%	1/4W						
R831	1-249-417-11	CARBON	1K	5%	1/4WF	S629	1-762-875-21	SWITCH, KEYBOARD(PAUSE)			
R832	1-249-437-11	CARBON	47K	5%	1/4W	*****					
R833	1-249-413-11	CARBON	470	5%	1/4W F	*	1-663-971-11	TABLE SENSOR BOARD			

R834	1-249-437-11	CARBON	47K	5%	1/4W						
R835	1-249-425-11	CARBON	4.7K	5%	1/4W F			< CONNECTOR >			
R836	1-249-425-11	CARBON	4.7K	5%	1/4W F						
R837	1-212-881-11	FUSIBLE	100	5%	1/4W F						
△ R838	1-220-755-11	METAL	0.22	10%	2W	* CN51	1-568-944-11	PIN, CONNECTOR 6P			
						CN52	1-506-481-11	PIN, CONNECTOR 2P			
R839	1-247-791-91	CARBON	22	5%	1/4W						
R840	1-247-791-91	CARBON	22	5%	1/4W			< IC >			
R841	1-249-441-11	CARBON	100K	5%	1/4W						
R842	1-249-441-11	CARBON	100K	5%	1/4W	IC51	8-749-924-18	IC PHOTO INTERRUPTER RPI-1391			
R843	1-249-441-11	CARBON	100K	5%	1/4W	IC52	8-749-924-18	IC PHOTO INTERRUPTER RPI-1391			
						IC53	8-749-924-18	IC PHOTO INTERRUPTER RPI-1391			
R844	1-249-421-11	CARBON	2.2K	5%	1/4W F						
R845	1-249-421-11	CARBON	2.2K	5%	1/4W F			< RESISTOR >			
R846	1-249-421-11	CARBON	2.2K	5%	1/4W F						
R847	1-249-421-11	CARBON	2.2K	5%	1/4W F	R51	1-249-416-11	CARBON	820	5%	1/4W F
R849	1-249-425-11	CARBON	4.7K	5%	1/4W F	R52	1-249-416-11	CARBON	820	5%	1/4W F
						R53	1-249-416-11	CARBON	820	5%	1/4W F
R850	1-249-425-11	CARBON	4.7K	5%	1/4W F	*****					
R881	1-249-417-11	CARBON	1K	5%	1/4W F						
R882	1-249-437-11	CARBON	47K	5%	1/4W		1-674-313-11	TRANS BOARD			
R883	1-249-413-11	CARBON	470	5%	1/4W F			*****			
R884	1-249-437-11	CARBON	47K	5%	1/4W						
R885	1-249-425-11	CARBON	4.7K	5%	1/4W F			< CONNECTOR >			
R886	1-249-425-11	CARBON	4.7K	5%	1/4W F						
△ R887	1-212-881-11	FUSIBLE	100	5%	1/4W F	CN991	1-564-321-00	PIN, CONNECTOR 2P			
△ R888	1-220-755-11	METAL	0.22	10%	2W	* CN992	1-564-518-11	PLUG, CONNECTOR 3P			
R889	1-247-791-91	CARBON	22	5%	1/4W	* CN993	1-564-522-11	PLUG, CONNECTOR 7P			
R890	1-247-791-91	CARBON	22	5%	1/4W			< FUSE >			
R891	1-249-441-11	CARBON	100K	5%	1/4W						
R892	1-249-441-11	CARBON	100K	5%	1/4W	△ F992	1-533-310-11	FUSE GRASS CYLINDRICAL (DIA.5)			
R893	1-249-441-11	CARBON	100K	5%	1/4W			6.3A/125V (US,CND)			
R894	1-249-429-11	CARBON	10K	5%	1/4W	△ F993	1-532-506-51	FUSE 6.3A/250V (AUS)			
						△ F994	1-532-506-51	FUSE 6.3A/250V (AUS)			
R895	1-249-427-11	CARBON	6.8K	5%	1/4W F						
R896	1-247-862-11	CARBON	20K	5%	1/4W			< RESISTOR >			
R899	1-249-425-11	CARBON	4.7K	5%	1/4W F						
R900	1-249-425-11	CARBON	4.7K	5%	1/4W F	△ R991	1-219-119-81	FUSIBLE	0.1	5%	1/4W F
						△ R992	1-219-119-81	FUSIBLE	0.1	5%	1/4W F
						△ R993	1-219-119-81	FUSIBLE	0.1	5%	1/4W F
						△ R994	1-219-119-81	FUSIBLE	0.1	5%	1/4W F
						△ R995	1-202-725-00	SOLID	3.3M	10%	1/2W

								< TRANSFORMER >			
	1-674-312-11	SW/POWER BOARD				△ T991	1-431-840-21	TRANSFORMER, POWER (US)			
		*****				△ T991	1-431-841-21	TRANSFORMER, POWER (CND)			
		< LED >				△ T991	1-431-842-21	TRANSFORMER, POWER (AUS)			

D617	8-719-074-80	LED	MVR3864X-J300K (REC)								
D618	8-719-074-82	LED	MAY3864X-J300K (PAUSE)								
D627	8-719-074-80	LED	MVR3864X-J300K (PRO LOGIC)								

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS	

5	A-4424-239-A	TUNER UNIT (US, CND)	
5	A-4424-240-A	TUNER UNIT (AUS)	
6	1-769-972-11	WIRE (FLAT TYPE) (13 CORE)	
8	1-765-332-11	WIRE (FLAT TYPE) (15 CORE)	
9	1-773-055-11	WIRE (FLAT TYPE) (17 CORE)	
70	1-769-920-11	WIRE (FLAT TYPE) (9 CORE)	
110	1-782-558-21	WIRE (FLAT TYPE) (16 CORE)	
111	1-782-559-21	WIRE (FLAT TYPE) (9 CORE)	
△ 114	1-783-531-11	CORD, POWER (US,CND)	
△ 114	1-775-790-31	CORD, POWER (AUS)	
322	1-777-874-11	WIRE (FLAT TYPE) (16 CORE)	
△ 401	8-848-379-31	OPTICAL PICK-UP KSS-213BFN/C2NP	
FAN101	1-698-792-11	FAN, DC	
HP101	A-2056-681-B	DECK (A) ASSY, HEAD(230AWR2)	
HP101	A-2056-683-B	DECK (A) ASSY, HEAD(230PWR2)	
HRPE10	A-2056-682-B	DECK (B) ASSY, HEAD(230AWR2)	
HRPE101A	A-2056-684-B	DECK (B) ASSY, HEAD(230PWR2)	
M1	A-2004-628-A	MOTOR ASSY, CAPSTAN	
M61	X-4948-434-1	MOTOR ASSY (LOADING)	
M62	X-4948-434-1	MOTOR ASSY (TABLE)	
M101	X-2646-110-1	T, T CHASSIS ASSY (MG) (F) (SPINDLE)	
M102	X-2625-769-1	MOTOR GEAR ASSY (MB) (RP) (SLED)	
△ T991	1-431-840-21	TRANSFORMER, POWER (US)	
△ T991	1-431-841-21	TRANSFORMER, POWER (CND)	
△ T991	1-431-842-21	TRANSFORMER, POWER (AUS)	

Ref. No.	Part No.	Description	Remarks

		HARDWARE LIST	

#1	7-685-646-79	SCREW +BVTP 3 × 8 TYPE2 N-S	
#2	7-685-872-09	SCREW +BVTT 3 × 8 (S)	
#3	7-685-871-01	SCREW +BVTT 3 × 6 (S)	
#4	7-685-650-79	SCREW +BVTP 3 × 16 TYPE2 IT-3	
#5	7-685-873-09	SCREW +BVTT 3 × 10 (S)	
#6	7-685-875-09	SCREW +BVTT 3 × 14 (S)	
#8	7-685-852-04	SCREW +BVTT 2 × 5 (S)	
#9	7-685-851-04	SCREW +BVTT 2 × 4 (S)	
#10	7-685-534-19	SCREW +BTP 2.6 × 8 TYPE2 N-S	
#11	7-628-254-15	SCREW +PS 2.6 × 6	
#12	7-628-254-50	SCREW +PS 2.6 × 16	
#14	7-685-132-19	SCREW +BTP 2.6 × 5 TYPE2 N-S	
#15	7-685-107-11	SCREW +P 2 × 12 TYPE2 NON-SLIT	
#16	7-685-535-19	SCREW +BTP 2.6 × 10 TYPE2 N-S	
#17	7-685-134-19	SCREW (+ PTPWH) (2.6 × 8)	
#18	7-685-103-19	+PTPWH (2 × 5)	
#19	7-627-553-17	SCREW,PRECISION +P 2 × 2	
#20	7-685-902-11	SCREW +PWH 2.6 × 6	
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified. Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.			

MEMO

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]